



4000 V2 Optical Test Platform

**Modular Test Platform
designed for the installation,
turn-up and maintenance of
fiber optic networks**

User Manual

4000 V2 Optical Test Platform

**Modular Test Platform designed for
the installation, turn-up and
maintenance of fiber optic networks**

User Manual



Viavi Solutions
1-844-GO-VIAVI
www.viavisolutions.com

Notice

Every effort was made to ensure that the information in this document was accurate at the time of printing. However, information is subject to change without notice, and VIAVI reserves the right to provide an addendum to this document with information not available at the time that this document was created.

Copyright

© Copyright 2022 VIAVI, LLC. All rights reserved. VIAVI, Enabling Broadband and Optical Innovation, and its logo are trademarks of VIAVI, LLC. All other trademarks and registered trademarks are the property of their respective owners. No part of this guide may be reproduced or transmitted electronically or otherwise without written permission of the publisher.

Trademarks

VIAVI and 4000 V2 Platform are trademarks or registered trademarks of VIAVI in the United States and/or other countries.

Microsoft, Windows, Windows CE, Windows NT, and Microsoft Internet Explorer are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Netscape Navigator is a trademark or registered trademark of Netscape Communications Corporation in the United States and other countries.

Ordering information

This guide is a product of VIAVI's Technical Information Development Department, issued as part of the User Manual.

Product Regulatory Compliance

California Proposition 65

California Proposition 65, officially known as the Safe Drinking Water and Toxic Enforcement Act of 1986, was enacted in November 1986 with the aim of protecting individuals

in the state of California and the state's drinking water and environment from excessive exposure to chemicals known to the state to cause cancer, birth defects or other reproductive harm.

For the VIAVI position statement on the use of Proposition 65 chemicals in VIAVI products, see the Hazardous Substance Control section of VIAVI's Standards and Policies web page.

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

EU WEEE and Battery Directives

This product, and the batteries used to power the product, should not be disposed of as unsorted municipal waste and should be collected separately and disposed of according to your national regulations.

VIAVI has established a take-back processes in compliance with the EU Waste Electrical and Electronic Equipment (WEEE) Directive, 2012/19/EU, and the EU Battery Directive, 2006/66/EC.

Instructions for returning waste equipment and batteries to JDSU can be found in the WEEE section of [VIAVI's Standards and Policies](#) web page.

If you have questions concerning disposal of your equipment or batteries, contact VIAVI's WEEE Program Management team at WEEE.EMEA@VIAVISolutions.com.

EU REACH

Article 33 of EU REACH regulation (EC) No 1907/2006 requires article suppliers to provide information if a listed Substances of Very High Concern (SVHC) is present in an article above a certain threshold.

For information on the presence of REACH SVHCs in VIAVI products, see the Hazardous Substance Control section of [VIAVI's Standards and Policies](#) web page.

EU CE Marking Directives (LV, EMC, RoHS, RE)

This product conforms with all applicable CE marking directives. Please see EU Declaration of Conformity for details.



Contents

About This Guide	xix
Purpose and scope	xx
Assumptions.....	xx
Technical assistance	xx
Recycling Information	xx
Conventions	xxi
Chapter 1 Safety information	1
AC/DC and battery important safety instructions.....	2
Precautions relating to optical connections	3
Laser safety	3
Laser classes.....	3
Warning labels for the laser classes.....	4
Chapter 2 4000 V2 Platform Overview	5
Unpacking the instrument.....	6
About the 4000 V2 Platform.....	6
Main features.....	7
Hard keys and Indicators	9
Front panel tactile and hard keys	9
Front panel indicators.....	10
Power Supply.....	10

Chapter 3	Starting up	13
Fitting and removing a module.....		14
Fitting a module.....		14
Removing a module.....		15
Setting the 4000 V2 Platform into the glove.....		15
Charging the battery		16
Connecting the mains adapter		16
First use of the battery		16
Charging		17
Battery charge level display		17
Switching the 4000 V2 Platform on and off.....		18
Switching on the 4000 V2 Platform.....		18
Switching off the 4000 V2 Platform		18
Resetting the 4000 V2 Platform.....		19
First start: configuring your regional settings		19
Chapter 4	Configuring the 4000 V2 Platform	21
Displaying the System Settings screen.....		22
Defining the screen parameters of the 4000 V2 Platform		23
Backlight.....		23
Contrast.....		23
Screen Saver		24
Defining the «Utility» parameters		24
Defining the Automatic shutdown of the 4000 V2 Platform		24
Defining the Storage Limit		24
Chapter 5	Power meter, VFL (Visual Fault Locator) & Talkset	25
Connection to the power meter, VFL and Talkset		26
Configuring the Power meter.....		26
Configuring the Measurement parameters		26
Configuring the alarm parameters		28
Configuring the Link Description parameters		28
Configuring the Report parameters		30

Activating the Source function	33
LTS Results page	33
Result page of the Power meter	33
Table of results	33
Keys of the power meter	34
Combo PM/OTDR	35
Performing a power level measurement	35
Performing an insertion loss measurement	35
Setting the zero value of the power meter	35
Performing a reference	36
Measurements on the fiber under test	37
Storing and reloading results	38
Report Setup	38
Storing results	38
Loading results	38
VFL Function	39
VFL connector	39
Visual Fault Locator function (VFL)	39
Talkset and Datalink Functions	40
Talkset configuration	41
Connections	41
Establishing communication	42
Remote screen function via Optical Datalink	43
Establishing communication	43
Adjusting volume level	43
End of a VNC session	44
Disconnection	44
Chapter 6 Scope	45
Scope feature	46
Overview	46
Installation of tips	47
Configuring the Scope	47
P5000i Scope connection	47

FiberChek Scope connection 48
 WIFI Connection 48
 USB Connection 49
Configuring the Scope 49
 Analysis 50
 Link 51
 File 52
Managing scope profiles 55
 Defining the profiles available on the Setup screen 55
 Importing a profile to the Scope application 56
About page 56
Starting up with the scope 57
 Freeze mode 58
 High Mag. / Low Mag. 58
 Live mode 58
Launching a test of the connector and fiber end-face..... 59
 Launching a test of the connector and fiber end-face 59
 Mosaic Mode 60
 Loading a picture 62
File menu 63
 Saving the test result in a jpg file and / or in a report 63
 Display of the report 63

Chapter 7 Connectivity 65

Establishing connection 66
 Via Bluetooth 66
 Pairing the Platform with a device 66
 Searching new devices to be paired with the Platform 68
 Removing the Pairing 69
 Via Wifi 69
 Configuring the WIFI access..... 69
 Connection to SSID 71
 Configuring the WIFI mode to which the Platform is connected .71
 Creating a network from the 4000 V2 Platform 72

Via Ethernet	73
Connecting the 4000 V2 Platform and the PC	73
Configuring the 4000 V2 Platform via Ethernet	74
Via Cloud Storage	76
Principle and prerequisites of the Cloud Storage	76
Configuring and connecting to Cloud Storage on the 4000 V2 Platform	76
Remote Control	78
Smart Access Anywhere	78
Connection modes	78
Pre-requisite for using the Smart Access Anywhere Application	81
Downloading the VIAVI application on PC	81
Downloading the VIAVI application on Tablet/Smartphone	82
Launching the SmartAccess Anywhere application	83
Using Remote screen and File Transfer applications	85
Working with files and directories on 4000 V2 Platform	89
Connection information and settings	89
M2M Link option	92
Data Transfer	95
Transferring files via Bluetooth	95
Transferring files to/from a PC via WIFI or Ethernet	96
Transferring files using Cloud Storage	97
VNC	98
Transferring the interface on a PC via WIFI or Ethernet	99
Virtual control buttons bar	100
Equivalence between the keyboard and 4000 V2 Platform	101
Stratasync	102
Principle and prerequisites of the Stratasync	102
Configuring and synchronizing the 4000 V2 Platform	103
Connecting the 4000 V2 Platform to Stratasync	104
GPS option	104
Chapter 8 Applications	109
PDF Reader	110
Interacting with a PDF document	110
Text Editor	111

Text Editor page	111
Saving the text in a file	111
Calculator	112
File Explorer	113

Chapter 9 Job Manager option 115

Principle of the Job Manager	116
Creating a test plan and loading it on the Platform	117
Pre-requisites	117
Creating a test plan	117
Job Information	118
Configuring the Test Plan	118
Adding the multiple tests plan to Job manager	129
Saving the Job Manager file and loading it on Platform	131
Loading the json file on the Platform Job Manager	131
Modifying the Job Information from Platform	133
Performing tests and generating reports	134
Launching the test from Test Plan	134
Tests Results in Job Manager	136
Displaying the Test Reports	137
Other functions on Job Manager screen	137
Summary Report	137
Synchronization with Stratasync	138

Chapter 10 File management 139

File Explorer Overview	140
Directories and Files selections	140
Directory selection	140
Files selection	141
Directories & Files editing functions	141
Copy/Cut & Paste files/directories	141
Renaming a directory / file	142
Deleting a directory / file	142

Working with directories / files from the explorer	143
Creating a directory	143
Opening files	143
File Types	143
Creating a screenshot	144
Taking a screenshot	144
Name of the screenshots files	145
Merging pdf or txt files	145
Storage media	146
Storage media built into the 4000 V2 Platform	147
External USB storage media	147
USB memory stick connection	147
USB memory stick disconnection	147
Abbreviations for storage media	148
Chapter 11 Technical specifications	149
Display	150
Indoor/Outdoor	150
Memory	150
Input/Output	150
Power supply	151
Battery	151
Mains adapters	152
Dimensions - Weight	152
Environment	153
Temperature	153
Humidity	153
Pollution degree	153
EMI/ESD	154
Overvoltage	154
Drop test	154
Shocks	154
Bumps	154
Vibration	154
Flammability	155

IP Protection Index.....155

Characteristics of the options.....155

 Power meter option.....155

 Talkset option.....156

 VFL option.....156

 WIFI and Bluetooth Options.....156

Chapter 12 Options and accessories 157

References of options for the 4000 V2 Platform mainframe.....158

Reference of Scope.....161

References of accessories.....161

References of manuals.....161

References of result processing software.....162

Chapter 13 Maintenance & Troubleshooting 163

Maintenance procedure.....164

 Cleaning.....164

 Cleaning plates and housings.....164

 Cleaning the screen.....164

 Cleaning the optical cable connector.....165

 Cleaning the optical connections of the 4000 V2 Platform.....165

 Accessing to the 4000 V2 Platform information.....165

 General page.....165

 Software options page.....166

 Services Data page.....167

 Accessing to the 4000 V2 Platform documentation.....167

 Installing a new version of the software.....168

 Downloading from Internet.....168

 Installation from VIAVI Server.....169

 Installation from another server.....170

 Installation from a USB memory stick.....171

 Launching the upgrade.....172

 Checking new upgrade on VIAVI Server.....173

Install Software License	173
Install options from VIAVI Server	174
Enter Manually the License	175
Import the license from the USB memory stick	176
Locking the 4000 V2 Platform	177
Returning an instrument	179
Guarantee conditions	179
Recycling Information	179
Troubleshooting	180
Interpreting alarms	180
Formatting the USB memory stick onto the 4000 V2 Platform	181
Erase disk	181
Changing the battery	181
Accessing to the damaged battery	182
Installing a new battery	182
General information on warranty	183
Hardware Warranty	183
Warranty disclaimer	184
Index	185



About This Guide

The 4000 V2 Platform of VIAVI provides a portable, modular platform designed for the installation, turn-up and maintenance of fiber optic networks.

The topics discussed in this chapter are as follows:

- [“Purpose and scope” on page xx](#)
- [“Assumptions” on page xx](#)
- [“Technical assistance” on page xx](#)
- [“Recycling Information” on page xx](#)
- [“Conventions” on page xxi](#)

Purpose and scope

The purpose of this guide is to help you successfully use the 4000 V2 Platform features and capabilities. This guide includes task-based instructions that describe how to install, configure, use, and troubleshoot the 4000 V2 Platform.

Additionally, this guide provides a complete description of VIAVI's warranty, services, and repair information, including terms and conditions of the licensing agreement.

Assumptions

This guide is intended for novice, intermediate, and experienced users who want to use the 4000 V2 Platform effectively and efficiently. We are assuming that you have basic computer and mouse/track ball experience and are familiar with basic telecommunication concepts and terminology.

Technical assistance

If you require technical assistance, call 1-844-GO-VIAVI. For the latest TAC information, go to <http://www.viavisolutions.com/en/services-and-support/support/technical-assistance>.

Recycling Information

VIAVI recommends that customers dispose of their instruments and peripherals in an environmentally sound manner. Potential methods include reuse of parts or whole products and recycling of products components, and/or materials.

Waste Electrical and electronic Equipment (WEEE) Directive



In the European Union, this label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

Conventions

This guide uses naming conventions and symbols, as described in the following tables.

Table 1 Typographical conventions

Description	Example
User interface actions appear in this typeface .	On the Status bar, click Start .
Buttons or switches that you press on a unit appear in this TYPEFACE .	Press the ON switch
Code and output messages appear in this <code>typeface</code> .	All results okay
Text you must type exactly as shown appears in this <code>typeface</code> .	Type: a : \set.exe in the dialog box
Variables appear in this <i>typeface</i> .	Type the new <i>hostname</i> .
Book references appear in this <i>typeface</i>	Refer to <i>Newton's Telecom Dictionary</i>
A vertical bar means "or": only one option can appear in a single command.	platform [a b e]
Square brackets [] indicate an optional argument.	login [platform name]
Slanted brackets < > group required arguments.	<password>

Table 2 Keyboard and menu conventions

Description	Example
A plus sign + indicates simultaneous keystrokes.	Press Ctrl+s
A comma indicates consecutive key strokes.	Press Alt+f,s
A slanted bracket indicates choosing a submenu from menu.	On the menu bar, click Start > Program Files .

Table 3 Symbol conventions



This symbol represents a general hazard.

 


This symbol represents a risk of electrical shock.



NOTE

This symbol represents a Note indicating related information or tip.



This symbol, located on the equipment or its packaging indicates that the equipment must not be disposed of in a land-fill site or as municipal waste, and should be disposed of according to your national regulations.

Table 4 Safety definitions



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Safety information

This chapter gives the main information on the safety conditions when using the 4000 V2 Platform

- [“AC/DC and battery important safety instructions” on page 2](#)
- [“Precautions relating to optical connections” on page 3](#)
- [“Laser safety” on page 3](#)

AC/DC and battery important safety instructions



In conformance with the recommendations of standard EN 61010, the instrument should be operated within the manufacturer's guidelines. Failure to do so may compromise the protection offered by the instruments design.

The 4000 V2 Platform is supplied with a Lithium Ion rechargeable battery.



Do not use any mains adapter or battery other than those supplied with the instrument, or supplied by VIAVI as an option for this instrument.

- Batteries supplied by VIAVI incorporate protection means.

If another adapter or battery is used, it may damage the 4000 V2 Platform itself. Using the product with batteries other than those supplied by the manufacturer of the 4000 V2 Platform may entail risks of fire or explosion.

The battery may explode, leak or catch fire:

- if it is exposed to high temperature or fire
- if it is opened or dismantled.
- The Lithium Ion battery is designed for maximum safety. In particular, each cell is provided with a safety valve to prevent excessive internal pressure in the event of overcharging or exposure to very high temperatures.
- If you do not intend to use the platform for several weeks, it is advisable to remove the battery in order to prolong its useful life, and to recharge it fully before using it again.
- In case of communication problems with the battery, informed to the user, the battery charging information is no more actualized.
Restart the equipment to restore the communication with battery.

Other basic safety precautions are as follows:

- Do not use AC/Adapter/Charger outdoors or in wet or damp locations
- Connect the AC/Adapter/Charger to the correct mains voltage, as indicated on the ratings label.
- Do not allow anything to rest on the power cord, and do not locate the product where people can walk on the power cord.
- Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

- Do not use this product in the vicinity of a gas leak or in any explosive environment.
- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous, high voltage points and other hazards. Contact qualified service personnel for all service.

Precautions relating to optical connections

- The normal operating life of an optical connector is usually of the order of a few hundred manipulations. It is then advisable to manipulate the optical connections of the Platform as rarely as possible.
- The proper operation of the instrument and its accuracy of measurement are dependent on the cleanliness of the environment and the optical connectors as well as the care taken in its manipulation.
- The optical connectors must therefore be clean and dust-free. If the optical connection is not being used, protect the connections of 4000 V2 Platform using the protective caps.

As an example, the results of measurements made with connectors that have not been cleaned will display an error of the order of 10% for all measurements. This error is additional to other errors inherent in the measurement process and due, for example, to the quality of the fiber (circularity and concentricity), the means of connection (axis alignment, distance between fiber faces, quality of fiber faces) and propagation modes.

Laser safety

The provisions contained in two standards define the safety procedures to be observed both by users and by manufacturers when utilizing laser products:

- IEC 60825-1:2014 - Safety of laser products – Part 1: Classification of products, requirements and user guidelines.
- FDA 21 CFR § 1040.10 - Performance standards for light-emitting products - Laser products.

Due to the range of possible wavelengths, power values and injection characteristics of a laser beam, the risks inherent in its usage vary. The laser classes form groups representing different safety thresholds.





Laser classes

Standards IEC 60825-1:2014 and FDA21CFR§1040.10:

- VFL option: Class 2

Warning labels for the laser classes

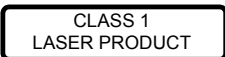Due to the reduced dimensions of the optical modules, it is not possible to attach the required warning labels to them. In line with the provisions of Article 7.1 of the IEC 60825-1:2014 standard, the laser class identification labels are shown below:

Reference standard	IEC 60825-1:2014	FDA21CFR§1040.10
Class 1	 CLASS 1 LASER PRODUCT	
Class 1M	 LASER RADIATION DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS CLASS 1M LASER PRODUCT	
Class 2	 LASER RADIATION DO NOT STARE INTO BEAM CLASS 2 LASER PRODUCT	 CAUTION LASER RADIATION - DO NOT STARE INTO BEAM CLASS II LASER PRODUCT

The user must take the necessary precautions concerning the optical output of the instrument and follow the manufacturer's instructions.



Measurements on optical fibers are difficult to execute and the precision of the results obtained depends largely on the precautions taken by the user.

4000 V2 Platform Overview

This chapter provides a general description of the 4000 V2 Platform.

Topics discussed in this chapter include the following:

- [“Unpacking the instrument” on page 6](#)
- [“About the 4000 V2 Platform” on page 6](#)
- [“Main features” on page 7](#)
- [“Hard keys and Indicators” on page 9](#)
- [“Power Supply” on page 10](#)

Unpacking the instrument

- 1 Remove the 4000 V2 Platform and its accessories from the packing case.
- 2 Check that the module and accessories ordered are all there.

If any part is missing or damaged please contact your local VIAVI agent.

The 4000 V2 Platform is delivered as standard with:

Table 1 Elements delivered on standard with the 4000 V2 Platform

A Getting Started Manual
A Li-Polymer battery, set into the equipment and which must be charged before use
A mains adapter with one power cord for a given country (configured at the time of order)

About the 4000 V2 Platform

The architecture of the 4000 V2 Platform is made of one Platform, to which one or two modules can be added to perform tests on fiber networks.

The modules that can be fitted to the 4000 V2 Platform are interchangeable in the field and different kinds of module are usable:

- OTDR Modules
- CWDM Analyzer Modules (C-OSA)

The 4000 V2 Platform employs multi-tasking for the simultaneous performance of several operations:

- acquisitions
- modifications of parameters
- trace analysis
- report management

It also allows to use simultaneously several functions:

- Power Meter
- Scope
- OTDR measurements...

Main features

The 4000 V2 Platform is equipped with the following elements:

- A 9 inches TFT color touchscreen, high visibility
- RJ45 plug for Ethernet interface
- Two USB 2.0 host connectors for Microscope, USB memory stick, mouse, keyboard...
- An audio jack to connect a headset
- A connection socket for the mains adapter providing the 12 V power supply and used to charge the battery.
- LED indicators for Charge, On status and Test
- A Li-Polymer battery
- A module interchangeable in the field: OTDR, or C-OSA.
- Built-in Power Meter, VFL and/or Talkset (options)

With the 4000 V2 Platform, the user can:

- Open and/or transfer files to a PC via a USB memory stick, USB cable or Bluetooth (option)
- Generate pdf reports
- Open all user documentations included into the 4000 V2 Platform
- Update the 4000 V2 Platform firmware
- Remote the screen of the 4000 V2 Platform onto a PC and issue commands from the keyboard of the PC
- ...

Fig. 1 4000 V2 Platform and module(s)

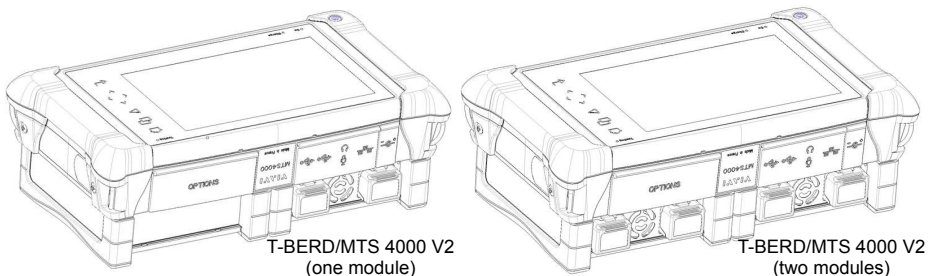


Fig. 2 4000 V2 Platform: Front view


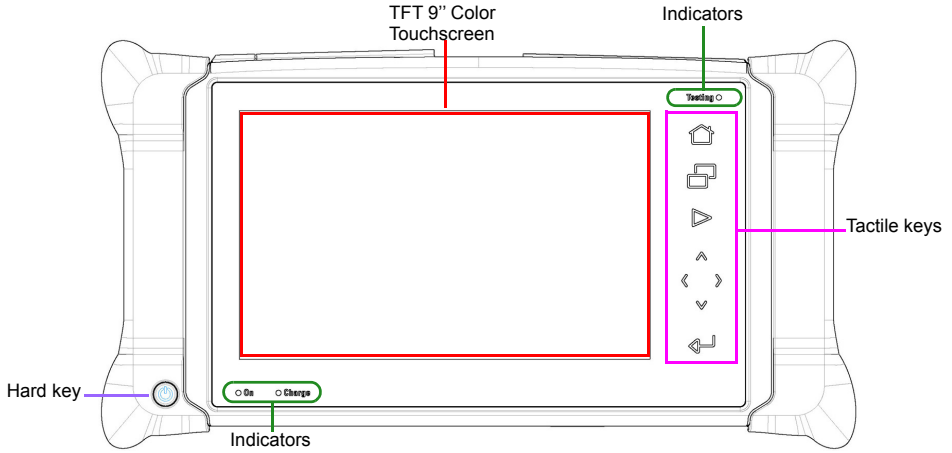



Fig. 3 4000 V2 Platform: Connectors View





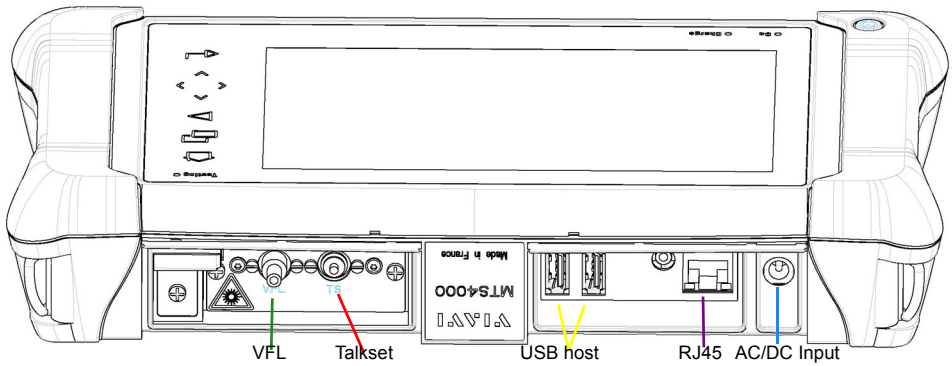



Hard keys and Indicators

Front panel tactile and hard keys

Hard key	Function
	Main on/off switch

Tactile keys

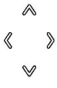	<p>The Home tactile key gives access to:</p> <ul style="list-style-type: none">• selection of the different measurement or functions• the settings of the instrument• the help page	
	<p>This button calls up the Results/Setup/File page: click once and select the page wished from the list:</p> <ul style="list-style-type: none">• In the file page, you can choose the storage medium (internal memory, USB key) and manage files; with facilities for classifying them in directories and sub-directories.• In the Setup page, you can configure the measurement . This menu depends on the function in use.• In the Results page, you can display the results page of the selected function (e.g. with OTDR module: reflectometry trace and table).	
	Starts and stops the measurement.	
	<p>Direction keys used to navigate on screen:</p> <ul style="list-style-type: none">– on the Results page, they are used to move the cursors or modify the zoom factor.– on the set-up pages, they are used to scroll through the menus, the central button serving to select or confirm the parameter chosen.	
	Validation/Enter key	



NOTE

All these functions, except **HOME**, depend on the modules used and the measurements made: refer to the user manuals of the corresponding modules of the 4000 V2 Platform.

The 6 buttons are available clicking on the upper banner of the screen.

A key **Export** is also available, allowing to generate a screenshot of the current displayed screen, in pdf,. It is saved in the directory `Report`, created automatically at screenshot generation.




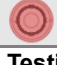

Figure 4 Buttons on the upper banner



Front panel indicators

The 4000 V2 Platform is equipped with three indicators, lit into a different color according to the status of the unit.

Table 2 Indicators Status

On indicator		
On 	<i>Blinking green</i>	The instrument, though connected to an external power source, is switched off.
On 	<i>Solid green</i>	The instrument is operating, either by battery or on an external power supply.
Charge indicator		
Charge 	<i>Solid green</i>	The instrument is connected to an external power source and the battery is fully charged.
Charge 	<i>Solid red</i>	The instrument is connected to an external power source, and the battery is on charge.
Testing indicator		
Testing 	<i>Solid red</i>	At least one function is in measurement phase (for example, the laser emission pilot for an OTDR measurement)

Power Supply

The 4000 V2 Platform may operate with

- the Li-Polymer battery, already set into the equipment on delivery.
- an AC adapter/charger, via a power cable on which has been set the correct country adaptable plug.

Fig. 5 4000 V2 Platform power supply



Starting up

This chapter explains the operations to be carried out before using the 4000 V2 Platform.

The topics discussed in this chapter are as follows:

- [“Fitting and removing a module” on page 14](#)
- [“Setting the 4000 V2 Platform into the glove” on page 15](#)
- [“Charging the battery” on page 16](#)
- [“Switching the 4000 V2 Platform on and off” on page 18](#)
- [“First start: configuring your regional settings” on page 19](#)

Fitting and removing a module




The 4000 V2 Platform must be switched off, and if it is operating on the mains, its supply cable must be unplugged.

Fitting a module

- Turn the instrument face down on the work surface.
- Set the two notches on the module part (1a) into the two holes provided for that purpose on the Base (1b).
- Make flush the 2 connections (2a & 2b), on module and base.
- Once positioned, fix the module to the base screwing the 2 screws fixing the receptacle.
- Repeat the same process for the other module if 2 small modules are to be used.

Fig. 6 Fixing the module to the base

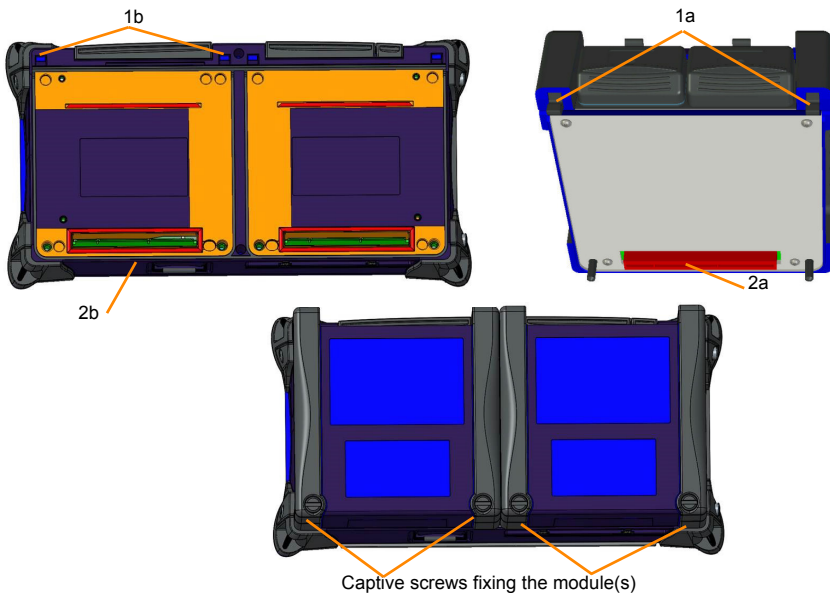

Removing a module

- 1 Unscrew the two captive fixing screws of the module completely (up to the stop).
- 2 Remove the two slots of the module from their housing onto the base.
- 3 Carefully slide the module out of its slot.

Setting the 4000 V2 Platform into the glove

The glove for the 4000 V2 Platform is furnished on option with the instrument.

This glove has been designed to fit to the equipment, and to easily get access to all the commands of the product (interface, modules, connectors).

To set the 4000 V2 Platform in the glove, take care of the sense of insertion: the screen must face the front of the glove. Refer to [Figure 7](#).

Once in the glove, the 4000 V2 Platform can be set to the «standing» position, using the stay on the back of the glove.

Fig. 7 Platform View in the glove



Charging the battery¹



CAUTION

Upon reception of the product, the battery of the 4000 V2 Platform needs to be fully recharged, no later than 6 months after the date of calibration.

If the product is unused for a long period, the battery needs also to be periodically fully recharged, with a period not longer than 12 months.

The battery supplied with the 4000 V2 Platform must be fully charged before use.

A **Lithium Ion type** battery, 6 cells or 9 cells, is installed in the battery compartment.

Connecting the mains adapter




Use only the mains adapter supplied with the 4000 V2 Platform. The adapter for some other electronic device may appear to be identical, but entails a risk of damage to the 4000 V2 Platform.

- 1 At the top of the 4000 V2 Platform, lift up the power supply socket protector and plug in the mains adapter.
- 2 Connect the adapter to the mains.
The **On** indicator lamp starts to blink in green.

First use of the battery

At the delivery, the battery is already set into the Platform, but its charge level is not «recognized» by the equipment.

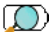The icon  is displayed on the upper banner of the screen.

To get a valid indication of the battery, and be able to use correctly the Platform:

- 1 Charge fully the battery
- 2 Once fully charged, discharge the battery by keeping the Platform switched on, but not plugged to mains.
- 3 The battery can then be charged, and the Platform used simultaneously.

1.if the 4000 V2 Platform is equipped with a battery.

Charging

If the instrument is fitted with a battery, on connection to the mains:

- if the user does not press **ON**, the battery will start the charge. In this case, the **Charge** indicator will be lit in red.
- when the user presses the **ON** key, the instrument starts up and the battery will charge during use (**Charge** indicator in solid red).

Once the battery is fully charged, the **Charge** indicator lamp is solid green.

When the **Charge** indicator is blinking red, this mean the power supply is not compatible with the battery used. Charge is disabled.





It is essential to wait until charging is complete to ensure maximum independent operating time, which may otherwise be considerably reduced.

Voltage must be superior to 14V to correctly charge the 9 cells battery (11V).

Only the 6 cells battery can be charged using the cigarette lighter adapter (provided on option). When this adapter is used with a 9 cells battery, the equipment can be used but the battery will not be charged (except if the vehicle is started).

Battery charge level display

When the battery is installed in the instrument, its charge level is displayed in the top right-hand corner of the screen and also as a charge percentage. Example: 80% .

- When the battery charge level drops below 10%, a warning is displayed next to the icon. Example: 4%  When the level becomes too low, the instrument switches off automatically after saving the current configuration.

In the table below is a summary of the battery icon according to the charge level:

Table 3 Color of the battery Icon according to charge level





Icon	Charge level
80% 	From 100% to 70%
68% 	From 70% to 40%

Table 3 Color of the battery Icon according to charge level

28% 	From 40% to 10%
4% 	From 10% to 0%

Switching the 4000 V2 Platform on and off

The mains adapter is used not only for charging the battery (if the battery is installed), but also for operating the 4000 V2 Platform on the mains, if a mains socket is at hand, to save the battery.

Switching on the 4000 V2 Platform

- 1 Press the **ON/OFF** key.
If the Platform is powered to mains, the battery will charge.
The **On** indicator pass from blinking to solid green.
The VIAVI logo appears on the screen briefly, then an auto test is carried out.
The equipment is ready to be used once all the applications are installed.



NOTE

It is possible to switch over from battery to mains operation, or vice versa, without loss of data.



The module cannot be swapped when the unit is ON or AC powered



In the event of an unexpected mains power cut, if there is no battery, the current results and configuration will not be saved. Next time the instrument is switched on, it will return to its initial configuration.

Switching off the 4000 V2 Platform

While the 4000 V2 Platform is operating, press the **ON/OFF** button to switch it off.



Disconnect the jack connector of the AC/DC power supply before disconnecting the AC/DC mains



NOTE

When the instrument is switched off using the **ON/OFF** button, current results and configuration are saved. Next time the **ON/OFF** key is pressed, they are recalled.

Resetting the 4000 V2 Platform

If the 4000 V2 Platform freezes, prolonged pressure (about 4 s.) on the **ON/OFF** key will reset the instrument.

First start: configuring your regional settings

Once the 4000 V2 Platform is switched on, the first screen displayed allows to configure the regional settings.

Those settings will be kept in memory and automatically applied on the instrument each time it is restarted.

Fig. 8 Regional Settings



- 1 Click on **Language** and select the language to be used for the equipment.

- 2 Click on **Date** and enter the current date, using the numeric keypad displayed using the menu key **Edit Number**.
- 3 Click on **Time** and enter the current time, using the numeric keyboard displayed using the menu key **Edit Number**.
The date and time are displayed on the upper right side of the screen.
- 4 Click on **UTC offset (hours)** and define the offset, using the numeric keyboard displayed using the menu key **Edit Number**.
- 5 Click on **Date Time Format** and configure the following parameters:
 - **Date format**: select one of the option **dd/mm/yy** or **mm/dd/yy**.
 - **Time format**: select one of the option **24 hour clock** or **12 hour clock**.

Once all parameters have been defined, press **Exit** menu key to return to **System Settings** page.

Configuring the 4000 V2 Platform

This chapter describes the operations for configuring the instrument.

The topics discussed in this chapter are as follows:


- [“Displaying the System Settings screen” on page 22](#)
- [“Defining the screen parameters of the 4000 V2 Platform” on page 23](#)
- [“Defining the «Utility» parameters” on page 24](#)

Displaying the System Settings screen

To display the **System Settings** screen, you must:

- 1 Press the **HOME** key to reach the **Home** page.

Fig. 9 Home page

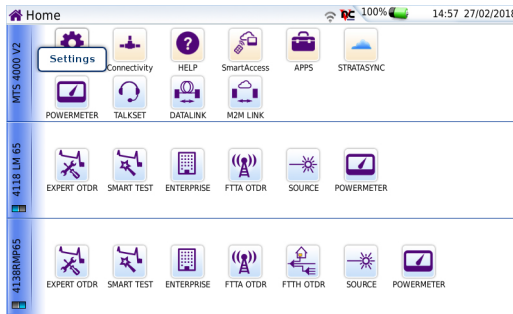


- 2 Activate the **Settings** icon  to open the **System Settings** screen.

Fig. 10 System Settings page

see "Transferring the interface on a PC via WIFI or Ethernet" on page 99

see "Talkset and Datalink Functions" on page 40

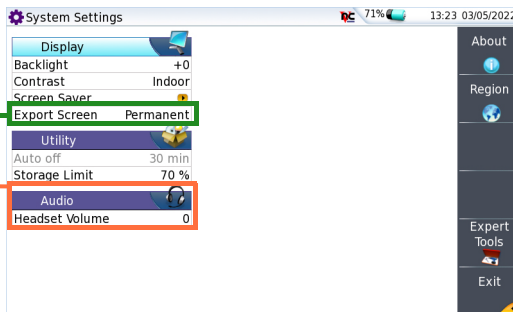

NOTE

If you are in the Regional Settings page, and you press **Exit**, then the **System Settings** page automatically displays.

Defining the screen parameters of the 4000 V2 Platform

In the **System Settings** page, the following parameters can be defined:

Backlight

- 1 Click on **Backlight**
- 2 Define the backlight level of the screen, using the left and right direction keys, or clicking on **Edit Number** softkey and using the keypad displayed.
 - Min backlight level: -5
 - Max backlight level: +5




If the 4000 V2 Platform is operating on battery, it is advisable to choose a minimum lighting level, acceptable for the user, to keep endurance as long as possible.

Contrast

- 1 Click on **Contrast**
- 2 Select the type of environment into which the instrument is used:
 - **Indoor:** to be selected when the instrument is used inside (see [Figure 10](#))
 - **Outdoor:** to be selected in order to optimize the readability of the screen for an outside use.

Fig. 11 Example of outdoor contrast

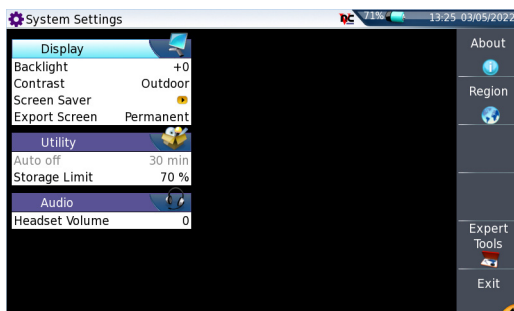

Screen Saver

Click on **Screen Saver** if you wish to activate a screen saver to the equipment, to extend the life of the battery, in case the 4000 V2 Platform is not used for some time.

Instead of the normal screen, a small animated picture of the 4000 V2 Platform is displayed on the blackened screen.

To configure the screen saver:

- 1 Click on **Delay** and select the time of inactivity before the screen saver starts: **60s, 3 min, 5 min**.

The parameter **No** deactivates the screen saver function.



Defining the «Utility» parameters

Defining the Automatic shutdown of the 4000 V2 Platform

The automatic shutdown function switches off the 4000 V2 Platform automatically if no operation has been performed and no key actuated for a period selected from this menu. Work in progress is automatically saved.



The function for automatically switching off the 4000 V2 Platform is available only on battery operation, to save the battery.

- 1 In the **Utility** box, click on **Auto off** parameter.
- 2 Choose a time after which the 4000 V2 Platform will be switched off automatically, if no action has been done for that period: **5, 10 or 30 minutes**.

Select **No** if the 4000 V2 Platform must not be switched off, even if there is inactivity on the equipment.

Defining the Storage Limit

In the **Storage Limit** parameter, define the percentage of the maximum storage size, using the numeric keyboard displayed via the menu key **Edit Number**.

Power meter, VFL (Visual Fault Locator) & Talkset


A variety of built-in optical options are available when ordering. See references in [Chapter 12 “Options and accessories”](#), for details.

The topics discussed in this chapter are as follows:

- “Connection to the power meter, VFL and Talkset” on page 26
- “Configuring the Power meter” on page 26
- “Activating the Source function” on page 33
- “LTS Results page” on page 33
- “Performing a power level measurement” on page 35
- “Performing an insertion loss measurement” on page 35
- “Storing and reloading results” on page 38
- “VFL Function” on page 39
- “Talkset and Datalink Functions” on page 40

Connection to the power meter, VFL and Talkset

Fig. 12 Optical connectors

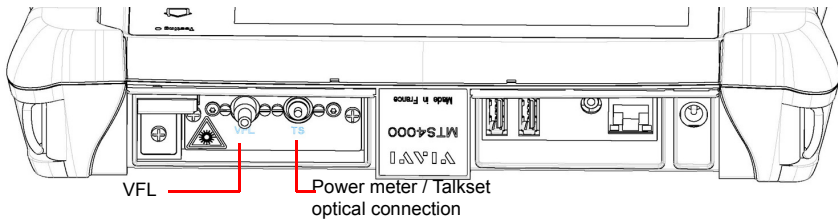

The type of optical connector used for the power meter is UPP (Universal Push Pull), which is compatible with all diameter 2.5 mm connectors (FC, SC, ST, DIN, E2000, etc.)

Configuring the Power meter

To activate the function:

- 1 Press the **HOME** button
- 2 Select the power meter icon in the section of the Platform.

The icon turns yellow




The effect of this action will be to bring the power meter into use.

The measurement parameters can be accessed with the **SETUP** key.

Configuring the Measurement parameters

- 1 From the results page, press the **Setup** menu key
- 2 Click on **Measurement** to configure the measurement parameters.


Figure 13 Configuration of power measurement

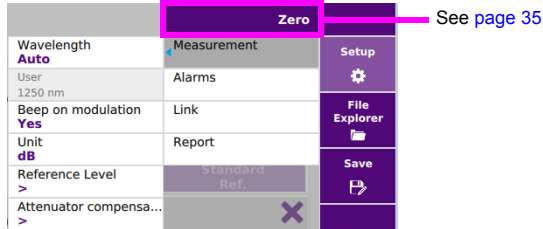

- **Wavelength** Select wavelength:
Auto: the wavelength of the input signal will be automatically detected and selected to perform the measurement:
1310, 1490, 1550, 1625 or 1650 nm: measurement performed at specified wavelength.
- **Beep on modulation** Select if a sound must be heard when a modulation occurs
(Yes / No)
- **Unit** Unit of power displayed:
Watt, dBm for displaying absolute power
dB for displaying a result relative to a reference (link loss)
- **Reference level** Select the reference value for the wavelength selected. First click on the wavelength, and click on the text box to enter the value on the numeric keyboard. This reference is also automatically available, in the **Results** page, using the **Standard Ref.** key.
- **Attenuator compensation** Choice of level to be applied to the wavelength chosen for measurement to compensate for the loss due to the external attenuator (+XX.XX dB). First click on the wavelength, and click on the text box to enter the value on the numeric keyboard.

Configuring the alarm parameters

Fig. 14 Configuration of power meter alarms

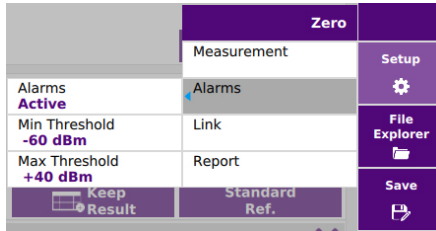


- Alarm** Activation of the Alarm function: any result below the lower threshold or above the upper threshold will be displayed in red on the Results page.
- Min and max thresholds** Choice of lower and upper thresholds for each available wavelength, from -60 to +40 dBm.

Configuring the Link Description parameters

In the **Setup** menu, press **Link Description**.

Figure 15 Link Description parameters

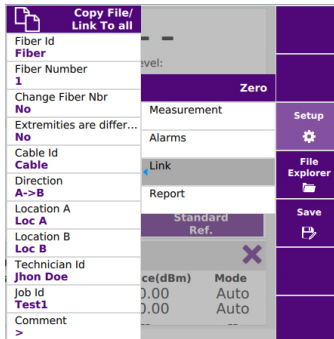

The information entered in the **Link Description** window concerns the editing and/or the modifications of the cable and fiber parameters. When a trace is recalled without recall of the configuration, the parameters of this trace will be present only in its signature.

Link description parameters are recorded in the results files as they are of use for analytics including post processing.

- **Fiber Id** Select the parameter **Fiber Id** and enter a name for the fiber, using the onscreen keyboard.
- **Fiber Number** Select the parameter **Fiber Number** and modify the parameter using the left and right direction keys.

The fiber number can be automatically incremented/decremented at each new file save if it has been configured in the File Setup page (see ["Configuring the Report parameters" on page 30](#)).

- **Change Fiber Nbr**

Increment: the fiber number is automatically incremented at each new file-save.

Decrement: the fiber number is automatically decremented at each new file-save

User defined: Use **Edit Number** softkey to enter the increment/decrement value for fiber number.

- Note: to decrement the number, enter the sign «-» before the number.
Example: -1.

Min: -999 / Max: 999 / Auto: 0

No: the Fiber number must not automatically modified.





- **Cable Id** This parameter allows to enter an identification of the cable, using the onscreen keyboard.
- **Direction** The direction shows if the acquisition has been made from the origin to extremity (A->B) or from the extremity to origin (B->A). Changing direction in the trace simplifies post-processing e.g. for manual bi-directional analysis.
- **Location A** The name of the Location A of the link may be entered here, using the onscreen keyboard.
- **Location B** The name of the Location B of the link may be entered here, using the onscreen keyboard.
- **Technician Id** Click on the text box to enter the name of the operator carrying out the measurement.
- **Job Id** Click on the text box to enter a description of the measurement to be performed.
- **Comment** Click on **Comment** text box to enter a specific comment to the project.

Configuring the Report parameters

The Report storage parameters must be also configured, in order to define how and where the results will be saved in the file system of the equipment.

- 1 In the **Setup** menu, press **Report**.

Figure 16 Report parameters


		Zero	
	Copy File/Link To all	Measurement	Setup
File(s) save in:	[Current Dir]	Alarms	
Dir	disk/fi-83009-0003/fi-830...	Link	File Explorer
Filenaming	Fiber[Cable_Id][Fib...	Report	
FiberCable001_OE		Standard Ref.	Save
Report As	txt		
Report Layout	Standard	Power (dBm) Mode	
Report Naming	FiberCable001_OE	0.00 Auto	
		0.00 Auto	

- **File(s) save in** Click on the text box to display the keyboard and define the directory for files saving


In the onscreen keyboard, select the pre-defined parameters available or, press **abc** key to enter a name manually for the directory. Then, press **Enter** to validate.

Example: `disk/PowerMeter/Test`

Figure 17 Directory - Onscreen keyboard

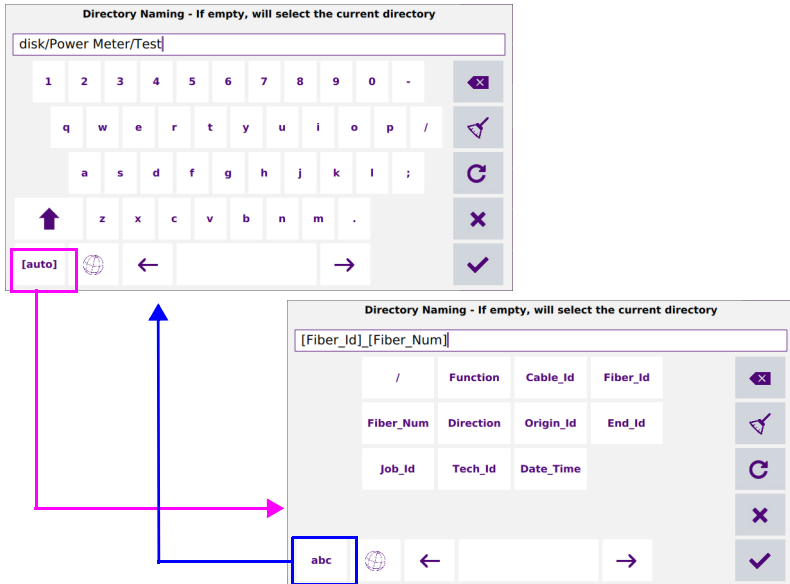

or


Click on  or leave the box empty to select the Current Directory for file saving.

Press  to validate.


- **Dir** This field displays the directory selected/created into which the file(s) will be saved.
- **Filenaming** Select **Filenaming** parameter and click on the text box to modify the name of the file for the result trace.

Use the onscreen keyboard to view and select the pre-defined parameters available or, press **abc** key to enter a name manually for the file. Then, press **Enter** to validate.

Figure 18 Filenaming - Keyboard (auto)

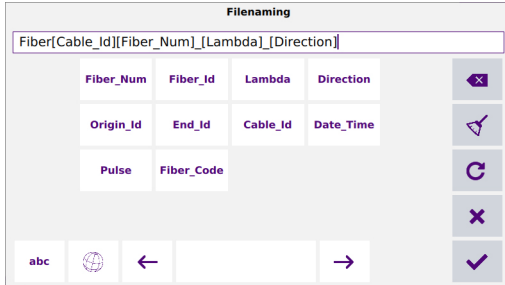

or


Click on  to apply the name by default to the file:

Fiber[Cable_Id][Fiber_Num]_[Lambda]_[Direction]

The name of the file is displayed in grey under **Filenaming** parameter

- **Report As** Select the report format to be generated:
 - txt file:** select **Yes** to save the results in a .sor (or .msor/.csor) file and to generate a txt file of the results.
 - pdf file:** select **Yes** to save the results in a .sor (or .msor/.csor) file and to generate a report in a pdf file.
 - json file:** select **Yes** to save the results in a .sor (or .msor/.csor) file and to generate a json file.

If all parameters are defined with **No**, only the .sor (or .msor/.csor) file will be saved.
- **Report Layout** This parameter allows to define the report page setting and is available exclusively if a **pdf file** has been defined in the **Report As** parameter.:
 - Standard:** in multi-traces display, one pdf report page is generated for each trace.
 - Consolidated:** in multi-traces display, one pdf report page is generated for all traces
- **Report naming** If **Consolidated** is defined for **Report Layout**, select **Report naming** parameter and click on the text box to modify the name of the report file for the result trace.

Using the onscreen keyboard, enter a name manually for the file and press  to validate.

If no name is entered, the report name by default applies: Report_SM/MM-OTDR.

Activating the Source function

The Source function is an option chosen at the time of order and incorporated into the OTDR module in the factory.

To activate the function:

- 1 Press the **HOME** button.
- 2 Click on the icon **Source** in the Platform section.

The icon turns yellow



LTS Results page

The LTS results page is split into two sections:

- the upper section corresponds to the light source activation and settings
- the lower section corresponds to the power meter measurement results and settings.

The control bar displays generic control keys such as Setup, File Explorer, Save. If the ExpertOTDR function is active at the same time of the power meter, the Combo PM/OTDR key is available.

Result page of the Power meter

The power level measured by the power meter and its measurement unit are displayed in large characters, together with:

- the mode of transmission of the measured signal: continuous wave (CW) or modulated wave (available frequency 270Hz, 330Hz, 1KHz, or 2KHz, VIAVI Auto).
- the wavelength of the measured signal.
- the reference level expressed in dB.
- the level of Attenuation Compensation.

Table of results

For one and the same fiber, the power meter displays a table of all the different tested wavelengths. The table shows the power level measured in dBm, the relative power (in dB) and the reference level in dBm (if units = dB), together with the mode.



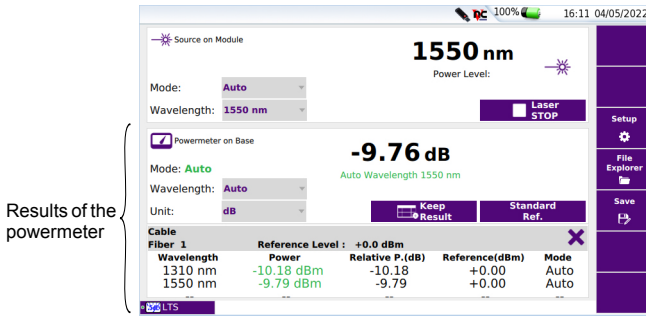
- A measurement result is displayed in the table when the **Keep Result** icon is pressed .
- The key  deletes the values in the table.
- If the Alarm function has been activated, any result that exceeds the setup thresholds appears in red in the table. Else results are shown in green.
- When the instrument is switched off, results present in the table are kept.

Figure 19 Results and commands of the power meter

 


Keys of the power meter

When the Powermeter results page is displayed the following settings are available:

- Mode** Information about the received signal modulation: CW, Auto
- Wavelength** Selection of the wavelength to be measured.
- Unit** Choice of the unit (dB, dBm or Watts)

The following action keys are available:



Keep the current power level value and set it as the reference value, in order to measure the insertion loss of a link. This reference value is displayed under the measurement result until a new reference is performed.



Keep the dB level value displayed in the table below.



Deletes all the results/values displayed in the table.

Combo PM/OTDR

If the ExpertOTDR mode is activated at the same time as the Powermeter, a menu key **Combo PM/OTDR** function becomes available in the control bar.

It allows to combine in the test report power levels and OTDR results. If there is no light, you can use the standard port/wavelength of the OTDR. If there is light, you must use a filtered wavelength/in-service port.

Performing a power level measurement

- 1 Connect the fiber under test to the test port (see "[Connection to the power meter, VFL and Talkset](#)" page 26).
- 2 On the power meter results page section, select the measurement unit: dBm or Watts.
- 3 The power level is displayed in real time when there is light. To keep the displayed value, press on **Keep Result** icon. The value is then displayed in the table (but not saved yet) - see "[Table of results](#)" page 33.

Performing an insertion loss measurement

A combo light source and power meter is often used to perform an insertion loss measurement. Few steps must be carried out to get a reliable and accurate loss measurement.

Setting the zero value of the power meter

- 1 Close the protective cap of the OTDR port (so no light can be seen by the power meter photodetector).
- 2 In the Setup menu, press **Zero**.



It is important to set the zero of the power meter especially to get accurate results, as the noise from the germanium photodiode may fluctuate over time and with temperature variations.

- 3 Wait until the dialog box `Offset nulling completed` is displayed.
- 4 Hit any key to continue.


Performing a reference

Using two equipment, with an OTDR module including a laser source option and a Power meter option, an insertion loss measurement in continuous wave can be performed.

Side by side reference



Both units are connected together which requires to have them at the same location.

 Figure 20 Side by side reference - 1 jumper reference



NOTE

The reference can be performed with one 4000 V2 Platform at one side and one 2000 Platform at the other side.

- 1 Before connecting fiber/jumper, use appropriate cleaning tool to clean connector end-faces.
- 2 Connect the reference/graded jumper from the light source directly to the power meter.
- 3 Activate the OTDR light source, on equipment (1)
 - a Press the **HOME** key.
 - b Select the source icon. It turns yellow to show it is active 
 - c In the **Results** page, press **Laser START**.
 - d Select the **Twintest** mode in the list.
- 4 Activate the power meter on equipment (2), from the Base-unit
 - a Press the **HOME** key
 - b Select the Power Meter icon. It turns yellow to show it is active 
 - c In the **Results** page, press **Standard Ref.** for each wavelength.

The actual power level is set as the new reference level for the selected wavelength. Then, the displayed value is around 00.00 dB.

The reference levels are stored and entered in the setup fields.


Measurements on the fiber under test

Once the references have been performed on both units:

After a Side by side reference, always keep the jumper connected to the equipment (1) the light Source and connect another graded jumper to the Power meter port, equipment (2).

- 1 Connect the jumpers to the fiber under test using the appropriate method (ex. keying mechanism for FC/PC types).
- 2 On equipment (1) press **Laser START**.

 Figure 21 Measurement of the fiber under test




Measurement using a mode conditioner

To perform an Insertion Loss measurement with a Source that is compliant to IEC 61280-4-1 Ed2 Standard on encircled flux, it is recommended to use a mode conditioner after the OTDR Source port.

The light source and the mode conditioner has to be referenced together using the side-by-side 1-jumper reference method (see [“Side by side reference” on page 36](#)):

- 1 Connect the Multimode source (1) to the mode conditioner
- 2 Connect the Powermeter port (2) to the jumper
- 3 Connect extremities of the mode conditioner and jumper to the fiber under test using the appropriate method (ex. keying mechanism for FC/PC types).

Figure 22 Measurement of the Insertion Loss with a mode conditioner

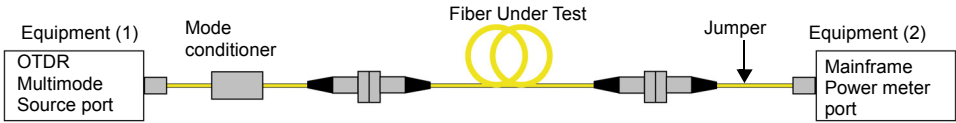

- 4 On equipment (1) select **Laser START** to activate the light source.

Storing and reloading results

Report Setup

Press on **Setup** softkey, then **Report**.

File(s) save in set the directory where the file(s) will be saved.

File naming set the name of the file(s) by using pre-defined tags / fields previously set in **Link** or by entering directly a name.

Report As Set the format of the report. Choice between .txt, .pdf and .json.

Storing results

In order to save the results of a measurement, press **Save**. The file name displayed is per the Report file naming setting. You can edit/change it in the keyboard if needed.

- A proprietary file is always saved. It allows to re-load results in the instrument. It is saved with the extension .Its.
- The other files format are per the **Report As** setting.
- Note that the ".txt" format is equivalent to a .csv and can be opened with a spreadsheet program, on a computer, where all measurement results can be easily retrieved and the table format customized.

Loading results

In order to load previous power level measurements, go to the file Explorer, select a file



with the extension «.Its» and press **Load > View trace(s)**.

VFL Function

VFL connector

The type of optical connector used for the VFL source is UPP (Universal Push Pull), which is compatible with all diameter 2.5 mm connectors (FC, SC, ST, DIN, E2000, etc.)

See [Figure 12 on page 26](#) to visualize the VFL connector.

Visual Fault Locator function (VFL)

This function is used to emit a red light signal of frequency 1 Hz or in continuous mode into a fiber to detect any defects in the dead zone of the reflectometer, or to identify it. This function is suitable for short fibers (length < 5 km) or the first few meters of a long fiber.



NOTE

Identification is facilitated by the blinking of light in the fiber.

To emit a light signal into a fiber:




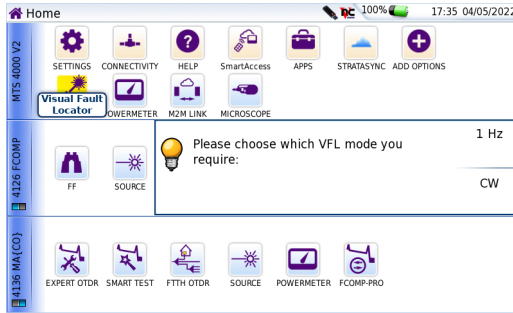
- 1 Connect the fiber to the VFL port on the connectors panel.
- 2 Press the **HOME** key and activate the VFL .
- 3 In the dialog box, select the signal mode of the VFL: 1Hz or CW (Continuous).
The icons   display on the upper banner of the screen.

Fig. 23 VFL - signal selection



NOTE

Press **CANCEL** button on the Platform to deactivate the VFL.

Talkset and Datalink Functions

The Talkset option enables two operators at opposite ends of an optical link:

- To communicate along the fiber.
- To transfer data along the fiber.

Each end of the optical link must be provided with a 4000 V2 Platform equipped with the Talkset option.

NOTE

It is possible to use the Talkset of the 4000 V2 Platform and to carry out measurements at the same time, on a different fiber.



NOTE

It is possible to use the Data transfer feature while using the optical telephone of the 4000 V2 Platform. Nevertheless, the data transfer speed will be slightly decreased.

Talkset configuration

The talkset configuration is set in the **System Settings** screen, in the **Channel** box (see “Adjusting volume level” on page 43)

Connections

At each end of the fiber:

- 1 Connect the fiber to the Talkset port of the 4000 V2 Platform, either directly or through jumpers.



NOTE

The Talkset option is delivered with a FC adapter mounted on standard on the talkset connector.


In addition to the FC adapter, a SC adapter is also delivered with the Talkset option.



VIavi recommends you to use the following connections:

- PC Fiber Connection (APC is not recommended)
- SC or FC connection (UPP is supplied but not recommended)

Fig. 24 Installation for Talkset use

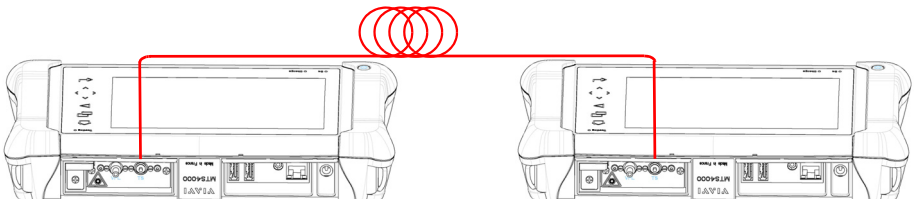

- 2 A headset (with earphones and a microphone) supplied with the option may also be plugged into the 4000 V2 Audio jack.





NOTE



Data transfer uses the same fiber as the optical telephone

Establishing communication

On the caller 4000 V2 Platform, press the **HOME** button, then validate the **desired function**:

- **Talkset**  (Optical Telephone): used to communicate via the fiber.
- **Datalink** : used to transfer data, perform OEO measurements or remote screen using the fiber.

If the remote instrument is ready to receive (on standby), the Talkset/Datalink icon turns yellow, beeps are emitted, and

- the icon  appears at the top of the screen: telephone communication can now take place.
- the icon  appears at the top of the screen: data transfer can now take place.

If the remote instrument is not ready to receive, the icon does not change color and a message is emitted.



NOTE

The talkset icon is displayed on the top banner as long as communication remains established, letting the user know that the connection is working. When communication is established, the headset is automatically enabled if plugged in. However, the loud speaker must be correctly configured in the setup menu to work accordingly



NOTE

Data transfer varies according to the type of application you use. For Fiber Optics for example, you can use the explorer. The distant 4000 V2 Platform will be shown just like a disk and all file and directory features can be used from and to that disk.

Remote screen function via Optical Datalink


This enables an operator at one end of an optical link to take control over another 4000 V2 Platform connected at the other end, using the fiber.




NOTE

Each end of the optical link must be provided with a 4000 V2 Platform equipped with the Talkset option.

Establishing communication

- 1 On the caller 4000 V2 Platform, press the **HOME** button, then select and confirm the **Optical Datalink** option:
 - If the remote instrument is ready to receive (on standby), the **Optical Datalink** icon turns yellow, beeps are emitted, and the icon  appears at the top of the screen: data transfer, remote screen or oeo measurements can now take place.
 - If the remote instrument is not ready to receive, the **Optical Datalink** icon does not change color and a message is emitted.
- 2 Click next on **Connectivity**
- 3 In the connectivity screen, click on **Switch to remote screen**.

Your screen is now fully replaced by the distant screen, and everything you do on your 4000 V2 Platform is in fact done on the distant 4000 V2 Platform.

An icon  appears in the top banner of the 4000 V2 Platform.



A slight normal color degradation may be seen on the 4000 V2 Platform controlling a distant instrument.

Adjusting volume level

The sound is transmitted to the earphones of the headset and, if this function has been activated, to the speaker in the 4000 V2 Platform. To activate the base loudspeaker and adjust the volume:

- 1 Press the **HOME** key.
- 2 Validate **Settings** icon to reach the **System Settings** page.
- 3 Under the **Audio** box, adjust **Headset Volume** (from 0 to 100).

End of a VNC session

In order to end a VNC session, you can:

- 1 Return to the **Connectivity** page and click on **Return to local screen**. (Recommended solution)

or

Deactivate the **Optical Datalink** function on either 4000 V2 Platform connected.

A short sound is emitted to indicate the disconnection is done, and the icon **Optical Datalink** turns inactive.

- 2 Disconnect the fiber



NOTE

The VNC icon in the top banner of the screen lets you know at all times whether you are in a VNC session or not.

Disconnection

When communication is over:

- 1 Deactivate the **Talkset/Datalink** function on one of the 4000 V2 Platform.
- 2 This deactivation can be done by either 4000 V2 Platform. Then, the fiber used can be disconnected safely.

Scope

The scope function is a hot-plug feature enabled directly when inserting a VIAVI scope supplied as an accessory (see [Chapter 12 “Options and accessories”](#)):

The topics discussed in this chapter are as follows:

- [“Scope feature” on page 46](#)
- [“Installation of tips” on page 47](#)
- [“Configuring the Scope” on page 47](#)
- [“Starting up with the scope” on page 57](#)
- [“Launching a test of the connector and fiber end-face” on page 59](#)
- [“File menu” on page 63](#)

Scope feature

Overview

This feature enables you to verify that your optical connectors are in perfect shape and very clean condition.

The P5000i Digital Probe Microscope and the FiberChek Probe are portable handheld microscopes used to view and inspect both the bulkhead (female) and patch cord (male) sides of fiber connectors as well as other optical devices, such as transceivers.

The P5000i and the FiberChek require an FBPT inspection tip.

The P5000i is connected to the Platform 4000 V2 with a USB 2.0 connector.


The FiberChek is connected to the Platform 4000 V2 with a mini-USB connector or via WIFI.

Figure 25 P5000i Probe components



Before using the P5000i scope, make sure the Bluetooth option has not been activated, even once, after the start of the MTS/ T-BERD 4000 V2. If it has been activated, stop and restart the equipment before using the P5000i Scope.

Fig. 26 FiberChek Probe components

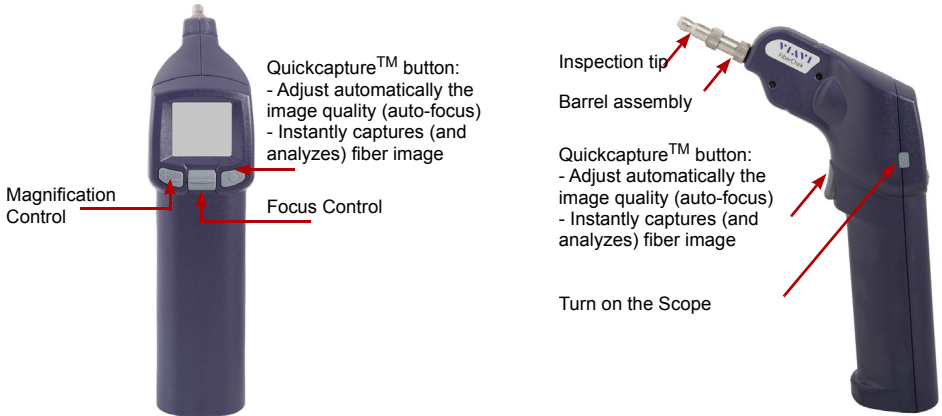

CAUTION

Buttons on FiberChek Pro Scope can also be used to navigate onto the screen of the equipment if it is used alone, without being connected to a Platform (see the FiberChek user manual).

Installation of tips


The Pass/Fail analysis function on the 4000 V2 Platform can only be used with certain inspection tips mounted on the P5000i.

Seven tips, patchcords and bulkheads types, are delivered with the Videoscope Kit (ESDFSCOPE5Ki) but many others can be used.

Configuring the Scope

P5000i Scope connection

- 1 Plug in your VIAVI scope into a USB port from the Platform 4000 V2.
- 2 Push the button **HOME**.

- 3 Validate the **Scope** function .
- 4 Connect probe with the fiber being inspected.


You may select this option while other options are already selected (e.g. OTDR).


FiberChek Scope connection

WIFI Connection

- 1 Turn on the scope.
- 2 Make sure the WIFI connection is activated onto the Scope (see FiberChek User manual).
- 3 On Platform 4000 V2, press the **HOME** button.
- 4 Click on **Connectivity > Wireless**.
- 5 Perform a scan to detect the Scope and establish the connection with the Platform (see “Configuring the WIFI access” on page 69).

Fig. 27 Microscope FiberChek detected via WIFI

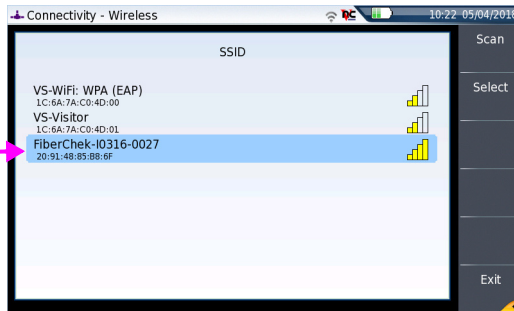

- 6 Once connection is established, return to the **Home** page.
- 7 Validate the icon **Microscope** .

You may select this option while other options are already selected (e.g. OTDR).

USB Connection

- 1 Link the scope to the Platform 4000 V2 using a mini-USB cable.

Fig. 28 WIFI connection of the FiberChek Scope to the Platform 4000 V2




- 2 Turn on the scope.
- 3 On the Platform 4000 V2, press the **HOME** button.
- 4 Validate the **Fiber Microscope** icon.

You may select this option while other options are already selected (e.g. OTDR).

Configuring the Scope

- 1 Press **Multi View** key and select **Setup** to configure the test.
The following screen displays:

Figure 29 Scope Setup

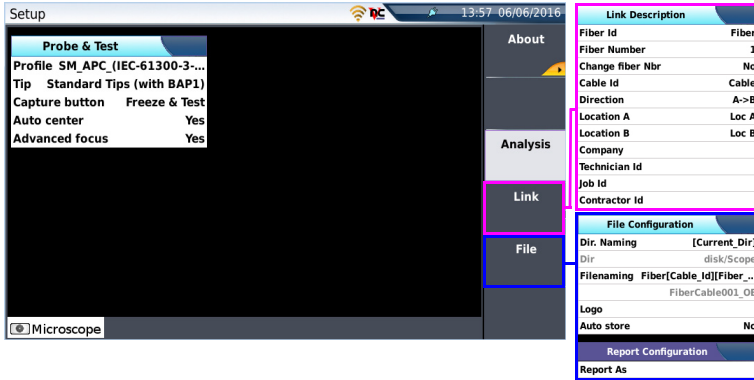

Analysis

Profile

On the line **Profile**, select the Profile which will be used for the test of fiber connector:

- SM_UPC: Pass/Fail criteria for single-mode UPC connectors from IEC 61300-3-35 standard.
- SM_APC: Pass/Fail criteria for single-mode APC connectors from IEC 61300-3-35 standard.
- SM_PC: Pass/Fail criteria for single-mode PC connectors from IEC 61300-3-35 standard.
- MM_: Pass/Fail criteria for multimode connectors from IEC 61300-3-35 standard.

Profiles contain the analysis parameters by which PASS/FAIL criteria are determined.

Once the line is selected, you can also add a new profile, clicking on the **Add** Button (see [“Defining the profiles available on the Setup screen” on page 55](#)).

Tip

On the line **Tip**, select the tip set onto the scope to connect fiber for inspection.

Capture button

This parameter allows to select the action of the Quick Capture button onto the Scope (see [Figure 25 on page 46](#)):

- **Freeze & Test** pressing the button will automatically perform a test of fiber and freeze the result
- **Freeze image** pressing the button onto the Scope will automatically freeze the live image.

Auto Center

This parameter allows to select if the scope image must be centered on screen (select **Yes**) or not (select **No**).

Advanced focus (focus meter)

This parameter allows to define if the advanced focus must be used (**Yes**) or not (**No**).



CAUTION

This parameter is not available with the FiberChek scope as the function is available by default.

Press the Quick Capture button to apply the auto-focus onto the image (see [Figure 26 on page 47](#)).

The advanced focus displays a Red / Yellow / Green bar graph to indicate the focus level and the image sharpness.

Link

In the **Setup** page, press **Link** softkey (if one parameter is selected in the current screen, press **Top Menu** soft key to display the right menu keys and click on **Link**).

The information entered in the Link window concerns the editing and/or the modifications of the cable and fiber parameters.

- **Fiber Id** Use the edition keypad, which will display by clicking on the right arrow key, to enter a specific name for the fiber.
- **Fiber Number** Use the numeric keypad, which will display by clicking on the right arrow key, to enter the fiber number.
- **Change fiber Nbr** Select if the fiber number must be modified after each results saving:

No: the fiber number is not modified at each saving

Increment: the fiber number is automatically incremented at each results saving

Decrement: the fiber number is automatically decremented at each results saving.

User Defined: Use the menu key **Edit Number** to enter the value for incrementation / decrementation of the fiber number.

Note: to decrement the number, enter the sign «-» before the number.

Example: -1.

Min: -999 / Max: 999 / Auto: 0

- **Cable Id** This parameter allows to enter an identification of the cable, using the Edition menu.
- **Direction** The direction shows if the acquisition has been made from the origin to the extremity (A->B) or from the extremity to the origin (B->A). Changing direction makes it possible, when different extremities are handled, to see the parameters of the fiber for the other extremity.
- **Location A** The name of the Location A of the link may be entered.
- **Location B** The name of the Location B of the link may be entered.
- **Company** Enter the name of the company carrying out the test.
- **Technician Id** Enter the name of the operator carrying out the test.
- **Job Id** This line is used to enter a description of the job in progress.
- **Contractor Id** Enter the name of the contractor.



NOTE

All parameters of the Link Description box will appear in the pdf report or jpg file generated from a test results page.

File

In the **Setup** page, press **File** softkey (if one parameter is selected in the current screen, press **Top Menu** soft key to display the right menu keys and click on **File**).

The File box allows to configure the saving of scope results.

File configuration

Dir. Naming

Click on **Current Directory** menu key to select the directory currently selected in the explorer for files saving


or

Use the arrow ► to enter the directory name and path:

In the edition keypad, select the pre-defined parameters available or, press **abc** key to enter a name manually for the directory. Then, press **Enter** to validate.

Example: `disk/Scope results`

Fig. 30 Directory - Edition keypad

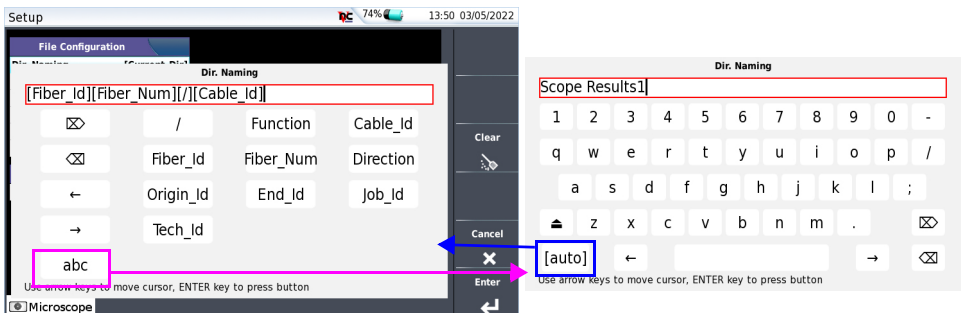

Press **Clear** and validate (**Enter** key) in order to define the [Current directory] selected as directory for saving measurements.

Dir


This parameter cannot be configured, and display the directory selected/created by default into which the file(s) will be saved.

Filenaming

Use the edition keypad, which will display by clicking on the right arrow key, to enter a specific name for the file. You can enter manually a name and/or use pre-defined parameters (Fiber Id, Cable Id, Locations...).

In the edition keypad, select the pre-defined parameters available or, press **abc** key to enter a name manually for the file. Then, press **Enter** to validate.

Fig. 31 Filenaming - Edition keypad (auto)

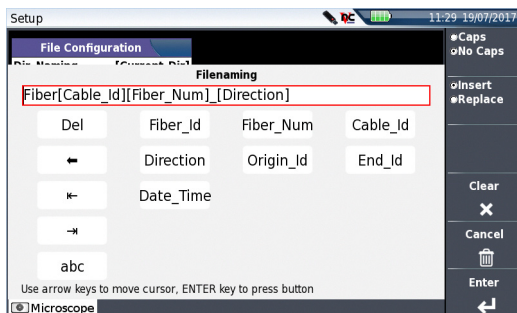

or

Press **Default Filename** to apply the automatic name to the file:

Fiber[Cable_Id][Fiber_Num]_[Direction]

Below **Filenaming**, the name of the file is displayed.

Logo

Click on right arrow key and select in the Explorer a JPG file which will represent the Logo displayed on the upper left part of the report

Save mode

Select if the test results must be saved only in an **Image**, only in a pdf **Report** or in an image + a pdf report (**Image + Report**).

Auto Store

Select **Yes** if the saving must be done automatically after a test, or **No** if the saving must not be done automatically.

Press **Exit** to return to the Results screen of the scope.

Report configuration

Report As

Select the report format to be generated:

- **txt file** select **Yes** to generate a txt file of the results
- **pdf file** select **Yes** to generate a report in a pdf file
- **json file** select **Yes** to generate json file(s) compatible with VIAVI test process automation (Job Manager and Stratasync cloud data management system)

Managing scope profiles

Once the Setup screen of the scope is displayed, you can :


- Select / unselect a profile from the list, which will be available / unavailable in the Setup screen.
- Add a profile to the existing ones.

Defining the profiles available on the Setup screen

Once in the Setup page of the Scope application:


- 1 Select the Profile parameter to open the sub-menu
- 2 In the right menu keys, press **Manage**.
- 3 From the Profiles list, click on one profile (in video reversed) and press **Select / Unselect** menu keys to add or remove this profile to/from the sub-menu of the Setup screen
or
Directly click on the check box of the profile to select/deselect it.
- 4 Press **Top Menu** softkey to go back to **Setup** page.
The changes are applied at selection.

Figure 32 List of profiles available

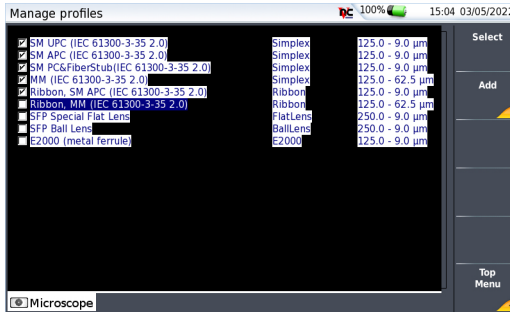

Importing a profile to the Scope application

The profile must be created via FiberChekPro™, and stored on one storage media of the 4000V2 Platform (disk, or USB memory stick).


- 1 On the Setup screen, select **Profile** and press **Manage**.
- 2 From the Profile list, press **Add** menu key.
- 3 On the explorer, select the file which will be used as profile (icon ; extension: .PRO)
- 4 Press **Load**.
Once loaded, the display goes back automatically to **Manage Profile** screen.
- 5 Select the profile just loaded.
- 6 Press **Top Menu** to return to Setup screen and select the profile just added.

About page

On the **Setup** screen, the softkey **About**, on the right of the screen, allows to display information on scope and current test result displayed (in Full Screen mode or mosaic mode - see "[Mosaic Mode](#)" on page 60).

- 1 Press **About** softkey to display a page as the following one:

Figure 33 P5000i Scope: About page

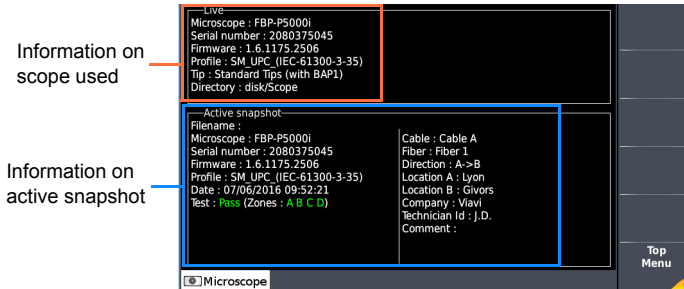


Starting up with the scope

Once the Fiber Scope icon is validated:

- 1 Press the **Multi-views** key and select **Results**.

Figure 34 Example of the result using the P5000i scope

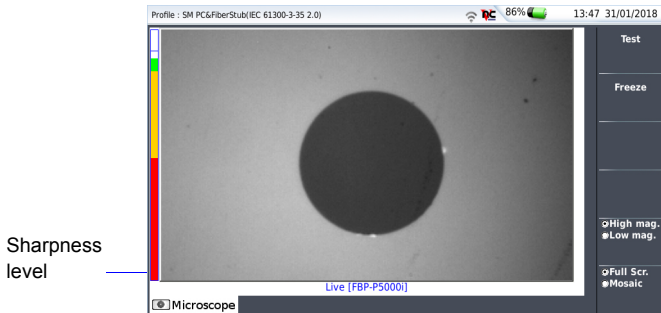

Use the **Focus Control** button onto the scope (see [Figure 25 on page 46](#) and [Figure 26 on page 47](#)) to adjust the image quality and sharpness.

Freeze mode

Once the image is acceptable, you may freeze the picture. This feature allows to store in memory the resulting picture.



Freezing a scope result does not store the picture in a file (see “File menu” on page 63). The result will be lost if the instrument is shut off, or if more than 3 pictures are frozen (see “Mosaic Mode” on page 60)



NOTE

The button set on the lead, or the QuickCapture™ on the scope allows to freeze the picture and/or to perform a test (according to the configuration in Setup page - see “Configuring the Scope” on page 47)..

High Mag. / Low Mag.

The **High Mag./Low Mag.** menu key allows to switch the display from High to Low magnification and vice-versa.

This function is also available pressing the button directly on the scope (see [Figure 25 on page 46](#) and [Figure 26 on page 47](#)).

Live mode

If you are in Freeze mode, or in Mosaic mode, with a picture selected (see “Mosaic Mode” on page 60), press **Live** menu key to return to live camera picture.



Use the focus control to adjust the focus of the image

Launching a test of the connector and fiber end-face


Launching a test of the connector and fiber end-face

Once the display is correctly adjusted (magnification, sharpness...), a test of fiber connector can be launched.

To launch the test:

- 1 Press **Test** key or **Quickcapture™** button to launch the test of plugged fiber connector.

The test is completed:


- once the Led **Testing** is no more lit in red
- once the icon  is no more displayed on the upper banner
- once a screen as the following one displays:



NOTE


To configure Pass/Fail criteria, see "[Configuring the Scope](#)" page 49.

Figure 35 Test results

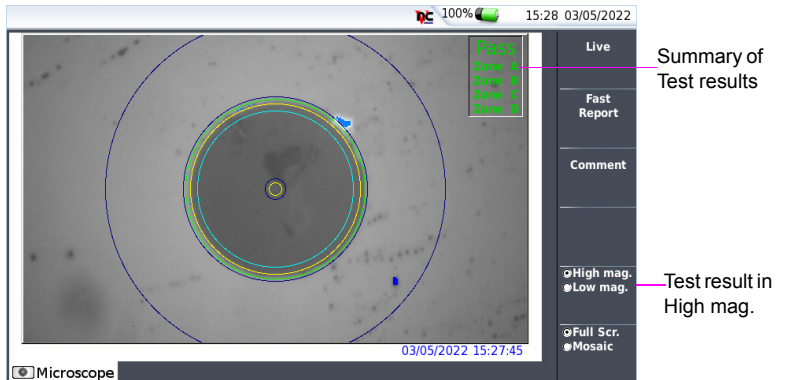

A summary of test results is displayed on the right, upper part of the screen.

- Zone A: **Core** zone: it is the area surrounding the core
- Zone B: **Cladding** zone. It surrounds the majority of the fiber cladding.
- Zone C: **Epoxy** ring.
- Zone D: **Ferrule/Contact** zone: it identifies a portion of the ferrule near and around the fiber

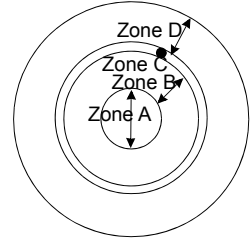

NOTE


To return to a Live Camera image, press the **Camera** key; or press the **Full Screen/Mosaic** key view both the live image and a test result simultaneously.

In **Mosaic** mode (see "[Mosaic Mode](#)" page 60), the result of the test only displays Pass or Fail information; the status of each zone is displayed only in full screen mode.

Mosaic Mode

It is possible to display only one picture in full screen (640 * 390 pixels) or up to four pictures (320*180 pixels each, including the live camera picture) in mosaic mode. Use the key **Full scr./Mosaic** to switch from one mode to another.

Figure 36 Mosaic mode

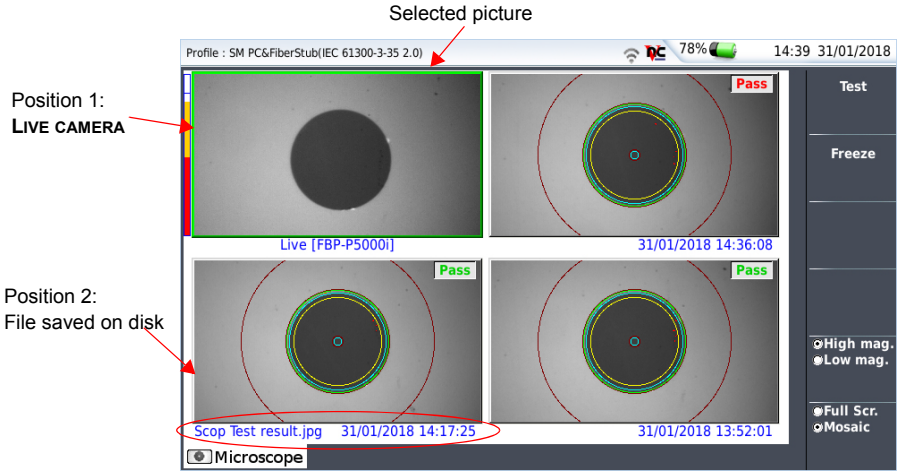

- You may select one of the pictures by clicking on it.
The selected picture is framed in green.

The tool bar on the right varies according to which picture is selected (camera, or static picture):

Picture selected: Live

- **Test** Allows to launch a (new) test of the connector (see [“Launching a test of the connector and fiber end-face”](#) on page 59)
- **Freeze** The live picture from the camera is frozen but does not replace the live picture at position 1. The new snapshot is placed at the second position, and all existing pictures are pushed to the next position.



If all positions were taken, the picture that was once at the fourth position is unloaded from memory. Frozen pictures and snapshots are lost, unless they were saved on the internal memory.

- **High mag./Low mag.** allows to modify the live display from high to low magnification and vice-versa

Picture selected: Image

- **Comment** allows to add a comment to the selected picture (see “Adding a comment” on page 62)
- **Fast Report** allows to save the freeze image / test results in the last directory selected, in the format(s) selected from the File Setup menu (see “Report As” on page 55). Press **Fast Report** key, enter a name for the file and validate. This key is not available with jpg files other than those resulting from scope application.
- **Overlay** when selected, allows to display or hide the limits of each zone and the defaults on image, with colors, from a test result. When the key is deselected, the zones and defaults are not graphically identified.
- **High mag./Low mag.** allows to switch all the images from scope test results from high to low magnification and vice-versa.

Adding a comment

The key **Comment** allows you to enter/modify a comment to your picture if necessary. This comment appears at the bottom left of the picture.

The right bottom of the frozen picture also contains the date of the acquisition (where the picture was frozen).



NOTE

Both the comment and the date will be saved with the picture.

Loading a picture

It is possible to retrieve and load a picture stored in the Scope directory and display it in the Scope page.

- 1 Press the **Multi-views** key and select **File**.
- 2 Press **Explorer**.
- 3 Select the JPEG file to be loaded via the Explorer
- 4 Click on **Load**

Recognized pictures are images resulting from the Scope option and saved on disk via the 4000 V2 Base Unit.





Some pictures resulting from the Scope option may appear nevertheless unrecognized, if they have been stored with a different Scope application, or if the JPG file has been opened and modified under another JPG editor.

File menu

Saving the test result in a jpg file and / or in a report

Once the test has been performed, and the result is displayed on the 4000V2 Platform screen:

- 1 Click on **Fast Report** soft key to save a jpg file and / or a pdf report of the test result on the disk of the 4000V2 Platform.
- 2 On the edition keypad, enter the name of the file(s)
- 3 Press **Enter** to validate.

The file is automatically saved on the disk, in the directory **Scope** (icon  for jpg file, icon  for report).

The jpg file includes pass/fail and setup information which is used for combo report with OTDR (see OTDR User Manual).

The saving is possible exclusively if the **Report As** parameter is defined at least in one file format: jpg, pdf and/or json (see [“Report As” on page 55](#)).

Display of the report

Once the report has been generated:

- 1 Press the **Multi-views** key and select **File**.
- 2 In the **File Explorer**, select the pdf report just created.
- 3 Press **Load**.

Figure 37 PDF report of Scope test result

Parameters selected in the Setup page (see “Configuring the Scope” on page 49)


Viavi Solutions Tue 07 Jun 2016 09:52:21 AM UTC

Viavi		PASS
Cable ID	Cable A	
Fiber ID	Fiber 1	
Direction	A->B	
Location A	Lyon	
Location B	Givors	
Technician Id	J.D.	
Job ID		
Probe	FBP-P5000 S/N 2060375045	
Test date	Tue 07 Jun 2016 09:52:21 AM UTC	
Profile	SM_LFC_(IEC-61300-3-35)	
Comment		


Inspection summary

Zone	Diameter		Defects		Scratches	
	Inner	Outer	Result	Count	Result	Count
Zone A	0.000	25.000	PASS	0	PASS	0
Zone B	25.000	120.000	PASS	0	PASS	0
Zone C	120.000	130.000	PASS	2	PASS	0
Zone D	130.000	250.000	PASS	0	PASS	0

Low magnification

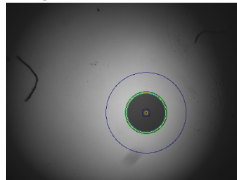

High magnification

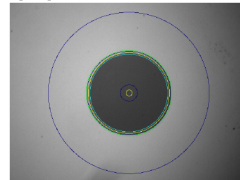

VIavi

v2.2 © Viavi Solutions

Connectivity

This chapter describes the different ways to access to the 4000 V2 Platform interface or content using different connection modes.

Topics described in this chapter are as follows:

- [“Establishing connection” on page 66](#)
- [“Remote Control” on page 78](#)
- [“Stratasync” on page 102](#)
- [“GPS option” on page 104](#)

Establishing connection

Via Bluetooth

The Bluetooth interface allows interface and file transfers.

It is an option that must be installed at the factory, and it is available with the WIFI option.



The product is approved in accordance to R&TTE directive concerning transmitter module marked by CE0678. It is manufactured by MITSUMI and it is an OEM product.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device contains FCC-ID: POOWML-C40.


Pairing the Platform with a device


- 1 On the **Home** page, press **Connectivity** key
- 2 Under **Connectivity** page, select **Bluetooth**

The following screen displays

Fig. 38 Bluetooth disabled

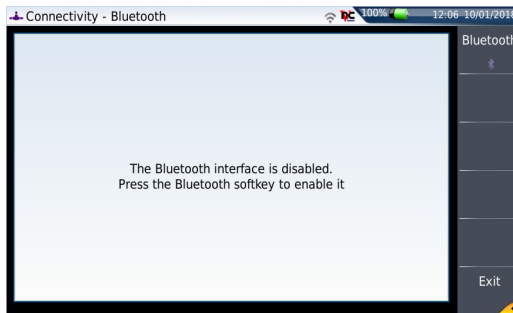


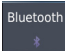- 3 Press the menu key **Bluetooth**  to enable the Bluetooth interface.

The icon  is displayed on the upper banner of the screen
The Paired Bluetooth Devices screen appears


- 4 Press the **Become Pairable** soft key to wait for another device to initiate the connection to the 4000 V2 Platform.
A screen as the following one displays:

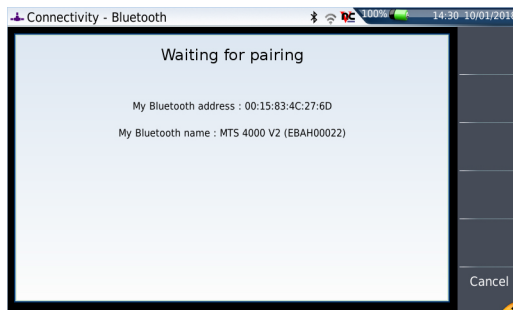

Fig. 39 Waiting for pairing



- 5 Activate Bluetooth on the equipment which need to be paired with the Platform
- 6 If you are asked to, validate a pairing code on the equipment.
- 7 In this case, validate the pairing code on both equipments.
Both equipment are now paired:

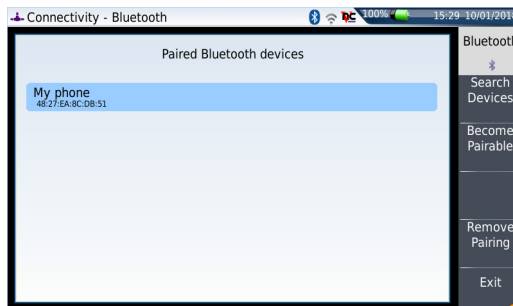Fig. 40 Platform paired with one equipment



The icon has a blue background when paired with a device , versus no background when not paired .


Searching new devices to be paired with the Platform

- 1 If the desired device is not displayed on the screen, or if no devices are detected, press the **Search Devices** soft key.
The 4000 V2 Platform is searching for the devices which could be used via Bluetooth with the equipment.



REMINDER



You may need to activate bluetooth on the other device to allow pairing.

A bargraph is displayed during research .

Once the research is completed, a list of the available devices is displayed, with the level of detection of the 4000 V2 Platform

Fig. 41 List of devices found




- a Select the device to be paired with the Platform
It will be underlined in blue.
 - b Push the **Pair** key to connect the device to the Platform
- 2 If prompted, enter a pairing code. The code must be identical on the 4000 V2 Platform and the device.
 - 3 Once the bluetooth device and the Platform are paired, a screen is displayed with the description of the device (see [Figure 40 on page 67](#)).
The icon has a blue background when paired with a device , versus no background when not paired .

You can now go to the file explorer and transfer files from the 4000 V2 Platform toward the bluetooth device and vice versa (see “[Transferring files via Bluetooth](#)” on page 95).

Removing the Pairing

To remove the pairing between the two equipments

- 1 From the Home page, press **Connectivity > Bluetooth**.
- 2 Push the **Remove pairing** key

The icon on the upper banner of the screen becomes  showing the Platform is no more connected to a bluetooth device, but the Bluetooth option is still active.

To deactivate the bluetooth onto the Platform, press **Bluetooth** menu key to disable the interface.

Via Wifi

The WIFI application is available on option with the 4000 V2 Platform, ref E10WIFI.

Configuring the WIFI access




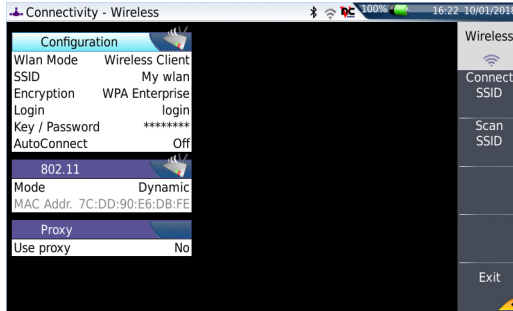
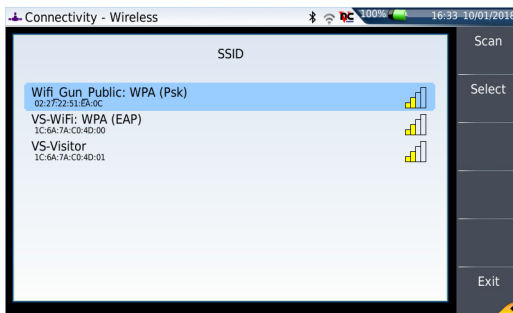
- 1 Restart the 4000 V2 Platform, pressing **ON** button.
- 2 On the **Home** page, press **Connectivity** .
The **Connectivity** page opens.
- 3 In the new page, select the **WIFI** icon .
- 4 Press **Wireless** menu key to enable the Wifi interface.
The **WIFI Setup** screen displays.
The icon  is displayed on the upper banner.

Fig. 42 WIFI Setup screen



- 5 Press **Scan SSID** menu key to scan for Service Set Identifiers (SSIDs) in the area.
- 6 Wait for the list of SSIDs to be displayed.

Fig. 43 List of SSIDs found



- 7 Select the desired network to connect to.
- 8 Press **Select** menu key to validated the connection.
The display goes back to Setup screen.
The **SSID** parameter is automatically configured with the one selected.
- 9 In **Encryption** parameter, select the type of encryption wished: **None**, **WEP Static**, **WPA Personal**, **WPA Enterprise**.

- 10 According to encryption type selected, enter **Login** (if any needed) and **Key/Password**.



NOTE

Login and Password are kept in memory, even if the WIFI is deactivated or the 4000 V2 Platform switch off and restarted.



- 11 In the **AutoConnect** parameter, select if the connection to SSID selected must be done automatically (**On**) or not (**Off**).

Connection to SSID

Once configuration is valid, connect the 4000 V2 Platform to the Wireless network:

- 1 In the Setup screen, press **Connect SSID** menu key.
or

If **AutoConnect** is defined to **On**, the connection is launched automatically.

Once association of Platform with SSID is established, the icon  becomes  to indicate the connection is active.

Configuring the WIFI mode to which the Platform is connected

To work on WIFI with the Platform, configure the **802.11** parameter on the WIFI Setup screen.

- 1 Select the mode of connection:
 - **Config 1 to 4** static mode enabling input of the configuration of 4 sites. If this parameter is selected, the following parameters must be entered:
 - Site Name the user can enter the name of the site in the Edit menu.
 - IP Address IP address of the 4000 V2 Platform
 - IP Mask address of the mask of the sub-network
 - IP Gateway IP address of the machine enabling access outside the sub-network.
 - DNS (Domain Name Server) IP address of the machine providing the IP address on the basis of the name
 - Domain name name of the local network to which the 4000 V2 Platform is connected.

- **Dynamic** in this mode, which requires a DHCP server, the 4000 V2 Platform requests an IP address from this server which will be allocated dynamically if dynamic host configuration is activated on the local network.
After selecting this mode or after power-on, the 4000 V2 Platform tries to establish a connection to obtain an address from a DHCP server. If for any reason, this process fails, the 4000 V2 Platform reverses to static IP address mode with User1 IP address.

Note the IP address of the Platform, to be able to remote screen on PC or to transfer files.

Fig. 44 WIFI connection in Dynamic mode

802.11	
Mode	Dynamic
IP Address	10.33.22.26
IP Mask	255.255.255.128
IP Gateway	10.33.22.1
DNS	10.49.2.132
MAC Addr.	70:F1:1C:47:83:9B
Host	base-4000ng-04955

- 2 Configure the **Proxy** dialog box:
In the **Use proxy** parameter
 - Select **No** if no proxy is used.
 - Select **Manual** to enter manually the **Proxy address**
 - Select **Auto** and enter the **Pac address**.

Creating a network from the 4000 V2 Platform

A WIFI network can be created from the 4000 V2 Platform, in order to associate it to a Smartphone or Tablet.

- 1 From the **Home** page, press **Connectivity > Wireless 802.11**.
- 2 On the **Setup** screen, select the Wlan Mode for WIFI connection: **Ad-hoc (IBSS)** or **AP Master**.
- 3 Press **Create Network** menu key and wait for the network creation.

The network creation on platform is completed once the dialog box is no more displayed.

- 4 On the Smart device, open the Wifi setup age.
- 5 Check the Platform has been detected (SSID identifier displayed in the list of WIFI networks found)
- 6 Click on this SSID and follow the instruction on your Smart Device to link it to the Platform.


Via Ethernet

The connection between 4000 V2 Platform and the PC can be done directly, or via a local network.

Connecting the 4000 V2 Platform and the PC

- 1 Connect the 4000 V2 Platform to the PC via an Ethernet cable, using the USB Ethernet - adapter and an Ethernet cable.


Fig. 45 Connection 4000 V2 Platform and PC

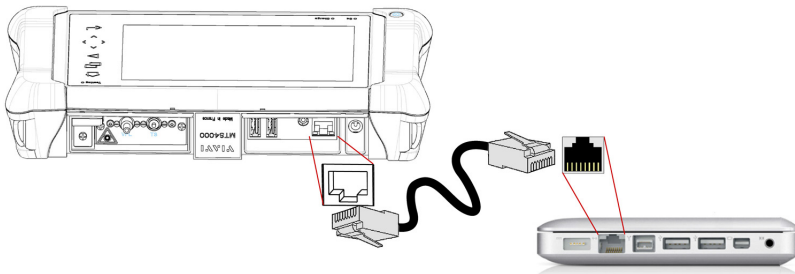

- 2 Make sure the network configuration onto the PC is set to the **Dynamic** mode:
 - a Click on **Start > Control Panel**.
 - b Double click on **Network Connection**.
 - c Double click on **Local Area Connection**.
 - d In the dialog box, click on **Properties**.
 - e Check the parameter **Internet Protocol (TCP/IP)** is selected (☑) and click once on it (underlined in blue)


- f Click on **Properties** button.
- g On the tab **General**, check the parameter **Obtain an IP address automatically** is selected (☉); if not, click to select it.

Fig. 46 Internet Protocol

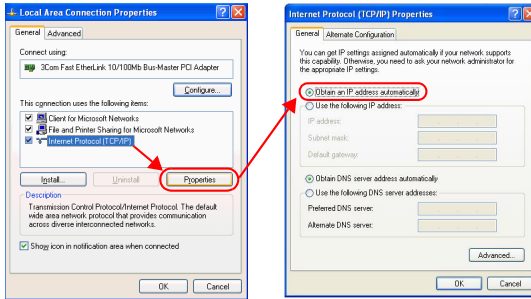

- h Click on **Ok** and close all the dialog boxes opened onto the PC.

Configuring the 4000 V2 Platform via Ethernet

- 1 In the **Home** page, validate the **Connectivity** icon.
- 2 In the connectivity page, validate the **Ethernet** icon .
- 3 In the **I/O Interfaces** box, configure the following parameters:

Ethernet > Mode


Parameters of the local Ethernet network to which the 4000 V2 Platform is connected:

- **Config 1 to 4** static mode enabling input of the configuration of 4 sites. If this parameter is selected, the following parameters must be entered:
 - Site Name the user can enter the name of the site in the Edit menu.
 - IP Address IP address of the 4000 V2 Platform
 - IP Mask address of the mask of the sub-network
 - IP Gateway IP address of the machine enabling access outside the sub-network.
 - DNS¹ IP address of the machine providing the IP address on the basis of the name

- Domain name name of the local network to which the 4000 V2 Platform is connected.
- **Dynamic** in this mode, which requires a DHCP server, the 4000 V2 Platform requests an IP address from this server which will be allocated dynamically if dynamic host configuration is activated on the local network.
After selecting this mode or after power-on, the 4000 V2 Platform tries to establish a connection to obtain an address from a DHCP server. If for any reason, this process fails, the 4000 V2 Platform reverts to static IP address mode with User1 IP address.



NOTE

Once the 4000 V2 Platform is connected to the network, the icon , indicating the connection is working, displays for few seconds.

Proxy > Use proxy

- 1 Select **No** if no proxy is used.
- 2 If **Manual** has been selected, enter the **Proxy Address**.
- 3 If **Auto** has been selected, enter the **Pac Address**.

Fig. 47 Example of configuration for I/O Interfaces box

Note the 4000 V2 Platform IP Address →

Ethernet	
Mode	Dynamic
IP Address	10.33.17.110
IP Mask	255.255.252.0
IP Gateway	10.33.19.254
DNS	10.49.2.132
Domain Name	ds.jdsu.net
MAC Addr.	00:22:BC:56:13:5B
Host	base-4000ng-04955

- 4 Note the IP Address.
- 5 Wait about 10 seconds the connection is established.

The 4000 V2 Platform Interface can now be transferred onto the PC, or the internal memory or USB key contents can be transferred on PC.

1.Domain Name Server

Via Cloud Storage

Principle and prerequisites of the Cloud Storage

The Cloud storage defined the outsourcing of data on distant servers, which avoid the data storage on a local workstation.

The cloud storage onto a 4000 V2 Platform allows to transfer the files from the Platform toward a distant server and vice-versa.

Before configuring the Cloud Storage on Platform, you must first create an account on a Cloud Platform on internet.

The Cloud storage function onto the 4000 V2 Platform works exclusively with sites using the WebDav technology such as CloudSafe (<https://secure.cloudsafe.com/pages/index.html>) or Box (<https://www.box.com/pricing/>).

Once account is created, with WevDav configuration, you get the following information for connection:

- URL
- Login Name
- Login Password

Configuring and connecting to Cloud Storage on the 4000 V2 Platform


Configuring the 4000 V2 Platform

Once an account has been created on the Cloud site, configure the 4000 V2 Platform before establishing the connection:




Before configuring the Cloud Storage, make sure the configuration for Ethernet parameters and Proxy parameters are correctly configured.

See “Ethernet > Mode” on page 74 and “Proxy > Use proxy” on page 75.

- 1 On the **Home** page, press **Connectivity**.
- 2 In the **Connectivity** windows, press **Cloud/File Storage** .
A new page opens

- 3 In the **Url** parameter, enter the URL define for the Cloud server created on internet
- 4 In the **User** parameter, enter your Login created on your account
- 5 In the **Key / Password**, enter the password attributed by the Cloud server.

Fig. 48 Example of configuration

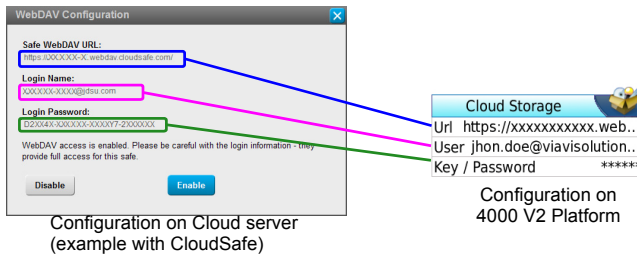


Connecting Cloud Storage

Once configuration has been established on the 4000 V2 Platform, it is ready to be connected with Cloud server:


- 1 Select one parameter of the Cloud Storage window on 4000 V2 Platform
- 2 Press **Connect Cloud Storage** menu key



 
The connection launches



 - 3 Once connection is established, a message displays in the window



- 4 Press any key to continue, and start files transfer.

The icon  is displayed on the upper banner as long as the connection is active.

Disconnecting from Cloud storage

To disconnect the 4000 V2 Platform from Cloud storage:

- 1 Press **HOME** hard key.
- 2 Press **Connectivity > Cloud/File storage**.
- 3 Select a parameter of the **Cloud Storage** window.
- 4 Press **Disconnect Cloud Storage** menu key.

Remote Control

Smart Access Anywhere

The 4000 V2 Platform can be accessible to any network test locations, using a specific function: **Smart Access Anywhere**.

This function allows one distant user, on a PC, to transfer the Platform Interface and work on 4000 V2 Platform or to access the internal memory / USB memory stick contents on the PC and perform files transfer from 4000 V2 Platform to PC and vice-versa.

This feature does not need any license code if the user wants assistance from a VIAVI person located within the VIAVI network.

This feature requires a license code into the unit if the user wants any other assistance/support ("company A" willing to be remotely controlled by "company A or B").

The license **SAA-2K-L2** is used for SmartAccessAnywhere using Ethernet, wifi hotspot connection, or USB / Wifi connection through 3G smartphone

The 4000 V2 Platform can be used in combination with a PC in order to transfer the Platform Interface onto a PC, or to access the internal memory or USB memory stick contents on the PC.

Connection modes


Different kinds of connection are available to access to a distant 4000 V2 Platform.

According to the connection type used, specific requirements are mandatory.

Ethernet or WIFI connection

- 1 Using the Ethernet connection, no specific requirement is needed. The platform is directly connected to Internet via an Ethernet Cable.

Fig. 49 Ethernet connection

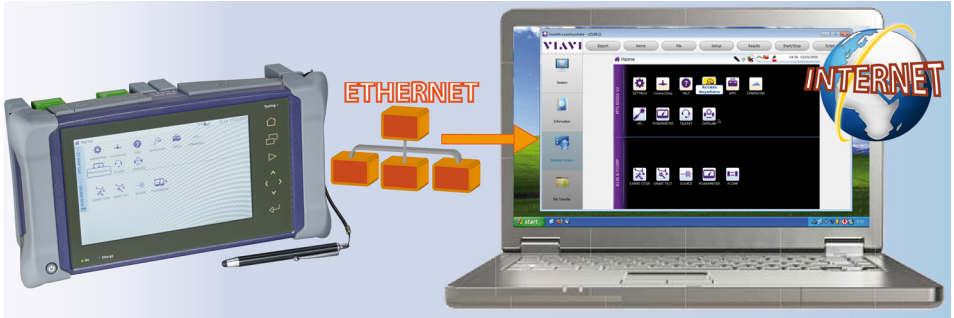

- 2 The WIFI connection can be used to access to 4000 V2 Platform from any location.
This connection is available exclusively if the **WIFI option is installed onto the 4000 V2 Platform** which will be seen remotely.

Fig. 50 WIFI connection



USB/WIFI connection via Smartphone (Tethering)

To access to a 4000 V2 Platform remotely, the connection between the unit and the VIAVI application can be established via a USB cable or WIFI, and through a Smartphone, having Internet Sharing capability via USB or WIFI.

- 1 To establish connection between 4000 V2 Platform and Smartphone using USB, connect the USB cable on 4000 V2 Platform and on Smartphone connector.

Fig. 51 USB connection through Smartphone



- 2 To establish connection between the 4000 V2 Platform and Smartphone using WIFI, the **WIFI option must be installed onto the 4000 V2 Platform**.

Fig. 52 WIFI connection through Smartphone



Pre-requisite for using the Smart Access Anywhere Application

To access to a 4000 V2 Platform from any locations, specific requirements are mandatory:

- a license installed on 4000 V2 Platform which will be accessible from any locations.
- an Ethernet connection (the Platform must have an IP address - see "[Ethernet > Mode](#)" on page 74) and, if the network uses a proxy, this proxy must be configured (see "[Proxy > Use proxy](#)" on page 75).
- the VIAVI application, downloaded for free at the address «<http://smartaccess.updatemyunit.net>».
- port 22 (SSH) or 443 (HTTPS) output opened
- according to connection mode selected:
 - the WIFI option installed on 4000 V2 Platform
 - a USB cable to connect 4000 V2 Platform with Smartphone
 - a Smartphone from given list and having appropriate basic subscription for internet connection sharing

Downloading the VIAVI application on PC

The VIAVI application **Smart Access Anywhere** must be downloaded on the PC which will be connected to the 4000 V2 Platform remotely.




NOTE

It is not necessary to have administrator privileges to install the VIAVI application on PC. This application is just saved on PC.


- 1 On PC, open an internet explorer and type the following address: `http://smartaccess.updatemyunit.net`
- 2 Click on the link **SmartAccessAnywhere_Vxx.xx.xx.zip**
- 3 Select **Save** in the dialog box.
- 4 Open the directory into which has been save the zip file and unzip files into a directory
- 5 Open the directory and double click on **SmartAccessAnywhere.exe**
The Smart Access Anywhere application opens:

Fig. 53 Smart Access Anywhere: Connection page
Enter Access Code
(see step 3 on page 84)

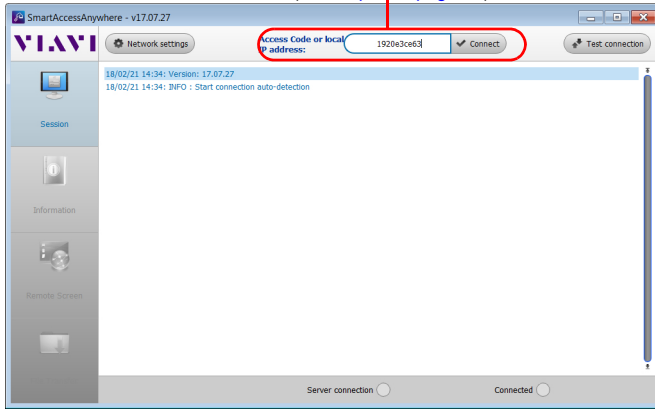

If the software version is not the last one available, a message displays, on the upper part of the screen to indicate the latest version available can be downloaded at the address: <http://smartaccess.updatemyunit.net>.

 Fig. 54 Warning message of a new version available



Downloading the VIAVI application on Tablet/ Smartphone

The VIAVI application **Smart Access Anywhere** can be downloaded on a Smartphone or tablet which will be connected to the 4000 V2 Platform remotely.



NOTE

It is not necessary to have administrator privileges to install the application. This application is just saved on the smartphone or tablet.

- 1 On Smart device, open an internet explorer page and type the following address:
`http://smartaccess.updatemyunit.net`
- 2 Click on the link **SmartAccessAnywhere_Vxx.xx.xx.apk**
The downloading starts.
Some security messages can be displayed.
- 3 Follow the process on the Smart device to confirm the installation of the application on the instrument.
- 4 Once the installation is completed, the icon appears on Tablet/Smartphone.
- 5 Click on the icon to launch the SmartAccess Anywhere application.

Launching the SmartAccess Anywhere application

Once connection is configured, the SmartAccess Anywhere application can be launched

On 4000 V2 Platform


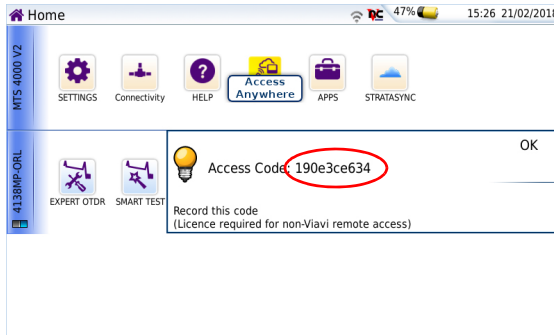
- 1 On the **Home** page, select the **SmartAccess** icon 
As soon as the icon is selected, the 4000 V2 Platform begins to connect to Smart-AccessAnywhere Server.
- 2 Once connection is established with the server, the 4000 V2 Platform displays a message with the code to be used to access to the equipment remotely.

Fig. 55 Access code displayed



- 3 Note this access code and transfer it to the distant user, who will access the unit remotely.
- 4 Press **OK** to hide the message.

On the distant PC


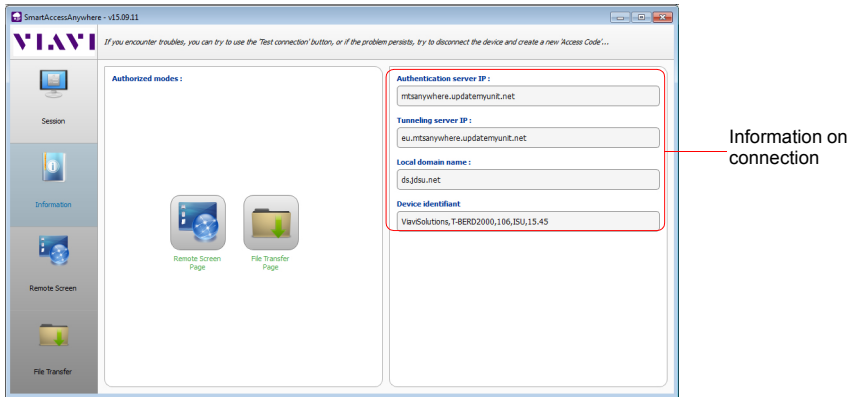
- 1 On the PC of the distant user, once the application is launched, enter the Access Number on the upper part of the screen.
- 2 Click on **Connect** to validate The following screen displays:

Fig. 56 Smart Access Anywhere: Home page



After remote upgrade or reboot, please wait for more than 2 minutes before re-starting the link between the PC and the unit with SmartAccessAnywhere.


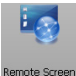
Using Remote screen and File Transfer applications

Once the Introduction page is displayed, the user can work on distant 4000 V2 Platform:

- transfer the interface to work on the unit (perform acquisition, configure the equipment...)
- transfer files from the equipment toward the PC, and vice-versa.


Transferring the interface onto the PC/Smartphone/Tablet


To display the remote 4000 V2 Platform onto the PC:

- 1 On the Introduction page, click on  .
or
On the left menu, click on  .

The current screen of the 4000 V2 Platform displays:

Fig. 57 Smart Access Anywhere: Remote screen
Virtual control buttons bar

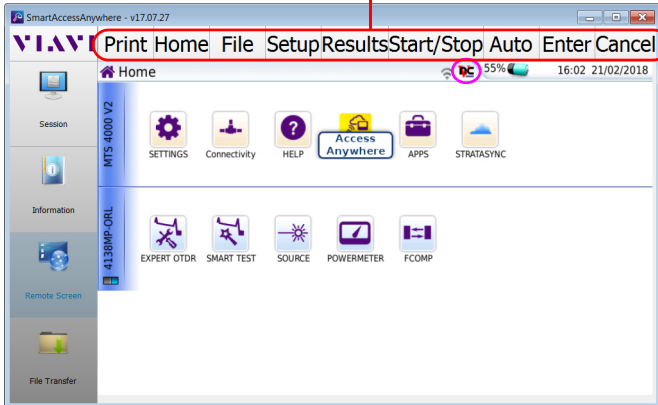



The VNC icon  on the upper banner of the unit indicates the remote screen is active.

- 2 On the upper part of the screen, the virtual control buttons bar is permanently displayed and allows to emulate hard keys.
You may click on any of these buttons to obtain exactly the same results than using the hard keys on the front panel of the 4000 V2 Platform.
- 3 You can use keyboard mouse of the PC to control the 4000 V2 Platform (see [“Equivalence between the keyboard and 4000 V2 Platform” on page 101](#)).

Transferring files


To work on files (onto PC and onto unit):

- 1 On the Introduction page, click on  .

or
On the left menu, click on  .


The file Explorer on PC and the one of the 4000 V2 Platform displays:

Fig. 58 File Transfer page

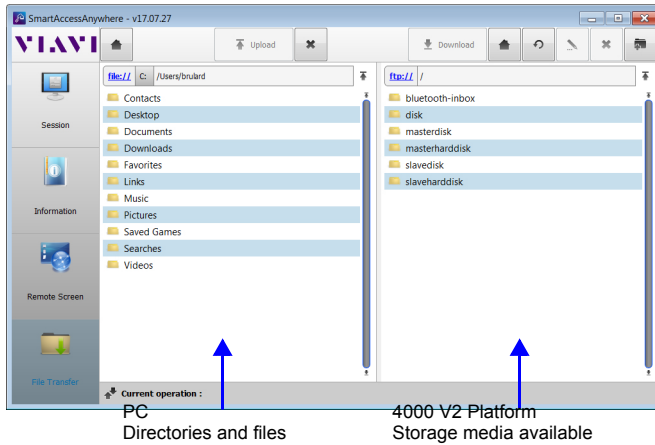

- 2 Double-click on one directory/storage media to display the contents (directories / sub-directories / files)

Navigation buttons

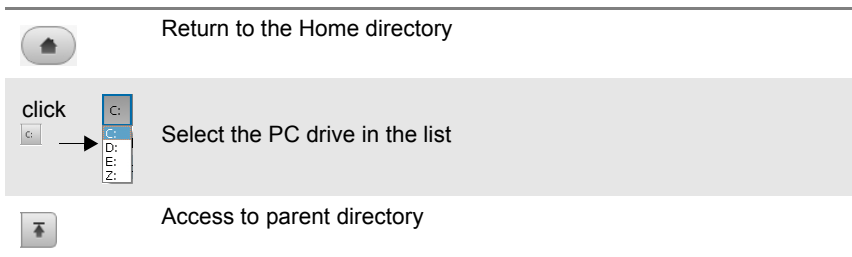


Transferring files from PC to 4000 V2 Platform

- 1 On the 4000 V2 Platform explorer, select the storage media, and if wished the (sub-)directory into which file will be transferred.
- 2 On the PC file explorer, select the file to be transferred

- 3 Click on the button **Upload**  .
At the bottom of the screen, a new banner displays with information on file transfer:


Fig. 59 Information on file transfer

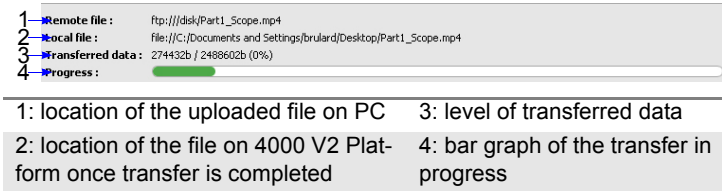

Only one file can be uploaded from PC to 4000 V2 Platform at the same time.

Once transfer is completed, the banner disappears and the transferred file is underlined in blue on 4000 V2 Platform explorer.


Transferring files from 4000 V2 Platform to PC


- 1 On the PC explorer, select the storage media, and if wished the (sub-)directory into which file will be transferred.
- 2 On the file explorer of the 4000 V2 Platform, select the file to be transferred.
- 3 Click on the button **Download**  .
A dialog box open, allowing to modify the location on PC of the file.
- 4 Select the directory into which file will be saved.
- 5 Press **Save** to start the transfer
Under both file explorers, a new banner displays with information on file transfer (see [Figure 58 on page 87](#)).

Once transfer is completed, the banner disappears and the transferred file is underlined in blue on PC explorer.


Working with files and directories on 4000 V2 Platform

 
Renaming file or directory

- 1 Select a file/directory stored on the 4000 V2 Platform hard disk or USB key.
- 2 Click on  .
- 3 In the new dialog box opened, enter a new name for the file/directory, **keeping the file extension**.
- 4 Press **OK** to validate.

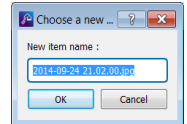


 
Deleting file

- 1 Select a file stored on the T-BERD/MTS-4000 V2 hard disk or USB key.
- 2 Click on  .
- 3 In the new dialog box opened, press **Yes** to confirm the deletion (or **No** to keep the file).



Creating a new directory

- 1 Select the storage and, if wished, the directory into which the new directory will be stored.
- 2 Click on  .
- 3 In the new dialog box opened, enter a name for the new directory (*newdir* is given by default).
- 4 Press **OK** to validate.
The new directory is automatically created at the location selected.



Connection information and settings

Displaying session information


At any time during application use, the information about the session in progress can be displayed.

- 1 Press **Session** menu key on left of the screen



A screen as the following one displays:

Fig. 60 Session page

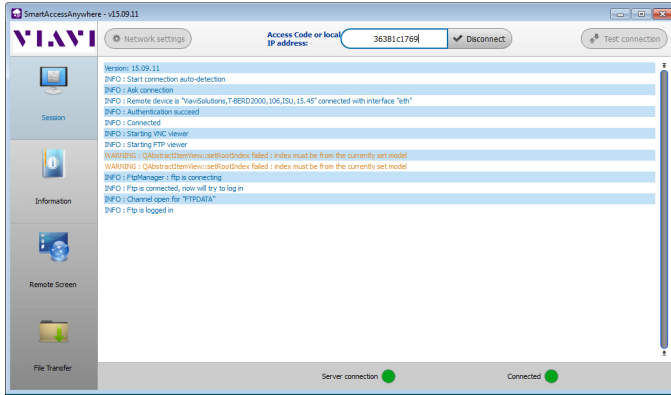

This page gives information on connection «in real time».

Modifying connection settings

To modify the settings for connection to internet:


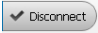

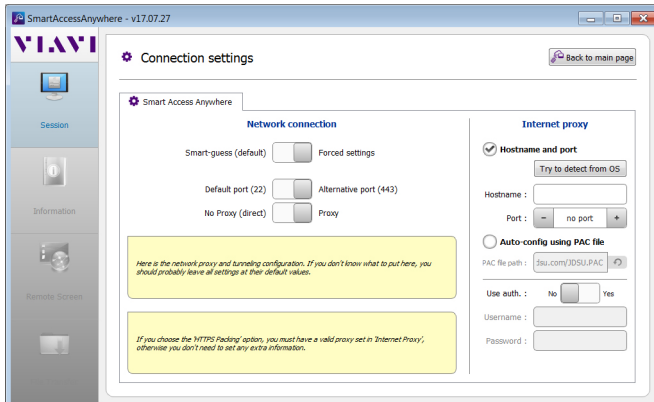
- 1 Press **Session** menu key on left of the screen 
 - 2 Disconnect from application pressing 
 - 3 On the session screen (see [Figure 60 on page 90](#)), press button 
- The following screen displays:

Fig. 61 Connection settings



By default, the connection is defined to **Smart-guess (default)**.



- 4 To modify the current parameters, select **Forced settings**.




The parameters for Port configurations turn automatically active.

- 5 Modify, if necessary, the port used: **Default port (22)** is selected by default
- 6 Select **Alternative port (443)** if necessary
- 7 If the parameter **Alternative port (443)** is selected, you can defined if the proxy is used or not in the following parameter.

The **Internet proxy** configuration is available exclusively if the port selected is **Alternative port (443)** and if the **Proxy** is selected.



It is recommended to configure parameters of connection with your local network administrator, if the default parameters need to be modified.

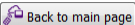- 8 Once configuration is completed, press  .
The **Home** page displays (see [Figure 56 on page 85](#)).

Testing connection

Before entering the Access code to activate the application, the connection to internet can be tested from displayed screen.



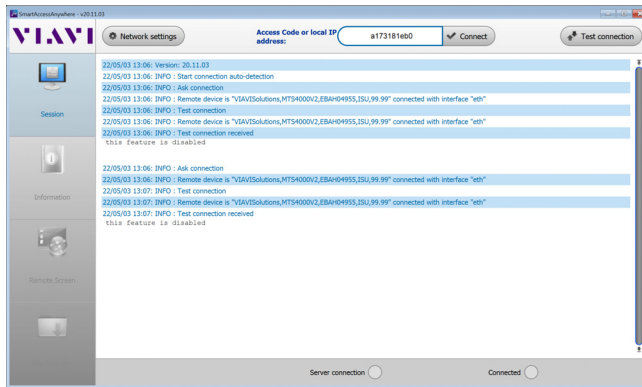

- 1 Open the Smart Access Anywhere application on PC
- 2 Press  button
The test is automatically launched
- 3 Press  to display logs in real time.
Once completed, the results for connection display:
- 4 If connection is valid, enter the access code and establish connection (see

Fig. 62 Test results



"Launching the SmartAccess Anywhere application" on page 83 - "On the distant PC" on page 84).

M2M Link option

If the option SmartAccess Anywhere is available on the Platform, the function M2M Link is also available .

This option allows to transfer data, perform OEO measurements or remote screen between two 4000 V2 Platforms using the Ethernet network.

Establishing connection between two 4000 V2 Platforms

To make two platforms communicate via Ethernet, specific conditions and actions are required.

Before establishing the connection:

- An Internet connection must be established, with any kind of connection; Ethernet, WIFI...
- The distant Platform must be connected to Smart Access function (see [“Launching the SmartAccess Anywhere application” on page 83](#)).
- The SmartAccess code of the distant platform must be known by the operator on local one.

To establish the connection:


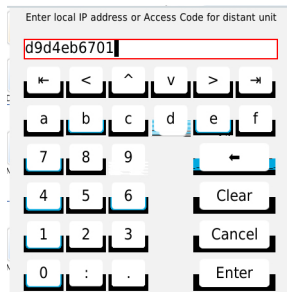

- 1 Validate the **M2M Link** icon on local Platform 
A numeric keypad automatically displays.
- 2 Enter the access code for the distant platform in the numeric keypad.

Fig. 63 Entering the Access Code



- 3 Press **Enter** to validate.
Wait for the connection to be established.
Once connection is valid:
 - a message displays on local Platform and on distant platform to confirm the connection.
 - the **M2M Link** function turns active on distant Platform.
 - the icon  displays on the upper banner, on each Platform.

Both platforms are ready to exchange data, perform OEO measurements or remote screen.


Remote screen function via M2M Link

This enables an operator at one end to take control over another 4000 V2 Platform connected at the other end, using the Ethernet network.


VNC configuration

Before it can be remote-controlled, the 4000 V2 Platform must be configured as explained in [“Configuring the 4000 V2 Platform via Ethernet” on page 74](#).

Establishing communication

- 1 On the caller 4000 V2 Platform, press the **HOME** button, then select and confirm the **M2M** option:
 - If the remote instrument is ready to receive (on standby), the **M2M Link** icon turns yellow, and the icon  appears at the top of the screen: data transfer, remote screen or oeo measurements can now take place.
 - If the remote instrument is not ready to receive, the **M2M Link** icon does not change color and a message is emitted.
- 2 Click next on **Connectivity**.
- 3 In the connectivity screen, click on **Switch to remote screen**.

Your screen is now fully replaced by the distant screen, and everything you do on your 4000 V2 Platform is in fact done on the distant 4000 V2 Platform.

An icon  appears in the top banner of the 4000 V2 Platform.



A slight normal color degradation may be seen on the 4000 V2 Platform controlling a distant instrument.

End of a VNC session

In order to end a VNC session, you can:

- 1 Return to the **Connectivity** page and click on **Return to local screen**. (Recommended solution)
or
Deactivate the **M2M Link** function on either 4000 V2 Platform connected.
A dialog box displays, asking the confirmation of the disconnection.

Press **Yes** to stop the connection between the 2 Platforms.



NOTE

The VNC icon in the top banner of the screen lets you know at all times whether you are in a VNC session or not.

Data Transfer between two Platforms

Once the connection is established between the 2 Platforms via **M2M Link** option, the files can be transferred from the master Platform to the slave one.

- 1 Open the **File Explorer** on the distant Platform
- 2 Select on the local disk or harddisk or USB key, the file(s) or directory to be imported in the local platform
- 3 Select the **Slavedisk**
- 4 Select if necessary a directory
- 5 Press **Edit > Copy** to copy the file(s)/directory on the Platform.

Data Transfer


The 4000 V2 Platform enables to transfer files, from or toward the product using Wifi, Bluetooth or Ethernet connection.

Transferring files via Bluetooth

Once the connection has been established with a bluetooth device:

- 1 On the **Home** page, press **File Explorer** key to go in the File Explorer.
- 2 Select the file(s) to be transferred from the Platform toward the PC.
- 3 Push **Export > Send by Bluetooth** menu keys.
A confirmation message displays once the transfer is completed.

Fig. 64 Confirmation of files sending

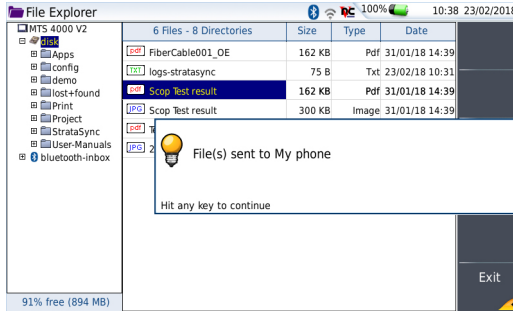

You can also transfer file(s) from the bluetooth device toward the Platform.

In this case, the files received will be stored in a storage media created automatically on the Platform: *bluetooth-inbox*.



WARNING

The files stored in *bluetooth-inbox* will be lost once the 4000 V2 Platform is switched off. Copy/Paste the files to keep toward another storage media (disk, usb key...).

Transferring files to/from a PC via WIFI or Ethernet

Once connection is established between the Platform and the PC:


- 1 On the PC, use an FTP client, and access to internal memory via an internet explorer (I.E, Mozilla Firefox...) or Windows Explorer.
- 2 In the address bar, type the following address (10 . 33 . 22 . 68 being the IP address of the 4000 V2 Platform defined when the connection was configured):
`ftp://mts4000:JDSU@10.33.22.68/disk/`
This allows to access to internal memory.
`ftp://mts4000:JDSU@10.33.22.68/usbflash/`
This allows to access to the contents of the USB memory stick connected to the 4000 V2 Platform.

3 If an identification is required, enter:


- User name: mts4000
- Password: JDSU

The PC then displays the contents of the internal memory or of the USB memory stick from the 4000 V2 Platform.

Fig. 65 Internal memory of the 4000 V2 Platform

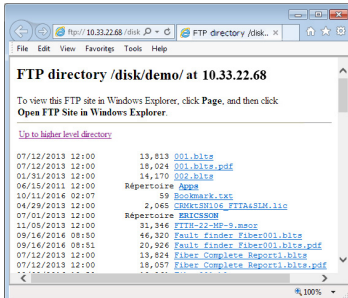

Internal memory open via Internet Explorer

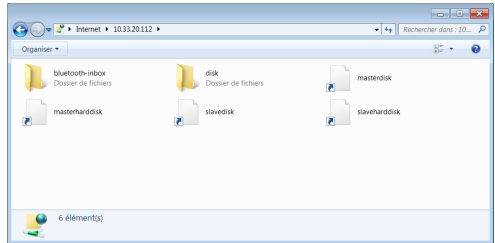

Internal memory open via Windows Explorer

4 If internal memory of the Platform is accessible via Internet Explorer (or any other explorer), right click on one file and click on **Save target as...** to transfer file onto the PC.

If internal memory of the Platform is accessible via Windows Explorer, select one / several files and click on **Copy**, then click on **Paste** on PC to transfer file(s).

Transferring files using Cloud Storage

Once connection between 4000 V2 Platform and cloud storage server is successfully established (see “[Configuring and connecting to Cloud Storage on the 4000 V2 Platform](#)” on page 76), the files can be transferred from one Platform to the other.


- 1 Press **HOME** hard key.
- 2 Press **Explorer** on the **Home** page
In the **Explorer** page, a new storage media is available: **cloud-storage**.



The cloud-storage media is not available when File Explorer is opened from a FO application.

- 3 Transfer the files from the disk or USB memory stick of the 4000 V2 Platform toward the cloud storage or vice-versa:
 - a Select the file(s) to be transferred
 - b Press the **Edit > Copy** or **Cut** menu keys
 - c Select the storage media (and the directory) into which files must be copied.
 - d Press **Paste** menu key

Fig. 66 File Explorer with cloud storage

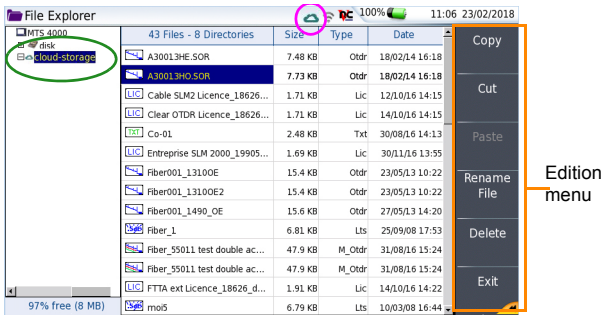

The cloud storage is automatically disconnected once the 4000 V2 Platform is switched off. Reconnect from the System Settings page of the 4000 V2 Platform after the Platform restart.

VNC

The 4000 V2 Platform can be used in combination with a PC in order to transfer the Platform Interface onto a PC, or to access the internal memory or USB memory stick contents on the PC.

The transfer of the interface can be done using a VNC window on PC.




For an intensive use of the deport screen or when it is used via a WAN network, it is strongly recommended to use a dedicated VNC client. The VNC clients recommended are Tight VNC (V 1.2.9 or later) and Real VNC (V 4.1.1 or later).

Transferring the interface on a PC via WIFI or Ethernet

Once the connection is established between the 4000 V2 Platform and the PC, proceed as follow:

- 1 Open Internet Explorer on the PC.
- 2 First check the **Export screen** function is enable on the Platform:
 - a On the **Home** page, press **Settings** icon.
 - b In the **System settings** page, configure the **Export screen** function


Fig. 67 Export Screen configuration

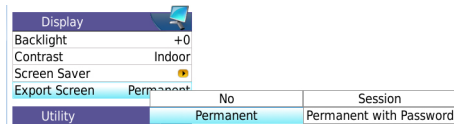

Export screen = Session or Permanent must be confirmed in both cases, in the Interface E/S window.

- **No:** the screen cannot be remote on to a PC or on to another 4000 V2 Platform.
 - **Session Mode:** the Remote screen function is inactive once the 4000 V2 Platform is switched off.
 - **Permanent Mode:** the Remote screen function is still active when the 4000 V2 Platform is switched off and restarted.
 - **Permanent with password**
Same function as the Permanent mode, with an access to the equipment via VNC protected by a password: 42000
- 3 Considering 10.33.22.68 is the IP Address of the 4000 V2 Platform (as shown [Figure 44 on page 72](#)), open, a VNC viewer installed on the pc and enter the address:
10.33.22.68
 - 4 Press **Enter** to validate.
The screen of the 4000 V2 Platform appears offset on your PC.


Fig. 68 VNC window

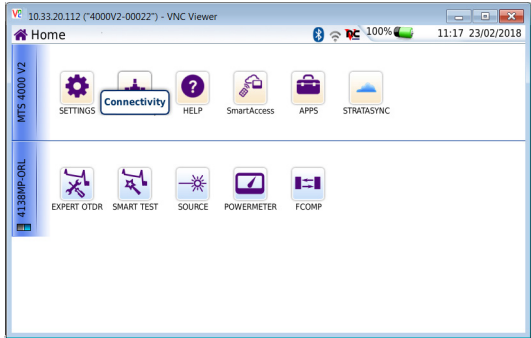

See “Virtual control buttons bar” on page 100 and “Equivalence between the keyboard and 4000 V2 Platform” on page 101 to get information on the deported screen use.



NOTE

Once Remote screen is accessible via VNC, the icon  displays on the upper banner of the screen until the connection is cut or the 4000 V2 Platform is switched off.

Virtual control buttons bar

It is possible to emulate hard keys with Virtual Control buttons. This virtual control buttons bar is especially useful when the 4000 V2 Platform screen is exported on a remote PC. To display those buttons, click once on the top of the screen in the status bar, at the same location as date and time.



The virtual control buttons bar is displayed during a few seconds. You may click on any of these buttons to obtain exactly the same results than using the hard keys on the front panel of the 4000 V2 Platform.

Equivalence between the keyboard and 4000 V2 Platform

The PC keyboard can replaced all the buttons and keys of the 4000 V2 Platform except the **ON/OFF** button:

- The menu keys to the right of the screen are replaced by the function keys **F1** to **F6**.
- The buttons below the screen are equivalent to **Ctrl + a letter** (see table below).
- The direction keys have the same function on the external keyboard and on the 4000 V2 Platform.

Function on the 4000 V2 Platform	External keyboard
HOME	Ctrl + H
SET-UP	Ctrl + U
FILE	Ctrl + F
RESULTS	Ctrl + R
START/STOP	Ctrl + S
EXPORT	Ctrl + P ^a
REBOOT the instrument	Ctrl + Q
Menu keys 1 to 6 (from top to bottom)	F1 → F6
Validate a selection	Entrée/Enter
Deselect a function on the Home page	Escape/Echap.

- a. The Export function is available exclusively on the virtual control buttons bar (see [“Virtual control buttons bar” on page 100](#)).



NOTE

Those equivalences are also valid with a keyboard directly connected to the 4000 V2 Platform via one USB port.

Stratasync


Principle and prerequisites of the Stratasync

Stratasync is a new solution that provides network operators with an agile and centralized way to manage and analyze data from thousands of deployed VIAVI test instruments directly from the cloud. StrataSync is a hosted, cloud-based software application that provides VIAVI instrument asset, configuration, and test-date management.

StrataSync improves technician and instrument efficiency. StrataSync allows to:

- Manages and tracks test instruments
- Collects and analyzes results from the entire network
- Informs and trains the workforce

Fig. 69 Principle of the Stratasync application

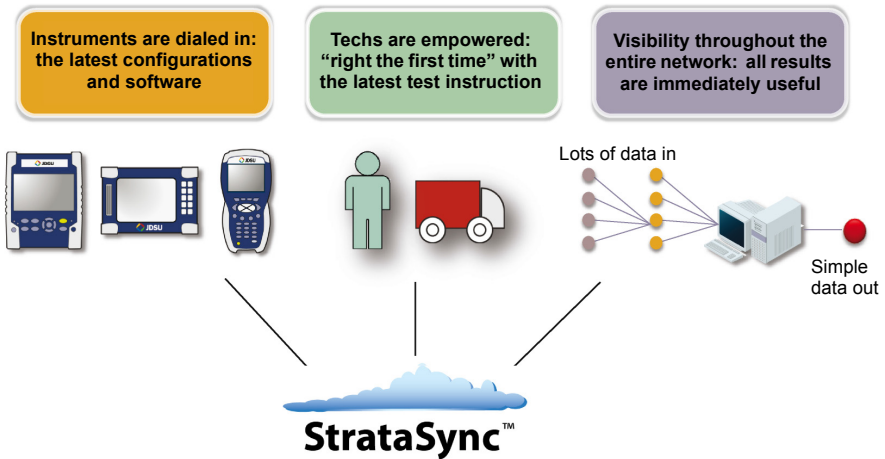

Pre-requisites for using the Stratasync with the 4000 V2 Platform

The user must have subscribed to Stratasync, and by consequence, he must have acquired an **account Identifier** and a **password**.

The Ethernet and Proxy parameters must have been correctly configured in the System Settings page of the 4000 V2 Platform (see “Ethernet > Mode” on page 74 and “Proxy > Use proxy” on page 75).

Configuring and synchronizing the 4000 V2 Platform

The 4000 V2 Platform can be configured to be synchronized with the Stratasync.


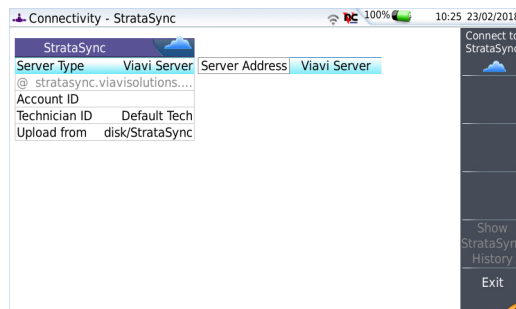
- 1 On the **Home** page, press **Connectivity**.
- 2 Check the configuration of the **Ethernet** and **Proxy** parameters (see “Configuring the 4000 V2 Platform via Ethernet” on page 74
- 3 In the **Connectivity** windows, press **Stratasync** .
- 4 Configure the Stratasync parameters:
 - a In the **Server Type** parameter, the **Viavi Server** is selected by default and it is recommended to keep this parameter. However, the user can select if necessary the **Server Name** parameter and enter the name in the following parameter.
 - b In the **Account ID** parameter, enter the same identifier as the one used to access to Stratasync.
 - c The **Technician ID** parameter is automatically fulfilled after synchronization (if it has been defined by the administrator of the Stratasync)
 - d To upload the files from a directory onto the 4000 V2 Platform toward Stratasync, select the parameter **Upload from** and press right arrow key to enter the directory path (example: `disk/Stratasync`). The directory Stratasync is defined by default.

Fig. 70 Stratasync configuration



Connecting the 4000 V2 Platform to Stratasync

Once 4000 V2 Platform is configured in the **Stratasync setup** page:



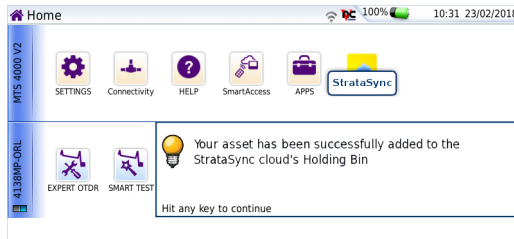
- 1 In **Home** page, press Stratasync icon .
The synchronization with Stratasync starts
The icon  displays on the upper banner of the 4000 V2 Platform during synchronization.
Once the icon is no more displayed, this mean that the synchronization is completed.
- 2 For the first synchronization only, a message displays on the 4000 V2 Platform to indicate the addition of the equipment in Stratasync.

Fig. 71 First synchronization - Message on 4000 V2 Platform




The 4000 V2 Platform is now available in Stratasync.

GPS option

If a USB GPS receiver is connected to a USB port of the Platform, and if the GPS license has been installed onto the equipment (see [“Install Software License” on page 173](#)):

When connecting the receiver, a popup displays, and a satellite icon is shown in yellow (search mode).

Fig. 72 GPS connection in progress

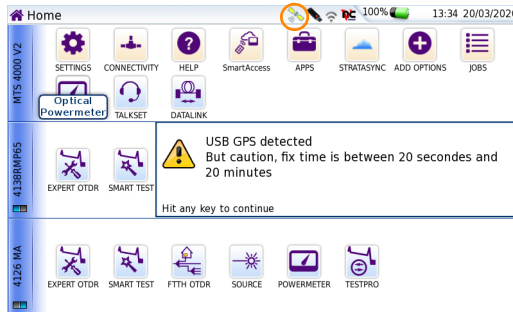

NOTE

If the GPS receiver is connected to USB port but the license not installed, a pop up window displays on the Platform.

Once GPS is active:


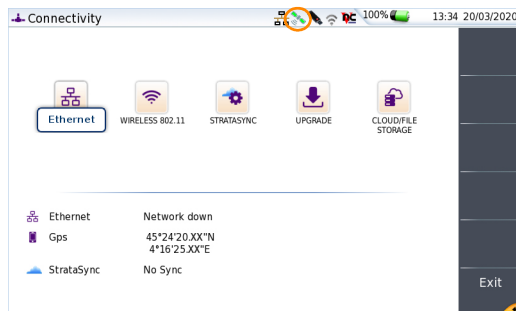
- the GPS coordinates of this equipment are displayed on the Connectivity screen
- the icon  displays on the upper banner as long as the GPS is detected.


Fig. 73 Platform GPS coordinates



Once the GPS receiver is disconnected, or in case of loss of GPS data, the current position is displayed on the Connectivity screen for one hour. After one hour, the satellite will disappear.

Click on **Erase memorized position** to delete the displayed position from the Connectivity screen.

Fig. 74 Erase memorized position

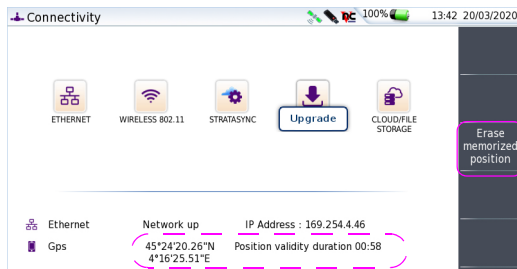

Report generation with GPS option

If the GPS receiver is connected and detected onto the Platform, at the end of a measurement, the GPS data is provided on the report header, generated from this measurement.

Fig. 75 Report header with GPS coordinates

Print Date : 20/03/2020 14:07

File : repgps.msor.pdf

VIavi	Cable Id :						Fiber Id : Fiber Id3 6	
	Location A :						Location B :	
	Job Id :						Technician Id :	
	GPS : 45°24'20.39"N 4°16'25.48"E							
MTS 4000 V2 (S/N EBAH00029)		4138RMP65 (S/N 3)				Date : 20/03/2020 14:06		
Test Setup	1550nm	3ns	500m	16cm	20.0s	1.46800(G652 G657)	-81.0 dB	
OTDR EXPERT								
Alarms								
Thresholds	None							
Summary	Filename	Laser nm	Link Loss dB	Link Orf dB	Fiber End m	Direction	Event	Alarms
	repgps.msor	1550	---	---	19.78	A -> B	2	



NOTE

The GPS coordinates are not available on the PDF report if it has been generated from a saved file.

Applications

Several desktop applications are provided to you, thanks to the integration of free software released under the free licences (GPL, LGPL, BSB or other). Their purpose is to bring more functionality to the 4000 V2 Platform. **VIAVI doesn't provide any warranty or support regarding these free software.**

To access desktop applications, press the button **HOME**, and the soft key **APPS**.


The topics discussed in this chapter are as follows:

- ["PDF Reader" page 110](#)
- ["Text Editor" page 111](#)
- ["Calculator" page 112](#)
- ["File Explorer" page 113](#)

PDF Reader

The simplest way to open a pdf file is to press the Multi-views key and select **File** to open the Explorer.. Look for your file and then select **Load >Confirm Load** to load the corresponding file. The file opens automatically in the PDF viewer.


Another way used to open a pdf document is to press **Home > APPS** and select the **PDF Reader** icon.

The PDF Reader opens but without document. To open a PDF document, click on the icon , and select a document in the file explorer dialog box.

Interacting with a PDF document

Once your document is open, you may browse through different pages very quickly, zoom to a particular level, rotate the page... All these features are available via buttons on the screen.

Figure 76 PDF Viewer Graphical User Interface

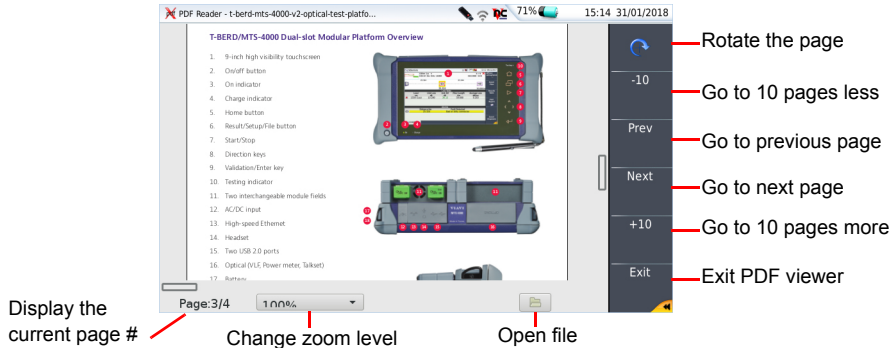

The buttons on the right are pressed using the functions keys of the 4000 V2 Platform, the touchscreen or via the mouse. The buttons on the bottom of the PDF viewer, may only be used with a mouse or a touchscreen.

Text Editor

The Text Editor application allows to enter text on the 4000 V2 Platform and save it into a txt file


Text Editor page

To open the Text editor:

- 1 In the **Home** page, press the **APPS** key
- 2 In the **Application** screen, select the icon **Text Editor**.
The icon is framed in white
- 3 Press **ENTER** to validate the selection and open the Text Editor application.
- 4 If the Platform is not connected to a pc via VNC or with an external keyboard, select Keyboard to display a keyboard at the bottom of the screen to enter the text.

Connected to a PC or an external keyboard, enter the text using the keyboard (of the pc).

Figure 77 Text Editor application

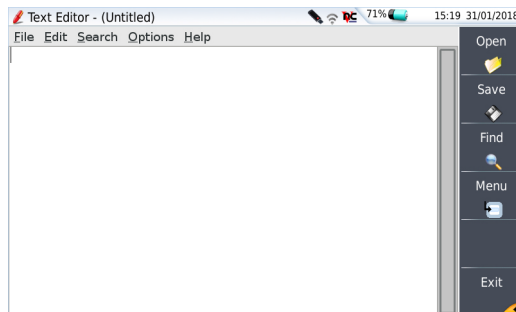


Saving the text in a file

Once the text is entered, you can save it in a file onto the 4000 V2 Platform.


- 1 Click on **Save** menu key.
- 2 In the new dialog box, select the folder in which the file must be saved

- 3 Enter a name for the file with the file extension (.txt or .csv if it must be opened with the 4000 V2 Platform).

Figure 78 Save file

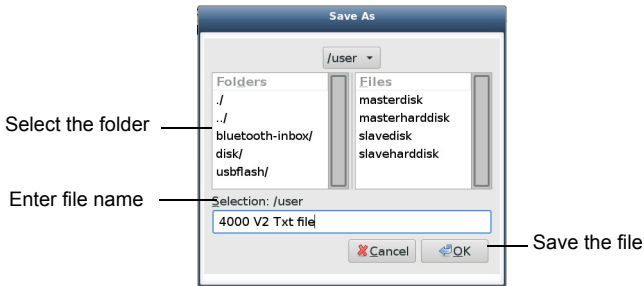

- 4 Click on **Ok** to validate
The file is saved and still opened
 - You can modify it and click on **Save** at any time
 - If you modify the file and click on **Save as**....you can choose another folder and/or another name

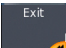Press  to exit the text editor and go back to the **Applications** page.


Press **HOME** to go back to the **Home** page, and keep the application active.


Calculator


A calculator can be displayed and used onto the 4000 V2 Platform.

- 1 In the **Home** page, press the **APPS** key
- 2 In the **Application** screen, select the icon **Calculator**.
The icon is framed in white
- 3 Press **ENTER** to validate the selection and open the Calculator

Figure 79 Calculator

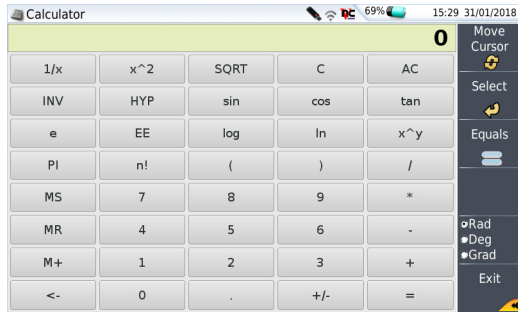

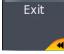Press  to exit the Calculator and go back to the Application page.

Press **HOME** button to go back to the **Home** page, and keep the **Calculator** application active (the icon  is still displayed on the upper banner).

File Explorer

This key allows to directly open the MTS/T-BERD 4000 explorer, where all the files are stored (traces, pdf files...).

The explanation about the explorer are available in [Chapter 10 “File management” on page 139](#).

Job Manager option

This chapter describes to use the Job Manager application on the 4000 V2 Platform, if the license option has been purchased with the equipment, or acquired later.

Topics described in this chapter are as follows:

- [“Principle of the Job Manager” on page 116](#)
- [“Creating a test plan and loading it on the Platform” on page 117](#)
- [“Performing tests and generating reports” on page 134](#)
- [“Other functions on Job Manager screen” on page 137](#)

Principle of the Job Manager


The Job Manager option simplifies and automates your network test. The advantages of the Job Manager:

- Summarize reports
- Ensure specifications
- Reduce Typing
- Speed up testing

The different steps for Job Manager are:

- 1 Create your test plan
- 2 Load it (job file) on the Platform
- 3 Run Test from the Job Manager application installed on Platform
- 4 Create a single, consolidated report, uploaded in Stratasync

Fig. 80 Job Manager process

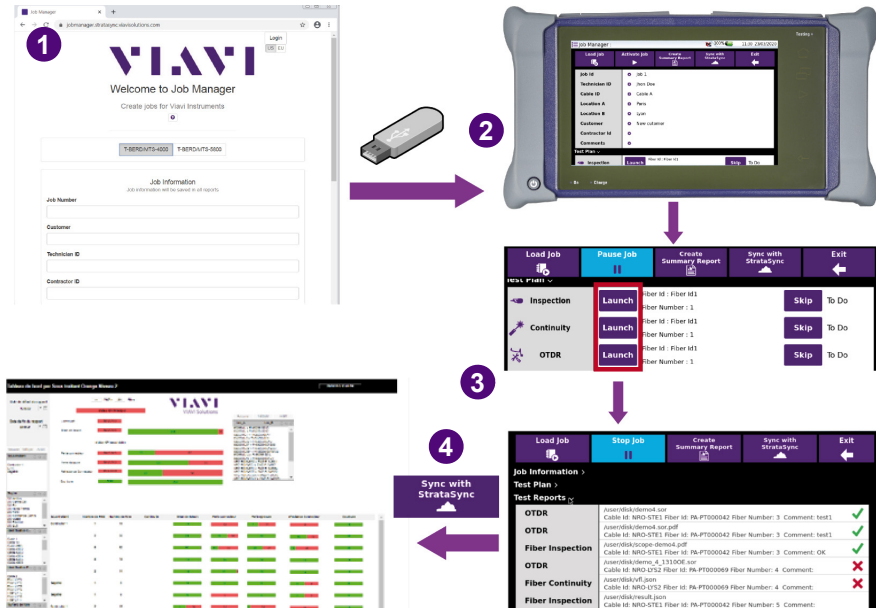


Creating a test plan and loading it on the Platform


Pre-requisites

It is strongly recommended to use Google Chrome to create the test plan/ / job scenario.

- 1 In Google Chrome, enter the following address: <https://jobmanager.strata-sync.viavisolutions.com/>.
- 2 Select the product T-BERD/MTS-4000.

Fig. 81 Job Manager Home page - select T-BERD/MTS-4000

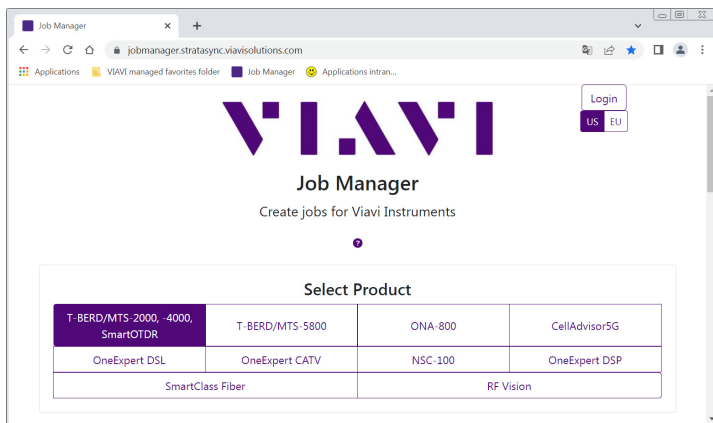

Click on the icon  to display videos explaining how to create and save test plans.

Creating a test plan

The Job file creation is divided into two parts:

- the Job Information
- the Test Plan

Job Information

The **Job information** window allows to configure the job with parameters which will be used for all reports!:

- 1 Select T-BERD/MTS-4000 to create the job file for the 4000 Platform.
- 2 Enter the Job information for:
 - Job Number
 - Customer
 - Technician ID
 - Contractor ID
 - Location A and Location B
 - Cable ID
- 3 If necessary, select the logo file (`logo.jpg` or `logo.png`) which must be saved in the directory `disk` of the Platform, and named `logo`. This logo will be added to the generated reports.

Report Logo File

Optional file name of the logo image to add to reports. This file should be in the following location on the instrument: `/user/disk/logo.jpg`



NOTE

The Job Information parameters can be entered/modified, from the Job Manager screen of the Platform: see [“Modifying the Job Information from Platform”](#) on page 133.

Configuring the Test Plan

In the Test Plan window:

Click on **Add Test** or **Add Multiple Tests** to add one or several tests to the Job manager.

Adding one single Test

Click on **Add test** to add one test or several test one by one to the job file

In the window select the kind of test to be performed:

- Fiber Inspection
- Fiber Continuity
- OTDR
- Bidirectional IL/ORL
- FCOMP-PRO
- Manual Step



CAUTION

If a parameter is not defined in the Test Plan of the web interface, it will be defined with the parameter defined in the Setup of the Platform.

Fiber Inspection

- 1 Select the test type **Fiber Inspection**:

Fig. 82 Fiber Inspection test configuration

Select a test type


Fiber ID

Fiber Number

Profile

- 2 Enter the Fiber ID
- 3 Enter the Fiber Number.
- 4 Select the Profile to be used for the test: **SM UPC / SM APC / MM / SM PC & Fiber-Stub / Ribbon, SM APC.**


Click on  to reduce the window.

Click on  to add a new test (fiber inspection or any other one)

Fiber Continuity

- 1 Select the test type **Fiber Continuity**.


Fig. 83 Fiber continuity test configuration

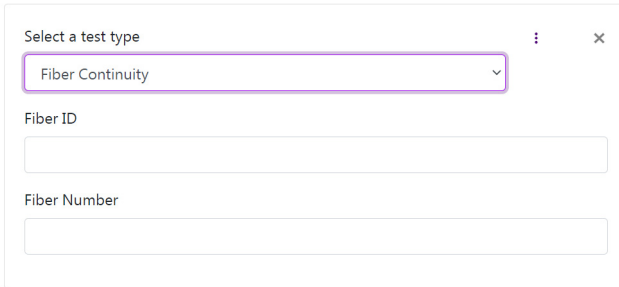

The screenshot shows a configuration window for a Fiber Continuity test. At the top, there is a dropdown menu labeled "Select a test type" with "Fiber Continuity" selected. Below this are two text input fields: "Fiber ID" and "Fiber Number". The window has a close button (X) in the top right corner and a menu icon (three vertical dots) to the left of the close button.

- 2 Define the **Fiber Number**.
- 3 Enter the **Fiber Identification**.

Click on  to reduce the window.

Click on  to add a new test (fiber continuity or any other one)

OTDR

- 1 Select the test type **OTDR**.

Fig. 84 OTDR Test configuration

Select a test type

OTDR

Fiber ID

Fiber Number

OTDR Topology

Expert-SM

Launch Cable

The distance (in m) of the launch cable used.

Receive Cable

The distance (in m) of the receive cable used.

Loopback Cable

The distance (in m) of the loopback cable used.

Alarms

Default

The name of the alarms standard to be used for pass fail criteria.

Configuration File

Optionally enter the file name of a config file to automatically load. This file should be in the following location on the instrument:

- 2 Enter the **Fiber Identification**.
- 3 Define the **Fiber Number**.
- 4 Select the **OTDR Topology** to be used for otdr acquisition and available on the Platform:

- Expert-SM
- Expert-P2P
- Expert-PON
- Expert-MM
- SmartTest-SM
- SmartTest-MM
- FTTA-SM
- FTTA-MM
- FTTH
- Loopback
- Enterprise-SM
- Enterprise-MM


- 5** Whatever is the **OTDR topology** selected, enter the distance (in m) of:
- the **Launch Cable**
 - the **Receive Cable**
 - the **Loopback Cable**

- 6** Define the **Alarms** thresholds to be defined for the acquisition:
- Default
 - TIA-568-3 / TIA-568-3 RL35
 - ISO/IEC 11801 (2002) / (2010)
 - ISO/IEC 14763-3 (2006) / (2014)
 - G697/G.98x PON
 - G697/IEEE PON
 - User

For each value of thresholds, refer to Module User Manual.

- 7** To apply a pre-defined configuration, available in a configuration file saved on the 4000 Platform *disk*, enter the path of the configuration file (with its extension *.fo_cfg*) in the **Configuration File** field.

Fig. 85 Configuration file

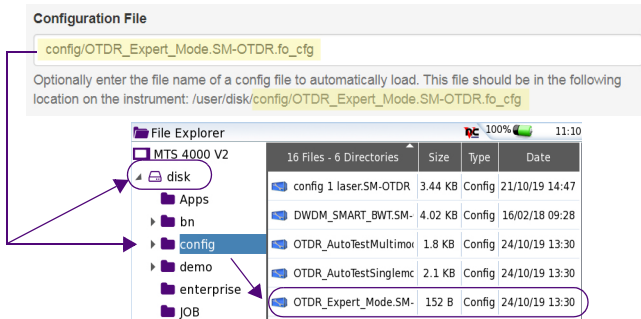

Click on to reduce the window.

Click on to add a new test (otdr or any other one).

Bidirectional IL/ORL


- 1 Select the test type **Bidirectional IL/ORL**.

Fig. 86 Bidirectional Test configuration

The image shows a 'Bidirectional Test configuration' dialog box. It has a 'Select a test type' dropdown menu with 'Bidirectional IL/ORL' selected. Below are input fields for 'Fiber ID', 'Fiber Number', and 'Fiber Type' (set to 'Simplex'). There is a 'Measurement Sequence' dropdown menu with 'IL+ORL' selected. At the bottom, there is a 'Configuration File' text input field. A note at the bottom of the dialog reads: 'Optionally enter the file name of a config file to automatically load. This file should be in the following location on the instrument:'.

- 2 Enter the **Fiber Identification**.
- 3 Define the **Fiber Number**.
- 4 Define the **Fiber Type**.
- 5 Select the **Measurement Sequence**: **IL + ORL** or **IL**.
- 6 To apply a pre-defined configuration, available in a configuration file saved on the 4000 Platform *disk*, enter the path of the configuration file (with its extension *.fo_cfg*) in the **Configuration File** field (see [Figure 85](#) on page 123).


Click on  to reduce the window.



Click on  to add a new test (Bidirectional IL/ORL or any other one).

FCOMP-PRO

- 1 Select the test type **FCOMP-PRO**.

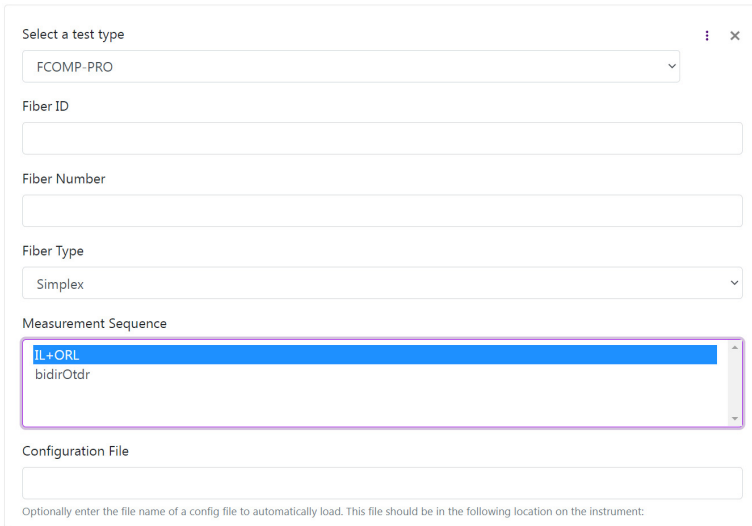Fig. 87 FCOMP-PRO test configuration



Select a test type  

FCOMP-PRO

Fiber ID

Fiber Number

Fiber Type

Simplex

Measurement Sequence

IL+ORL
bidirOtdr


Configuration File

Optionally enter the file name of a config file to automatically load. This file should be in the following location on the instrument:

- 2 Enter the **Fiber Identification**.
- 3 Define the **Fiber Number**.

- 4 Define the **Fiber Type**.
- 5 Select the **Measurement Sequence**: **IL + ORL** and / or **bidirectional OTDR**.
- 6 To apply a pre-defined configuration, available in a configuration file saved on the 4000 Platform disk, enter the path of the configuration file (with its extension .fo_cfg) in the **Configuration File** field (see [Figure 85 on page 123](#)).


Click on  to reduce the window.

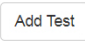Click on  to add a new test (Bidirectional IL/ORL or any other one).

Manual Step


- 1 Select the test type **Manual Step**.

Fig. 88 Manual Step test configuration

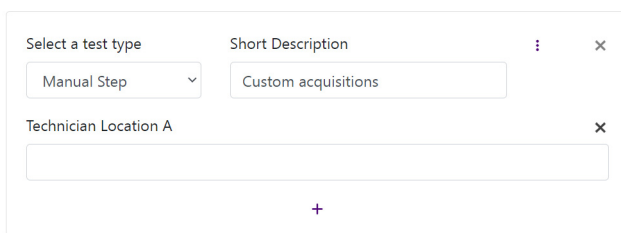

- 2 In Test Label, define an optional custom label for this test.
- 3 Click on **+** and define a new label..
- 4 Click again on **+** to add a second label.
- 5 Define each label.

Click on  to reduce the window.

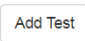Click on  to add a new test (manual step or any other one)

Adding Multiple Tests

If several tests must be performed for different fibers, the Test Plan can be configured to automatically perform a series of tests for a series of fibers.


- 1 Click on **Add Multiple Tests**.
- 2 In the new window, two steps are required:

- Create and apply a Label list.
- Configure the test

Creating a Label List and loading it for Job Manager

1 Creating a label list:

- In the **Add Multiple Tests** window, click on the link [Label List Template](#).
A csv file is loaded.
- Click on the file at the bottom of the Google Chrome window to open it on a spreadsheet program.
- Modify if wished:
 - the first parameter, fiberNumber
 - the second parameter **fiberId** «Label» by another identification (example: Fiber 1, Fiber 2...)
- Save the .csv file on your PC.

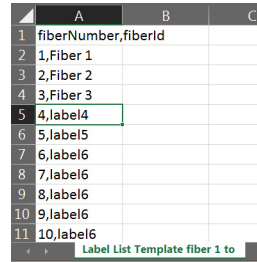

	A	B	C
1	fiberNumber,fiberId		
2	1,Fiber 1		
3	2,Fiber 2		
4	3,Fiber 3		
5	4,label4		
6	5,label5		
7	6,label6		
8	7,label6		
9	8,label6		
10	9,label6		
11	10,label6		

2 Loading the label list:

- In the **Add Multiple tests** window, click on **Choose File** button and select the csv file just created.
- Click on **Open** button in the dialog box.
- The series of Fibers, with their numbers and identification, displays.

Fig. 89 Label list

1 Create the label list file (.csv)

Labels
 Label List (.csv)
 Choose File No file chosen

Label List Template Fiber 1 to 10.csv

Fiber Number	Fiber ID
1	Fiber 1
2	Fiber 2
3	Fiber 3
4	Fiber 4
5	Fiber 5
6	Fiber 6
7	Fiber 7
8	Fiber 8
9	Fiber 9
10	Fiber 10

Label List Template Fiber 1 to 10.csv

2 Load the label list on Job Manager for Multiple tests

Add Multiple Tests

Fiber Inspection Fiber Continuity OTDR

Labels: Fiber Inspection OTDR

Label List (.csv)
 Choose File Label List Template Fiber 1 to 10.csv

- Fiber Number: 1 Fiber ID: Fiber 1
- Fiber Number: 2 Fiber ID: Fiber 2
- Fiber Number: 3 Fiber ID: Fiber 3
- Fiber Number: 4 Fiber ID: Fiber 4
- Fiber Number: 5 Fiber ID: Fiber 5
- Fiber Number: 6 Fiber ID: Fiber 6
- Fiber Number: 7 Fiber ID: Fiber 7
- Fiber Number: 8 Fiber ID: Fiber 8
- Fiber Number: 9 Fiber ID: Fiber 9
- Fiber Number: 10 Fiber ID: Fiber 10


Selecting and configuring the tests

- 1 Select the tests to be performed: click on each test, **in the order in which they should be performed.**

NOTE

The order of the tests cannot be modified once tests are selected. You must deselect the tests and re select one by one, in the order in which they should be performed.

For example: select Fiber Inspection, then OTDR to perform first the fiber inspection, then the OTDR test of the fiber.

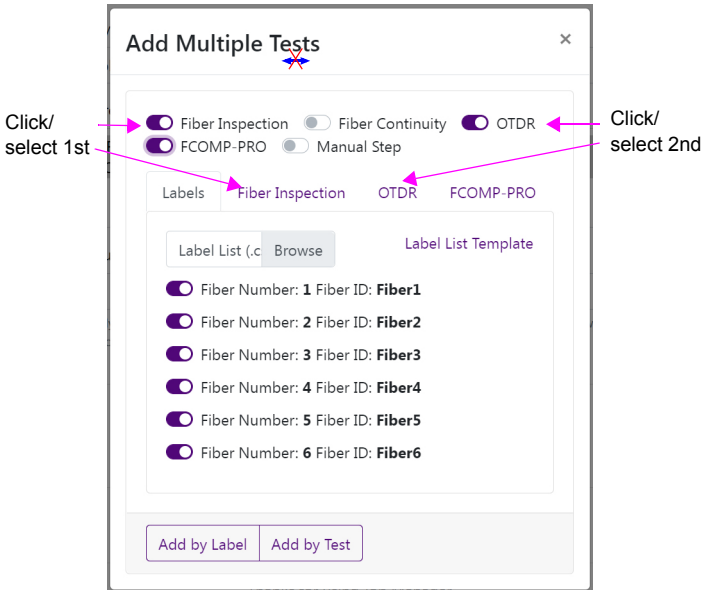

- 2 Configure the selected test:
- Fiber Inspection: see [“Fiber Inspection” on page 119](#).
 - Continuity: see [“Fiber Continuity” on page 120](#).
 - OTDR: see [“OTDR” on page 120](#).
 - FCOMP-PRO: see [“FCOMP-PRO” on page 124](#)
 - Manual Step: see [“Manual Step” on page 125](#)



NOTE

As the **Fiber Number** and **Fiber ID** parameters are configured in the Label list, they are not configurable in the Multiple test window.

Adding the multiple tests plan to Job manager

Once Label List and Tests are configured, click on:

- **Add by Label:** the tests are performed according to the order of the label list.
- **Add by test:** the first test is performed for all labels, then the second test is performed for all labels...

Example of Multiple Tests plan for Job file:

- The Label list template loaded is configured with
 - fiberNumber: **1, 2, 3...6**
 - fiberId: **Fiber 1, Fiber 2, Fiber 3... Fiber 6**

- The tests selected:
 - first test: **Fiber Inspection**
 - second test: **OTDR**

Press **Add by Label =>**

Tests for Label 1	<table border="1"> <tr> <td>Fiber Inspection Fiber Number: 1 Fiber ID: Fiber1</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>OTDR Fiber Number: 1 Fiber ID: Fiber1</td> <td>:</td> <td>×</td> </tr> </table>	Fiber Inspection Fiber Number: 1 Fiber ID: Fiber1	:	×				OTDR Fiber Number: 1 Fiber ID: Fiber1	:	×
Fiber Inspection Fiber Number: 1 Fiber ID: Fiber1	:	×								
OTDR Fiber Number: 1 Fiber ID: Fiber1	:	×								
Tests for Label 2	<table border="1"> <tr> <td>Fiber Inspection Fiber Number: 2 Fiber ID: Fiber2</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>OTDR Fiber Number: 2 Fiber ID: Fiber2</td> <td>:</td> <td>×</td> </tr> </table>	Fiber Inspection Fiber Number: 2 Fiber ID: Fiber2	:	×				OTDR Fiber Number: 2 Fiber ID: Fiber2	:	×
Fiber Inspection Fiber Number: 2 Fiber ID: Fiber2	:	×								
OTDR Fiber Number: 2 Fiber ID: Fiber2	:	×								
Tests for Label 3	<table border="1"> <tr> <td>Fiber Inspection Fiber Number: 3 Fiber ID: Fiber3</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>OTDR Fiber Number: 3 Fiber ID: Fiber3</td> <td>:</td> <td>×</td> </tr> </table>	Fiber Inspection Fiber Number: 3 Fiber ID: Fiber3	:	×				OTDR Fiber Number: 3 Fiber ID: Fiber3	:	×
Fiber Inspection Fiber Number: 3 Fiber ID: Fiber3	:	×								
OTDR Fiber Number: 3 Fiber ID: Fiber3	:	×								
...	...									
Tests for Label 6	<table border="1"> <tr> <td>Fiber Inspection Fiber Number: 6 Fiber ID: Fiber6</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>OTDR Fiber Number: 6 Fiber ID: Fiber6</td> <td>:</td> <td>×</td> </tr> </table>	Fiber Inspection Fiber Number: 6 Fiber ID: Fiber6	:	×				OTDR Fiber Number: 6 Fiber ID: Fiber6	:	×
Fiber Inspection Fiber Number: 6 Fiber ID: Fiber6	:	×								
OTDR Fiber Number: 6 Fiber ID: Fiber6	:	×								

Press **Add by Test =>**

Fiber Inspection test for Label 1, 2, 3...10	<table border="1"> <tr> <td>Fiber Inspection Fiber Number: 1 Fiber ID: Fiber1</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>Fiber Inspection Fiber Number: 2 Fiber ID: Fiber2</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>Fiber Inspection Fiber Number: 3 Fiber ID: Fiber3</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td style="text-align: center;">...</td> <td colspan="2"></td> </tr> <tr> <td>Fiber Inspection Fiber Number: 6 Fiber ID: Fiber6</td> <td>:</td> <td>×</td> </tr> </table>	Fiber Inspection Fiber Number: 1 Fiber ID: Fiber1	:	×				Fiber Inspection Fiber Number: 2 Fiber ID: Fiber2	:	×				Fiber Inspection Fiber Number: 3 Fiber ID: Fiber3	:	×				...			Fiber Inspection Fiber Number: 6 Fiber ID: Fiber6	:	×
Fiber Inspection Fiber Number: 1 Fiber ID: Fiber1	:	×																							
Fiber Inspection Fiber Number: 2 Fiber ID: Fiber2	:	×																							
Fiber Inspection Fiber Number: 3 Fiber ID: Fiber3	:	×																							
...																									
Fiber Inspection Fiber Number: 6 Fiber ID: Fiber6	:	×																							
OTDR test for Label 1, 2, 3...10	<table border="1"> <tr> <td>OTDR Fiber Number: 1 Fiber ID: Fiber1</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>OTDR Fiber Number: 2 Fiber ID: Fiber2</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td>OTDR Fiber Number: 3 Fiber ID: Fiber3</td> <td>:</td> <td>×</td> </tr> <tr> <td colspan="3"> </td> </tr> <tr> <td style="text-align: center;">...</td> <td colspan="2"></td> </tr> <tr> <td>OTDR Fiber Number: 6 Fiber ID: Fiber6</td> <td>:</td> <td>×</td> </tr> </table>	OTDR Fiber Number: 1 Fiber ID: Fiber1	:	×				OTDR Fiber Number: 2 Fiber ID: Fiber2	:	×				OTDR Fiber Number: 3 Fiber ID: Fiber3	:	×				...			OTDR Fiber Number: 6 Fiber ID: Fiber6	:	×
OTDR Fiber Number: 1 Fiber ID: Fiber1	:	×																							
OTDR Fiber Number: 2 Fiber ID: Fiber2	:	×																							
OTDR Fiber Number: 3 Fiber ID: Fiber3	:	×																							
...																									
OTDR Fiber Number: 6 Fiber ID: Fiber6	:	×																							

Saving the Job Manager file and loading it on Platform

Once the Job Information and Test Plan are created, the Job file can be saved, in order to be loaded onto the Platform Job Manager application.

- 1 At the bottom of the Job Manager web page, click on **Save Job**.
The json file is automatically created and saved by default in the **Downloads** folder.

The filename of the json file is:

- job_.job.json if the Job Number parameter has not been defined.
- job_3.job.json if the Job Number has been defined with «3» (example)

The json file can be open on your computer via a word processing software:

```
{
  "jobNumber": "",
  "customerName": "",
  "technicianId": "",
  "contractorId": "",
  "testInformation": "",
  "testLocation": "",
  "subfield": "",
  "logo": "",
  "testPlan": {
    "testType": "Fiber Inspection",
    "referenceInfo": {
      {
        "key": "fiberNumber",
        "value": "1"
      },
      {
        "key": "fiberId",
        "value": "Fiber 1"
      }
    },
    "config": {
      "testType": "Fiber Inspection",
      "profile": "SM AFC (IEC-61300-3-35 Ed. 2.0)",
      "testSelection": "Fiber Inspection",
      "testLabel": ""
    },
  },
  "testType": "OTDR",
  "referenceInfo": {
    {
      "key": "fiberNumber",
      "value": "1"
    },
    {
      "key": "fiberId",
      "value": "Fiber 1"
    }
  },
  "config": {
    "testType": "OTDR",
    "otdrTopology": "Expert-SM",
    "launchCable": "",
    "receiveCable": "",
    "pumpbackCable": "",
    "alarms": "Default",
    "configFile": ""
  },
  "testSelection": "OTDR",
  "testLabel": ""
},
  "testType": "Fiber Inspection",
  "referenceInfo": {
    {
      "key": "fiberNumber",
```

Loading the json file on the Platform Job Manager

- 1 Save the json file on a USB key and connect the USB key to the Platform: see [“Copy/Cut & Paste files/directories” on page 141](#).
- 2 Copy the json file on the Platform, in `disk/job-manager/`.
- 3 On the 4000 Platform, open the Job Manager page.


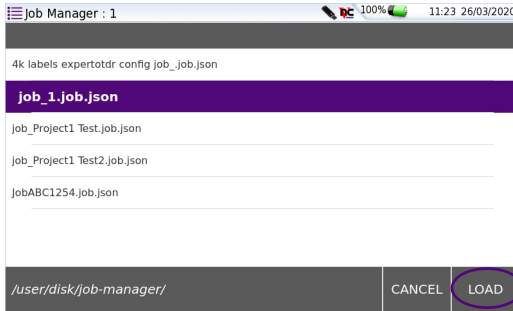
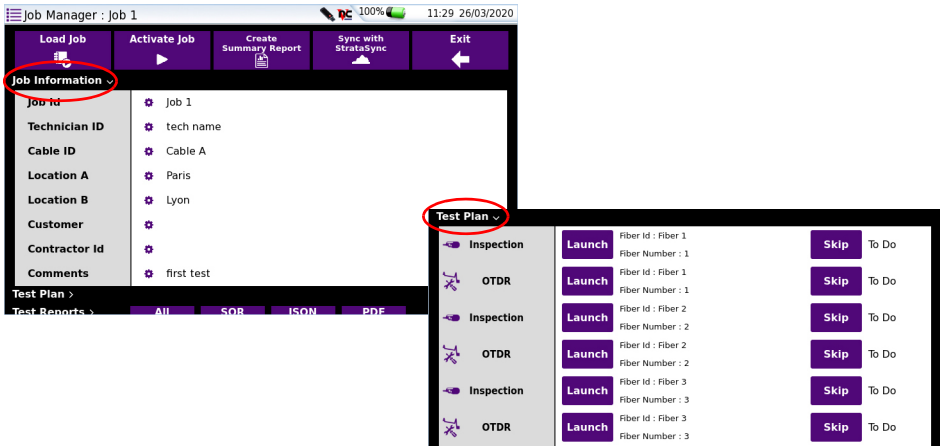
- 4 Click on  **Load Job.**
- 5 Select the json file just saved in disk/job manager (highlighted in purple).
- 6 Click on **LOAD.**

Fig. 90 Loading the json file



Once loaded, the Job information and Test Plan displays.

Fig. 91 Job Information and Test Plan loaded on the Platform



Modifying the Job Information from Platform

The job file can be used as template. It can be created via the Web tool and then modified from the Platform.

The Plan Test is identical and the Job Information can then be modified at each new test, with a new Fiber number., a new cable Id..

Once a job file is loaded, the Job Information can be added/modified on the Platform.


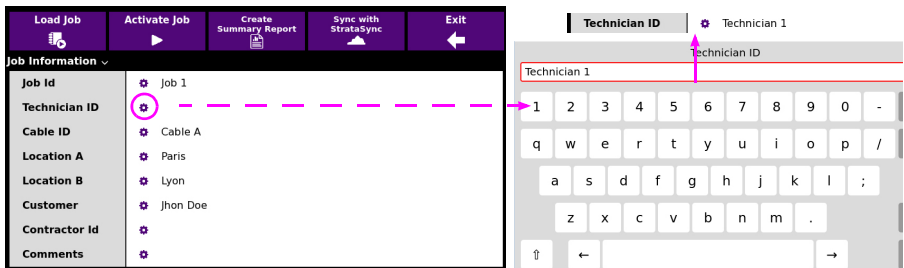
- 1 If the Job is activated, click on **Pause Job** to stop the job in progress. The Job Information window displayed can be configured:
- 2 Click on one defined parameter or on the icon  to modify / add a parameter.
- 3 Enter/Modify the parameter in the edition keypad and press **Enter**.

Fig. 92 Modifying the Job Information



- 4 Press **Pause** key, which turns **Activate**, to re-activate the Job and perform the tests with the new information.






CAUTION

If the Job Information are entered on the Platform, before the json file is loaded, then the information will be lost at the json file loading, replaced by those entered on the Web tool.

The information are deleted if they were not entered in the Web tool.

Performing tests and generating reports

Launching the test from Test Plan

- 1 Once loaded, click on **Activate the Job** . The key turns to **Pause Job** and is displayed in blue . The tests can now be launched.
- 2 Press **Launch** key  on the first test to be started.




NOTE

If a test is launched with the Job deactivated, a pop up message displays: The job is not activated (Test results will not be recorded in the job).

Press **Launch Test Anyway** to start the test without recording it to the job.

Press **Cancel Test** to cancel the test, and activate the job before launching it.

This will give access to the given function interface.

Press **Skip**  on one test to skip the function, this with an optional **Comment** stating why.



NOTE

If a **Comment** is entered, it will be visible in the Summary report generated in pdf from the Job Manager screen: see [“Summary Report” on page 137](#).

Fiber Inspection test

Once the **Launch** key is pressed, the **Scope** function is activated on the **Home** page, then the **Results** page (live image) displays and the scope is configured according to the parameters defined in the json file.

The Test can be launched.

Continuity test

Allows to check if the tests must continue or if a problem occurred.

- 1 Click on **Launch**  on the continuity test.


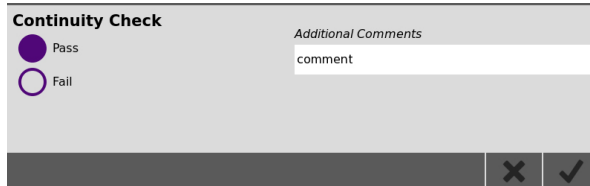

- 2 Select **Pass** or **Fail** in the Continuity dialog box.
- 3 Add a **Comment** if necessary.
- 4 Press  to validate the answer.

Fig. 93 Continuity Check



The dialog box titled "Continuity Check" contains two radio buttons: "Pass" (selected) and "Fail". To the right is a text input field labeled "Additional Comments" with the placeholder text "comment". At the bottom right are two buttons: a close button (X) and a confirm button (checkmark).

Press  to cancel the test.



NOTE

If a **Comment** is entered, it will be visible in the Summary report generated in pdf from the Job Manager screen: see ["Summary Report" on page 137](#).

OTDR test

Once the **Launch** key is pressed, the OTDR function (defined in the json file) is activated on the **Home** page, then the results page displays.

The Test can be launched, pressing **START/STOP** key, and the acquisition is performed according to the parameters defined in the json file.

Once acquisition is completed, a pop up window displays on OTDR results page allowing to return to Job Manager screen (answer **Yes**) or to stay on results page.

Manual Step



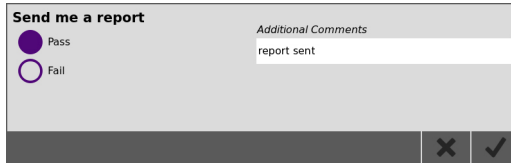
- 1 Click on **Launch**  on the continuity test.
- 2 Select **Pass** or **Fail** in the Manual Step dialog box.
- 3 Add a **Comment** if necessary.
- 4 Press  to validate the answer.

Fig. 94 Manual Step



NOTE




If a **Comment** is entered, it will be visible in the Summary report generated in pdf from the Job Manager screen: see [“Summary Report” on page 137](#).

Tests Results in Job Manager

Once a test is performed, the Test Plan window displays the results with their status

- **Pass** ✓: the test is valid, all results on the otdr acquisition lie within the thresholds.
- **Fail** ✗ the test has failed, at least one result on the otdr acquisition is above the defined thresholds.
- **Completed** the otdr test has been performed, without defined alarm thresholds.
- **Skipped** ||: the test has been skipped. It can be launch later.


Fig. 95 Test Plan results in Job Manager

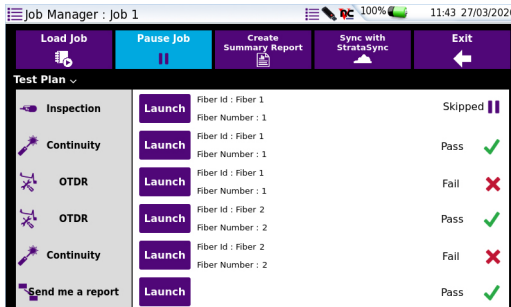

Displaying the Test Reports

Under the test Plan view, the **Test Reports** are displayed.

Fig. 96 Test Reports

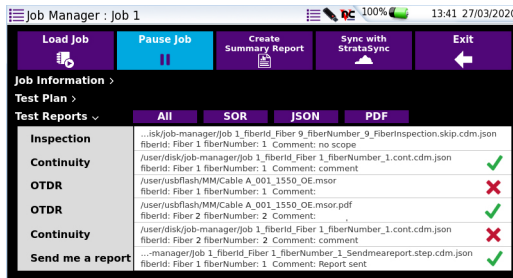

- The OTDR test is generated in sor, and in pdf if a report is configured in Setup.
- The Fiber **Inspection**, **Continuity** and **Manual Step** functions are generated in json format.

Click on the kind of report to be displayed: **All / SOR / JSON / PDF**.

Other functions on Job Manager screen

Summary Report

In the Job Manager screen, click on **Create Summary Report** in order to create a pdf report of all the functions of the Job: Job Information, test Plan and Test Report.

The report is saved in the **job-manager** directory.

The filename is the name of the Job entered in **Job Id** parameter. Example: if the Job Id is `Job1`, the file name is `Job1 .pdf`.

Fig. 97 Summary Report



Summary Report

Job Information		
Customer Name:	Jhon Doe	
Work Order:	Job 1	
Technician ID:	Technician A	
Test Location:	Paris	
Test Plan		
Fiber Inspection	fiberNumber: 1 fiberId: Fiber 1	To Do
Fiber Continuity	fiberNumber: 1 fiberId: Fiber 1	Pass
	Job_1_fiberId_Fiber_1_fiberNumber_1.cont.cdm.json	Pass
OTDR	fiberNumber: 1 fiberId: Fiber 1	Fail
	Cable A_001_1550_OE.msor	Fail
	Cable A_001_1550_OE.msor.pdf	Fail
OTDR	fiberNumber: 1 fiberId: Fiber 1	Pass
	Cable A_001_1550_OE.msor	Pass
	Cable A_001_1550_OE.msor.pdf	Pass
Fiber Continuity	fiberNumber: 2 fiberId: Fiber 2	Fail
	Job_1_fiberId_Fiber_2_fiberNumber_2.cont.cdm.json	Fail
manualStep	fiberNumber: 1 fiberId: Fiber 1	Pass
	Job_1_fiberId_Fiber_1_fiberNumber_1_Sendmeareport.step.cdm.json	Pass

Synchronization with Stratasync



In the Job Manager screen, press the key **Sync with Stratasync** in order to send results to Stratasync, once connection has been established: see ["Stratasync"](#) on page 102.

File management

The files management with the 4000 V2 Platform can be performed, whether a module is set onto the 4000 V2 Platform or not.

The topics discussed in this chapter are as follows:

- [“File Explorer Overview” on page 140](#)
- [“Directories and Files selections” on page 140](#)
- [“Directories & Files editing functions” on page 141](#)
- [“Working with directories / files from the explorer” on page 143](#)
- [“Creating a screenshot” on page 144](#)
- [“Merging pdf or txt files” on page 145](#)
- [“Storage media” on page 146](#)


File Explorer Overview

To reach the File Explorer page

- On the **Home > APPS** page, select the **File Explorer** icon
The File Explorer page appears.



Figure 98 File Explorer page

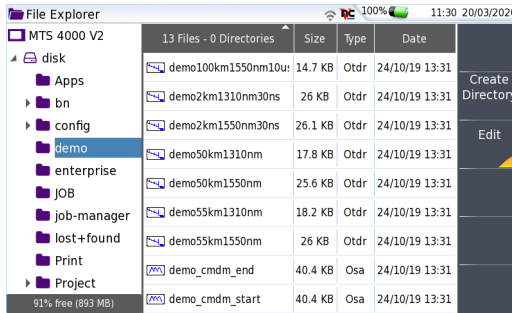

Directories and Files selections

Directory selection

To select a directory from the explorer page:

- Press on the directory that must be selected on the left of the screen.
The list of files the directory contains displays on the right side of the screen
The selected directory is underlined in blue
- Click on the arrow at the left of the directory name, or press **Enter** key to display the sub-directories if any.

Figure 99 Directory selection



Files selection

To select one or several files from the explorer page:


- 1 Press on files that must be selected.
or
To select a list of files using the keys of the Platform:
 - a Select and validate the first file of the list (underlined in red)
 - b Set the cursor on the last file of the list (underlined in blue)
 - c Maintain the right direction key ► pushed until all the files are selected.
- or
Click on **Select all** menu key to select all files into the directory.



NOTE

The last selected file is underlined in red and the previous one(s) selected is/are underlined in blue.

Figure 100 Example of files selection

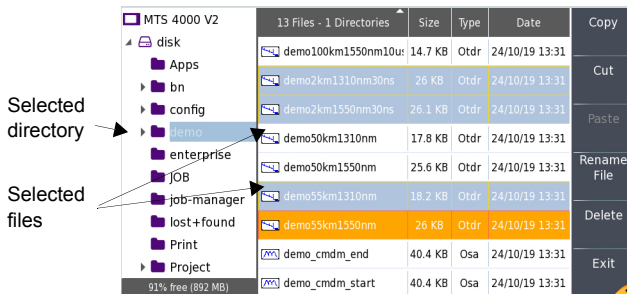

Directories & Files editing functions

Copy/Cut & Paste files/directories

To copy (cut) one or several files, or one directory, and paste them in another place:


- 1 Select the directory / the file(s) (see “Directories and Files selections” on page 140).

- 2 Press **Edit** menu key
- 3 Press **Copy** to keep the directory / file(s) to their initial location.
or
Press **Cut** to delete the directory / file(s) from their initial location
- 4 On the left of the screen, select the directory; or select the new storage media.
- 5 Click on **Paste** menu key.

Renaming a directory / file

- 1 Select the directory / file to be renamed (see “[Directories and Files selections](#)” on page 140).
- 2 Press **Edit > Rename Directory** or **Rename File**.
The Edition keypad displays.

Figure 101 Edition keypad for renaming file

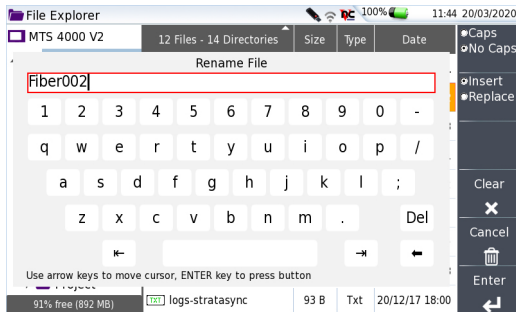

- 3 Press **Clear** if you wish to delete the entire name
- 4 Enter a new name for the directory / file.
- 5 Click on **Enter** to validate the new name.

Deleting a directory / file

- 1 Select the directory or file(s) to be deleted (see “[Directories and Files selections](#)” on page 140).
- 2 Press **Edit > Delete**.
A confirmation dialog box displays.

- 3 Press **Yes** to delete the selected directory or file(s).
Press **No** to cancel the deletion.

Working with directories / files from the explorer

Creating a directory

To create a new directory from the explorer page:

- 1 Check the cursor is set on the left of the screen
- 2 Select the storage media into which the directory must be created
- 3 To create a sub-directory, select the directory into which it must be created.
- 4 Press the right menu key **Create Directory**.
The edition keypad displays
- 5 Enter a name for this directory
- 6 Press **Enter** key to validate the new directory

Opening files




Once a file is selected, press **Load** menu key.









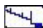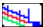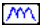


Opening several files at the same time can be done exclusively with trace files (example: all OTDR trace files if a reference trace has been defined). Other type of files (PDF, TXT...) must be open one by one. If different types of files have been selected in the Explorer, only the last one selected will open.

File Types

For files recognized by the 4000 V2 Platform, the types are symbolized by icons. E.g.

Icon	Type of FO file
	OTDR file (.SOR extension)
	Multi OTDR file (.MSOR extension)
	OSA file (.OSA extension)

Icon	Type of FO file
	Power Meter file (.LTS extension)

Icon	Type of file
	HTML file (.HTML extension)
	PDF File (.PDF extension)
	Text file (.TXT extension)
	License file (.LIC extension)
	CSV file (.CSV extension)
	JPEG / JPG file (.JPEG extension)
	PNG file (.PNG extension)
	XML file (.XML extension)



With the 4000 V2 Platform, you can open and load any kind of FO files (OTDR, OSA, LTS) even if the corresponding module is not set into the Platform.



NOTE

You can also sort files clicking on the column titles in the files list


Creating a screenshot

You can create captures of the displayed screen, directly from the 4000 V2 Platform, in a pdf file.

Taking a screenshot

Once the screenshot parameters are configured:

- 1 Reach the display which will be saved as a screenshot in a file.


- 2 If necessary, make modifications on this display (example: zoom on trace...)
- 3 Click on the upper banner of the screen and, in the virtual control buttons bar, press **Export** key
The icon  displays until the end of process.
- 4 Press the **Multi-views** key and select **File** to find the PDF file in the PDF reader.
For trace results, the file is saved in the last directory selected.
For other page open and used for a screenshot, the file is saved in the directory **Print** into the disk.

Name of the screenshots files

The screenshot is saved in a file, which is automatically named as follow:

- *Print_date (year/month/day)_time (hour/minute/second).pdf*

Figure 102 Example of screenshot, open in the PDF Reader of the 4000 V2 Platform

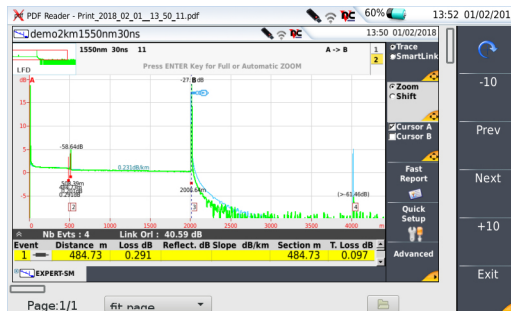


Merging pdf or txt files


In the Explorer page, two pdf or txt files or more, generated via the results traces can be merged in one pdf file.

- The pdf files that can be merged are those generated via the **Fast Report** key on trace results page or via the **Export** key on the upper banner (or left and right arrow keys).
- The txt files that can be merged are those saved with the results trace (see OTDR Modules User Manual: E4100M02).

- 1 In the Explorer, select the two or more pdf or txt files generated
- 2 Press **Export > Merge** menu keys.

Figure 103 Files selection and Merge key

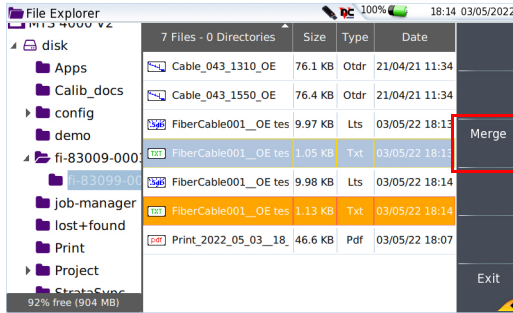

The icon  is displayed during merging process.

After a few seconds, the files are merged in one pdf/txt file, which name by default is: *merged_year_month_date__hour_min_sec.pdf*

The file is automatically saved in the same directory as the one where files have been selected.

It gathers all results from pdf/txt files selected (and traces for pdf file), in one single pdf file of several pages (1 results screen per page, if the results table does not exceed one page).



NOTE

Once merged file is saved, it can be renamed in the Explorer (see [“Renaming a directory / file” on page 142](#)).

Storage media

For saving or recalling data, the 4000 V2 Platform offers a wide choice of media, both built-in and external.

Free space on selected media is clearly displayed at the bottom of the left panel.

Storage media built into the 4000 V2 Platform

The 4000 V2 Platform is delivered with an internal memory, which maximum capacity is of 8GB (with a minimum of about 1 Gb are available for data storage).

External USB storage media


The 4000 V2 Platform is equipped with 2 USB ports as standard. One of these can be used to connect an external storage medium, in particular a USB memory stick.



NOTE

Although two USB ports are present, it is not possible to use simultaneously more than one external USB storage medium.


USB memory stick connection

- 1 Insert the USB memory stick in one of the 4000 V2 Platform's USB port. A sound is emitted to confirm the successful insertion and recognition of a USB memory stick.
Then, the icon  is displayed in the upper banner to inform the user the USB stick is ready to be used.



When a file is moved in the explorer of the Platform, the end of the move on the screen does not mean that writing of data into the memory is complete. Some data may still be in a writing process if the storage unit is removed prematurely.

USB memory stick disconnection

- 1 Before disconnecting the USB memory stick, always select a storage device different from usflash (select disk for example) in the explorer.
- 2 Make sure you no longer have any running applications using the usflash storage media.
- 3 The user must push the **EJECT USB** key, available in **File Explorer**.
The icon becomes  to indicate it can be removed safely. In this state, the USB stick cannot be used anymore

The USB memory stick can then be disconnected from the Platform USB port.



NOTE

The USB memory stick can also be removed using the **Expert Tools > Media Utilities** menu, accessible via the **System Settings** page.

See [Chapter 13 “Maintenance & Troubleshooting”](#) if any problem occurs with the USB memory stick

Abbreviations for storage media

The abbreviations used in the explorer for the different storage media are:

Abbreviation	Storage medium
disk	Internal flash memory
usbflash	USB memory stick
bluetooth-inbox	Bluetooth storage media (option) ^a
cloud-storage	Cloud storage media available on PC
slavedisk	Slavedisk of the Platform connected to this one via M2M Link or Datalink

- a. The files stored in bluetooth-inbox are lost when the Platform is switched off.

Technical specifications

This chapter contains the technical specifications of the 4000 V2 Platform mainframe.

The topics discussed in this chapter are as follows:

- [“Display” on page 150](#)
- [“Memory” on page 150](#)
- [“Input/Output” on page 150](#)
- [“Power supply” on page 151](#)
- [“Dimensions - Weight” on page 152](#)
- [“Environment” on page 153](#)
- [“Characteristics of the options” on page 155](#)

Display

Indoor/Outdoor

- Backlight high visibility color screen
 - Size: 9 inches
 - Resolution: 800 x 480 pixels
- High visibility capacitive touchscreen for indoor and outdoor use.
- Use in altitude up to 4000 m



CAUTION

It is strongly recommended to work on the Platform in its glove when the product is used outdoor, in rainy weather.



CAUTION

AC/DC power supply must be used indoor!

The Platform battery charging must be performed indoor only!

Memory

- Standard memory: internal memory, minimum capacity 8 Gb (with a minimum of about 1 Gb are available for data storage)

Input/Output

- two USB 2.0 Master ports, for scope, memory key, mouse, keyboard etc.
- one RJ 45 connector for Ethernet interface 10/100/1G
- headset (Jack Ø 2.5 mm)

Power supply

Battery

The instrument can be supplied with one Lithium Ion 6 cells (7400 mV) or 9 cells (11100 mV) battery.

Battery charging time

If the battery is completely discharged, the time taken to recharge is:

Conditions of use	Charging time	
	6 cells battery	9 cells battery
The instrument is not in use (Charge indicator solid red)	approximately 3 hours	
The instrument is used during charging (On indicator lit in fix green, Charge indicator lit in solid red)	about 5.5 hours	about 9 hours

Endurance of the 4000 V2 Platform with battery

Measurement conditions:

- at +25 °C,
- at full battery capacity (6.6 Ah),
- 4000 V2 Platform equipped with one OTDR module

Endurance

Conditions of use	Endurance	
	6 cells battery (7400 mV)	9 cells battery (11100 mV)
According to Telcordia GR-196-CORE recommendation: Normal conditons, with normal backlight, 3 acquisition of 30 seconds per quarter of hour, auto off	up to 9 hours	up to 16 hours.

Conditions of use	Endurance	
	6 cells battery (7400 mV)	9 cells battery (11100 mV)
Under continuous acquisition, with high screen backlight	Up to 3h30	Up to 6h00

Mains adapters

	Standard Mains Adapter
Input	100-240 V, 50-60 Hz
Output	15V DC 3.34 A max
Compliance	IEC 62368-1:2018

Supply or Power assigned in AC and in DC: 35 W

Dimensions - Weight

	Weight	
User interface module without options, battery nor module	1.1 kg	2.20 lbs
User interface module with a 6 cells battery, one OTDR LM Module and one dummy module	2.1 kg	4.40 lbs
OTDR LM Module	366 g	0.80 lbs
9 cells battery	490 g	1.08 lbs
6 cells battery	344 g	0.76 lbs
Dummy module	180 g	0.46 lbs
VFL/PWM option	26 g	0.06 lbs

	Dimensions (mm) (H X W X D) Bumpers included	Dimensions (mm) (H X W X D) W/o bumpers
Without module	55.8 x 282 x 153	53.2 x 275 x 129
With 2 modules	92.4 x 282 x 153	85.8 x 275 x 129

Environment

Temperature

• Operating temperature range	-20°C to +50°C (-4°F to +122°F)
• Operation including all options (guaranteed specifications)	0° to +40°C (+32°F to +104°F)
• Storage	-20°C to +60°C (-4°F to +140°F)

IEC 61010-1 Temperature range from 0° to 40°C.

Humidity

- 5 to 95% without condensation

Pollution degree

- Pollution degree: 2

VIAVI recommends that customers dispose of their instruments and peripherals in an environmentally sound manner. Potential methods include reuse of parts or whole products and recycling of products components, and/or materials.

Waste Electrical and electronic Equipment (WEEE) Directive



In the European Union, this label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

EMI/ESD

- CE class A Compliant, according to EN 61326-1: 2013
- FCC 47-1 Part 15 Compliant

Overvoltage

Overvoltage category I

Drop test

In accordance with the Telcordia GR-196-CORE recommendations, the 4000 V2 Platform resists the following test:

- 6 impacts dropped from a height of 0.75 m on a pinwood floor of 5 cm thickness (1 impact on each of its 6 sides, with power off).

Shocks

The 4000 V2 Platform resists the following test:

- 3 shocks per axis along each of the 3 axes, with power off.
- Impacts of 15g, 1/2 sine, duration 11 ms, at 10 second intervals.

Bumps

The 4000 V2 Platform resists the following test:

- 1,000 bumps per axis along each of the 3 axes, with power off.
- Jolts of 15g, 1/2 sine, duration 6 ms, at 1 second intervals.

Vibration

The 4000 V2 Platform resists the following vibration tests:

- Complete test comprising 6 cycles along each of the x, y and z axes.
- One cycle of 5 to 500 Hz and back to 5 Hz with a sweep duration of one minute/octave.
- 3 mm amplitude displacement test, for the range 5 Hz to 22 Hz.
- 3g acceleration test for the range 23 Hz to 500 Hz.

Flammability

The housing of the 4000 V2 Platform (in ABS, type V0) does not propagate fire.

IP Protection Index

Index of the IP protection for the Platform 4000: IP32



NOTE

For a higher classification, contact VIAVI.

Characteristics of the options

Power meter option

Specifications given for 25°C, after 20 minutes stabilization time and after zero setting.

- Wavelength range: 800 to 1650 nm in steps of 1 nm
- Calibrated wavelengths: 850 / 1310 / 1490 / 1550 / 1625 / 1650 nm²
- Accuracy at calibrated wavelengths: ± 0.2 dB (at -30 dBm)
- Input power range : -60 dBm to +10 dBm
- Maximum resolution: 0.01 dB / 0.01nW
- Measurement range: +5 to -50 dBm (-45 dBm from 800 to 1250 nm)
- Linearity within the measurement range: ± 0.2 dB

2. Specifications guaranteed to the calibrated wavelengths, except for 1650 nm

Talkset option

- Dynamic range: typically 32 dB at 25°C with a FC adapter (use a FC/PC connection exclusively).
- Laser, typical wavelength 1625 nm, class 1 (IEC 60825-1:2014 and FDA21 CFR Part 1040.10)

VFL option

- Wavelength: 635 nm or 650 nm
- Length of fiber: up to 5 km
- Class 2 laser (standards IEC 60825-1:2014 and FDA21 CFR Part 1040.10).

WiFi and Bluetooth Options

- WiFi: standard IEEE802.11b/g/n
- Bluetooth Option
 - Bluetooth V4.0
 - Range: up to 10 meters

Options and accessories

This chapter shows the references of the options and accessories of the 4000 V2 Platform.

The topics discussed in this chapter are as follows:

- [“References of options for the 4000 V2 Platform mainframe” on page 158](#)
- [“Reference of Scope” on page 161](#)
- [“References of accessories” on page 161](#)
- [“References of manuals” on page 161](#)
- [“References of result processing software” on page 162](#)

References of options for the 4000 V2 Platform mainframe³

Base Unit references	References
MTS-4000 V2 Platform, with High visibility Touchscreen ^a	EM4000HVT
T-BERD 4000 V2 Platform, with High visibility Touchscreen ^a	ETB4000HVT

a. Delivered with a battery (to be configured) and AC/DC Supply (to be configured)

Power Meter / VFL / Talkset options	References
Optical Power Meter with 2.5 mm UPP connector	E40PM
Talk set option with power meter	E40TSPM
VFL with UPP connector	E40VFL
Optical Power Meter and VFL, with 2.5 mm UPP connectors	E40PMVFL

WiFi/Bluetooth option	Reference
Wifi/Bluetooth Built-in option	E40WIFIBLU2

Battery option	Reference
Additional Li-Ion rechargeable battery	ELIION9C

GPS option	References
USB GPS Receiver	EUSBGPSRECEIVER
GPS License option	EGPS

Mains options	References
Additional standard AC/DC adapter/charger (USA)	E40PWUS
Additional standard AC/DC adapter/charger (UK)	E40PWUK
Additional standard AC/DC adapter/charger (Europe)	E40PWE

3. These options must be ordered together with the instrument.

Mains options	References
Additional standard AC/DC adapter/charger (Australia)	E40PWAU
Additional standard AC/DC adapter/charger (Switzerland)	E40PWCH
Additional standard AC/DC adapter/charger (India/South Africa)	E40PWIN
Additional standard AC/DC adapter/charger (Italy)	E40PWIT
Additional standard AC/DC adapter/charger (Israel)	E40PWIL
Additional standard AC/DC adapter/charger (Japan)	E40PWJP
Additional standard AC/DC adapter/charger (Denmark)	E40PWDK
Cigarette lighter adapter for 4000 V2 Platform	E40Lighter

Job Manager option	Reference
Job Manager option	EJOBMANAGER

Smart Access Anywhere	Reference
Smart Access Anywhere for 4000 V2 Platform -L2: Remote coaching and file transfer for T-BERD/MTS 4000 using Ethernet, WIFI and selected Smartphone (via USB or WIFI)	SAA-L2

SmartFTTA (Software license)	Reference
FTTA-SLM OTDR function for T-BERD/MTS-4000 V2	EFTTASLM

FTTH SLM (Software license)	Reference
FTTH-SLM OTDR option for T-BERD/MTS-4000 V2	EFTTHSLM

Enterprise-SLM (Software license)	Reference
Enterprise-SLM OTDR option for T-BERD/MTS-4000 V2	ENTERPRISESLM

SmartAcq OTDR Option (Software license)	Reference
Smart Acquisition OTDR option for T-BERD/MTS-4000 V2	ESMARTACQ

Chapter 12 Options and accessories

References of options for the 4000 V2 Platform mainframe

Cable-SLM (Software license)	Reference
Cable-SLM OTDR option for T-BERD/MTS-4000 V2	ECABLESLM

Reference of Scope

Scope P5000i	Reference
Digital Videoscope kit including FBP-P5000i probe (USB2.0) in a small soft case, and 7 tips in a box (FC, SC, SC-APC, LC, U25M, U25MA & U12M)	EDFSCOPE5KI

References of accessories

Carrying Cases	References
Soft case for small MTS/T-BERD 4000 V2 modules	E40SMODSCASE1
Hard carrying case for the MTS/T-BERD 4000 V2	EHCASE6
Hard carrying case for two T-BERD/MTS-4000 V2 Platforms	EHCASE4X2
Glove Soft Case for MTS/T-BERD 4000 V2 Platform	E40GLOVE
Wrap-around Soft Case for MTS/T-BERD 4000 V2 Platform	E40SCASE1

Keyboard/Mouse	References
USB mouse	E80mouse
USB QWERTY keyboard	E80keyB

References of manuals

User manual for 4000 V2 Platform	References
Printed User manual for 4000 V2 Platform (French)	E4000V2M01
Printed User manual for 4000 V2 Platform (English)	E4000V2M02
Printed User manual for 4000 V2 Platform (German)	E4000V2M03



NOTE

The User Manuals for MTS/T-BERD 4000 V2 (Platform & Modules) are available in pdf format, into the unit.

The printed versions of the manuals are available on option, in French, English and German.

References of result processing software⁴

fFiber Cable / Fiber Trace	References
Optical Fiber Trace software	EOFS100
Optical Fiber Trace software (5 licences)	EOFS1005L
Optical Fiber Trace software (site licence)	EOFS100SL
Optical Fiber Cable software	EOFS200
Optical Fiber Cable software (5 licences)	EOFS2005L
Optical Fiber Cable software (site licence)	EOFS200SL

4.Free software updates on the Web (but without user manual)

Maintenance & Troubleshooting

This chapter describes how to maintain your unit and identify and correct problems related to the 4000 V2 Platform.

The topics discussed in this chapter are as follows:

- [“Maintenance procedure” on page 164](#)
- [“Recycling Information” on page 179](#)
- [“Troubleshooting” on page 180](#)
- [“General information on warranty” on page 183](#)

Maintenance procedure

Maintenance work on this instrument must only be undertaken by qualified personnel using suitable equipment.

In most cases, it is advisable to contact the nearest VIAVI Service Centre, which will undertake the appropriate troubleshooting and repair work.

The performance and technical complexity of the 4000 V2 Platform class this instrument in a new generation of equipment, for which VIAVI has laid down a maintenance policy based on the principle of standard module replacement.

In implementation of this policy, we have set up powerful card troubleshooting test resources in our factories and a rapid dispatch system operating between our factories and branches.

Only by this procedure can the high quality of the instrument continue to be ensured after repair work. This procedure also has the advantage of reducing repair costs and time.

In the interests of quality and efficiency, we strongly recommend adoption of the following procedure in the event of a fault, before any other steps are taken:

- Verify that the instrument is plugged in.
- Check the connections of any peripheral equipment to the Platform.
- If a fault is detected, or in case of doubt, it is advisable to contact the nearest VIAVI Service Centre, which will undertake the appropriate repair work.

Cleaning

Cleaning plates and housings

The front and rear plates and the housings may become tarnished with handling. To clean them, use only a rag moistened with soapy water.

Never use any product containing acetone, trichlorethylene, benzine or alcohol, as these will attack the printed markings.

Cleaning the screen

To clean the screen, use an antistatic product.

Cleaning the optical cable connector

- Use a non-fluffy type of paper, such as Joseph paper, soaked in isopropyl alcohol.
- Pay particular attention to the polished face of the fiber, rubbing it in a direction perpendicular to the axis of the fiber.

Cleaning the optical connections of the 4000 V2 Platform

- Squirt a highly volatile solvent (such as isopropyl alcohol) into the connector.
- Blow out the connector using a clean dry air supply from an aerosol can fitted with an extension.



NOTE

If your module has a universal connector, unscrew its adaptor to access the ferrule.

Accessing to the 4000 V2 Platform information

On the 4000 V2 Platform, some screens allow to display information on different elements of the equipment.


To display the information on the 4000 V2 Platform

- 1 On the **Home** page, validate **Settings** icon to reach the **System Settings** page.
- 2 On the right menu keys, press **About** to display the presentation screen of the 4000 V2 Platform.

General page

The **General** page is displayed by default, and allows to display the presentation screen, with all the information concerning the software versions, the hardware options and the module installed.

Fig. 104 General page

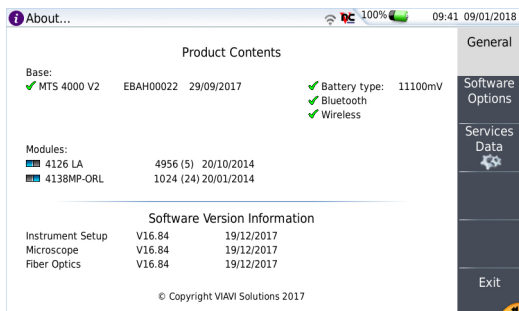

This page shows:

- The software version information
- The product contents: base, optical options, battery type, touchscreen used, module installed and date of calibration for options.


The options set into the 4000 V2 Platform are marked with a green tick.

Software options page

This page allows to visualize the software options available on the 4000 V2 Platform.

- 1 Once on the **About** screen, press **Software Options** menu key to display the list of software options available on your 4000 V2 Platform.

Fig. 105 Software Options page

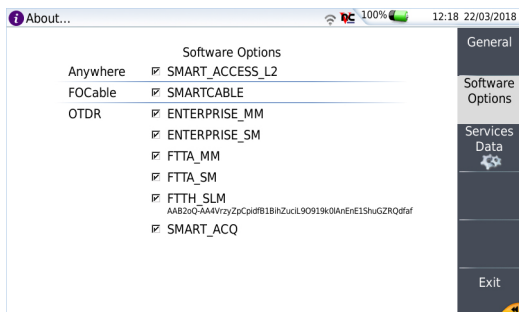


Services Data page

This page allows to display information about the elements inside the 4000 V2 Platform (CPU, Memory, hardware revision, screen reference...).

- 1 Once on the **About** screen, press **Services Data** menu key to display the list of elements contained on your 4000 V2 Platform.

Fig. 106 Services Data page

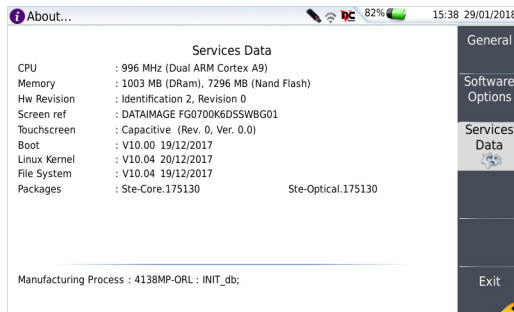

Accessing to the 4000 V2 Platform documentation

All documents necessary for the 4000 V2 Platform use are directly available onto the equipment.

To display the list of documents available for 4000 V2 Platform use:


- 1 Validate the **Help** icon  on the **Home** page.
- 2 In the page, scan the QR Code to access to an online page dedicated to the 4000 V2 Platform documentation User manual, Getting Started Manual, Quick Card...

Fig. 107 Help page



Installing a new version of the software



When a new software version is loaded, there is a risk of re-initialization of the internal memory. Before installing the new software, it is therefore advisable to save the results in the memory, using the **Save** function called up by the **Multi-views > File** button.






Do not interrupt the installation process, as this could damage the instrument.

To avoid any interruption of the installation procedure, the 4000 V2 Platform must be operating on the mains: if the procedure is started while operating on battery, a message indicates that the instrument must be connected to the mains.

Downloading from Internet

When the software is obtained from the Internet, it must be saved on a storage medium before the software upgrade of the product can be carried out. To do this:

- 1 Open Internet Explorer
- 2 VIAVIEnter the internet address <http://www.updatemyunit.net>, which will give access to the installation portals for all T-BERD/MTS from VIAVI.
- 3 Click on the link **T-BERD®/MTS-4000V2 Platform**.

- A new page opens, displaying the current version available
- 4 According to your region, click on the one of the following icon to download the archive.
 -  Download from European server
 -  Download from North American server
 -  Download from Singapore server
 - 5 In the new dialog box displayed, click on **Save** to save the exe file on the PC.
 - 6 Once completed, connect the USB memory stick to the PC and follow the instructions chapter "[Installation from a USB memory stick](#)" on page 171, from [step 2](#).

Installation from VIAVI Server

The update can be performed directly onto the equipment, using the VIAVI server.




- 1 Connect the 4000 V2 Platform to a PC via an Ethernet cable or via WIFI.
- 2 Check on the **Ethernet** or **WIFI** setup page that the connection mode is defined to Automatic (**Home** > **Connectivity** > **Ethernet/WIFI** > **Mode: Dynamic**).
- 3 On the **Home** page, press **Connectivity** icon .
- 4 Press **Upgrade** icon .
- 5 In the **Upgrade Server** box:
 - On the line **Address Type**, select **VIAVI Server**
The address **4kv2.updatemyunit.net** is automatically displayed.
- 6 Select if the new release for 4000 V2 Platform must be automatically detected (**Enable**) or not (**Disable**). See "[Checking new upgrade on VIAVI Server](#)" on page 173.


Fig. 108 Configuration of the VIAVI Server



- 7 Press **Software Upgrade > Upgrade via Ethernet**.
The message `Verify IP address of PC server` appears.
- 8 Click on **Continue**.

The list of the software versions available on the PC is displayed next to the versions installed on the 4000 V2 Platform.

 

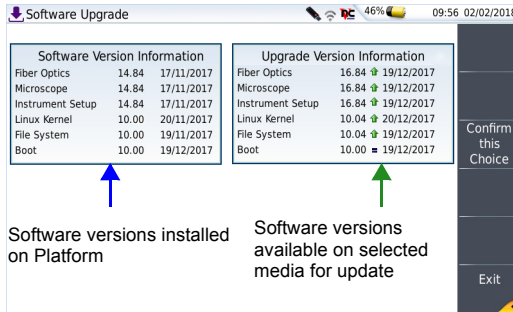Fig. 109 List of software versions (current and new)



Installation from another server

Before starting the software upgrade via Ethernet, make sure the IP address of the PC server.

The update can be performed directly onto the equipment, using an http address.

- 1 Connect the 4000 V2 Platform to a PC via an Ethernet link or via WIFI.
- 2 Check on the **Ethernet** or **WIFI** setup page that the connection mode is defined to Automatic (**Home > Connectivity > Ethernet / WIFI > Mode: Dynamic**).
- 3 On the **Home** page, press **Connectivity** icon .
- 4 Press **Upgrade** icon .
- 5 In the **Upgrade Server** box:
 - On the line **Address Type**, select **Server Name** or **IP Address**.
 - Enter the Server Name (if **Server Name** has been previously selected) or the Server Address (if **IP Address** has been previously selected)
- 6 Press **Software Upgrade > Upgrade via Ethernet**.
The message *Verify IP address of PC server* appears.
- 7 Click on **Continue**.

The list of the software versions available on the PC is displayed next to the versions installed on the 4000 V2 Platform (see [Figure 109 on page 170](#)).

Installation from a USB memory stick

You must be equipped with a USB memory stick with a minimum capacity of 128 Mo.

Before installing the upgrade, you must format the USB memory stick (see [“Formatting the USB memory stick onto the 4000 V2 Platform” on page 181](#)).

- 1 Once formatted, disconnect the USB memory stick from the 4000 V2 Platform using the key **Eject USB** in the **Media Utilities** page.



As for any media formatting, please note that all data present on the USB memory stick will be irremediably lost.


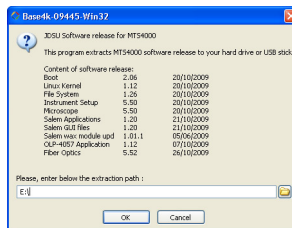
- 2 Connect the USB memory stick to the PC
- 3 Unzip the upgrade files on the PC and transfer it to the USB memory stick:
 - a Download and save on your PC the .exe upgrade file that you can get from the web (see [“Downloading from Internet” on page 168](#)).
 - b Once the transfer is completed, double click on the .exe file: A window will appear. Check that the folder is correct i.e. the USB memory stick driver is appearing in the line at the bottom of the dialog box then press OK. If not, click on the icon  in order to select the right USB drive.

Fig. 110 List of software update





- c Press **OK** and wait for the end of loading.
- 4 Then remove the USB memory stick, using the appropriate procedure, from your PC
 - 5 Insert the memory stick into one of the USB ports on the Platform.



NOTE

A bip is emitted each time the USB memory stick is inserted or removed from the USB port.

- 6 On the **Home** page, press **Connectivity** icon 
- 7 Press **Upgrade** icon 
- 8 Press **Software Upgrade > Upgrade from USB..**
The message *Are you sure?* is displayed
- 9 Click on **Confirm**.
The list of the software versions available on the USB stick is displayed next to the versions installed on the 4000 V2 Platform (see [Figure 109 on page 170](#)).

Launching the upgrade

Whatever is the method selected for upgrade (Server, USB key...) and once the list of the software versions available is displayed next to the versions installed on the 4000 V2 Platform (see [Figure 109 on page 170](#)), follow these instructions to launch the upgrade:

- 1 Click on **Show Prev choice** or **Show Next Choice** to display the previous and next versions available.
- 2 Click on **Confirm this Choice** to start the upgrade of the selected software(s).
or
Click on **Confirm All Choices** to upgrade all versions.



NOTE

The software versions list does not always appear (cf previous versions) as well as the **Previous / Next Choice** buttons and the **Confirm/Continue** key. In this case, the upgrading starts automatically.

Upgrading begins. The 4000 V2 Platform is automatically rebooted. Upgrading takes several minutes. Finally, the 4000 V2 Platform is automatically restarted.



During the upgrade, the Testing indicator is lit in red. Do not push any button or remove the USB memory stick while the indicator is lit. The USB stick can be removed if necessary once the Testing indicator is off.


Checking new upgrade on VIAVI Server

If the VIAVI Server is selected for upgrade (see [Figure 108 on page 169](#)), the parameter **Check new release** can be defined to automatically inform user of a new upgrade available for Platform.

- 1 In the **Connectivity** screen, select **Upgrade** icon.
- 2 Check the **Address Type** is set to **VIAVI Server**.
- 3 Define the parameter **Check new release** to **Enable**.

If the parameter is set to **Enable**, a message displays, at any time, when one update is available on server.

Fig. 111 Checking new release

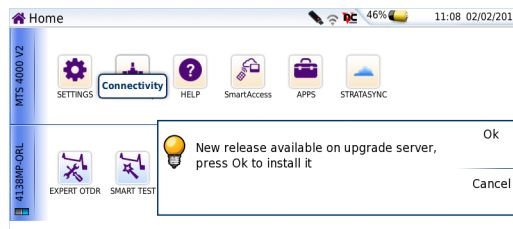

- 4 Press **Ok** to display the list of software versions available (see [Figure 109 on page 170](#)) and follow instructions [“Launching the upgrade” on page 172](#).

Install Software License

This page allows to import the license to get a software option.

Fig. 112 Example of a License file (.lic)

```
# JESU Software Option License file for FTTX PLATFORM
#
# This license file contains your licenses.
#
# Lines starting with #, blank lines, email header lines, and any
# other lines not starting with a JESU keyword are comments that
# licenses reader ignores.
#
# Except as noted, please do not modify lines starting with keywords.
#-----
# This file should be loaded onto your FTTX product in order
# to activate your software options.
#-----
#
# To do so,
# First copy this file onto a USB stick.
# Then, starting from the Home screen (press 'Home' to go to this screen):
#
# Press the following keys:
# 'Expert Tools'
#         -> 'Upgrades'
#         -> 'Install Option'
#         -> 'Import License'
#
# You should then select this file from the File Explorer window and press
# 'Load'.
# followed by 'Confirm'.
#
# The challenge codes contained in this file will then be loaded automatically
# and your
# software options will be installed.
#
# At the end of this sequence you will be asked to reboot the unit.
#
# You may also enter these challenge codes manually, if you wish.
#
#-----
# Validation date : 2008-10-13 16:09:14
# Generation date : October 22, 2008, 14:14:03
# Challenge Codes
# lic id*: *****_*****_*****_*****_*****_*****_*****_*****
FTTXJDSUL *****-ANNVSNMVEEEREHONTIj141ZP4b56dJ5k6eiw4jpw2Z8e6ab
```

License Code

To import the license, you can either enter

- Install the license from VIAVI Server
- import this file with a USB memory stick connected to the 4000 V2 Platform
- Enter manually the license code, given in the license file, (.lic file).




It is strongly recommended to perform the installation using the importation of License via a USB memory stick or the VIAVI Server..

Install options from VIAVI Server

- 1 In the Home page, click on **ADD OPTIONS** icon.
- 2 Click on **Install From Server** softkey.

Fig. 113 Install options from VIAVI Server

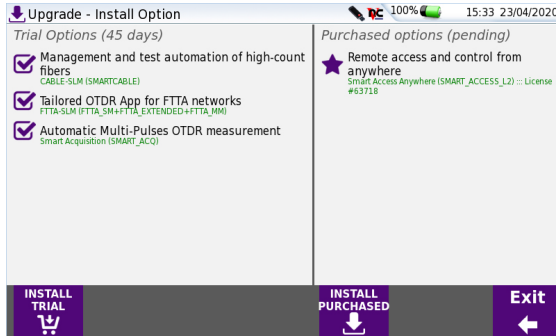


- 3 On the left part of the screen, select or deselect the options to be installed or not for 30 days trial.
- 4 In the right part, are displayed the purchased license(s) and that can be installed onto the Platform.
- 5 Click on **INSTALL TRIAL** to start the installation of the selected options.
- 6 Click on **INSTALL PURCHASED** to start the installation of the license(s) which have been purchased to VIAVI.

To display the list of installed options, from the **Home** page, click on **Settings** icon and press **About > Software Options** softkeys (see [Figure 105 on page 166](#)).

Enter Manually the License

- 1 In the **Home** page, click on **ADD OPTIONS** icon.
- 2 Press **Enter Challenge**
The edition keypad is displayed
- 3 Enter the challenge code of the option, set at the bottom of the file (see [Figure 112 on page 174](#)).

Fig. 114 Enter the License code

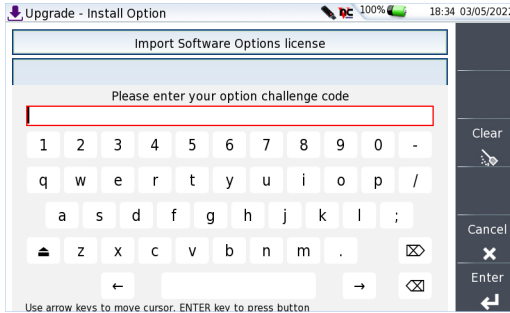

The license file can be opened via a word processing software such as Word...

The challenge code must be entered exactly as it is in the .lic file, paying attention to the lower-case and upper-case letters etc.

- 4 Press the **Enter** key to validate the code
Your software options will be installed
At the end of this sequence you will be asked to reboot the unit to apply the modifications, pushing the **Reboot** key. Confirm the reboot to restart the Platform.

Import the license from the USB memory stick




CAUTION

Any file linked to the license file (.lic) must be saved at the root of the USB key.

- 1 In the **Home** page, click on **ADD OPTIONS** icon
- 2 Press **Import License**.
If the USB memory stick is not already connected to the Platform, a message asking the memory stick insertion is displayed. Confirm it once the stick is connected.
- 3 In the File Explorer, select the USB stick, then the license file (.lic) to be imported,

- 4 Click on **Load**
- 5 The challenge codes contained in this file will then be loaded automatically and your software options will be installed.

Fig. 115 License imported

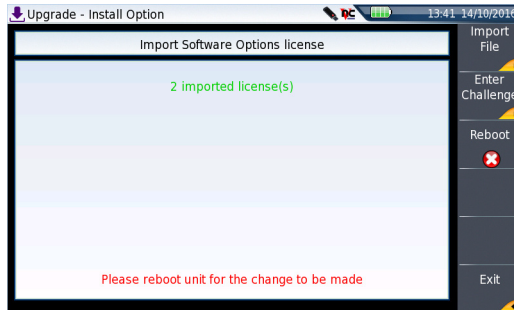


- 6 At the end of this sequence you will be asked to reboot the unit to apply the modifications, pushing the **Reboot** key .
- 7 Confirm the reboot

Locking the 4000 V2 Platform

The 4000 V2 Platform can be locked at any time:


- 1 In the **HOME** page, click on **Settings** icon to open the **System Settings** page.
- 2 Click on **Expert Tools > Instrument Lock**
- 3 Confirm the 4000 V2 Platform locking by clicking on **Confirm** (or use the **Cancel** key to cancel the process).
The numeric keypad is displayed
- 4 Enter the password to lock the instrument: 42000 with the numeric keypad displayed.

Fig. 116 Password

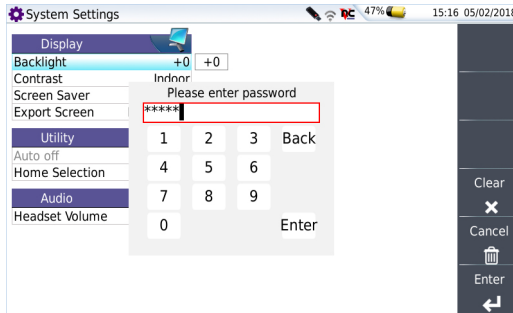

- 5 Click on **Enter**
The 4000 V2 Platform locking screen is displayed.

Fig. 117 Locking screen

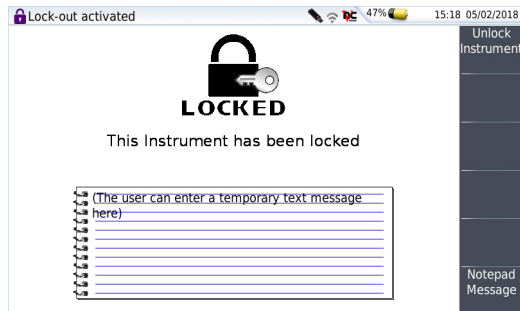

Click on the **Notepad Message** key to add a message using the text edition.

Unlocking the 4000 V2 Platform

- 1 Once the locking screen is displayed, click on the key **Unlock Instrument**.
- 2 Press confirm to confirm the Platform must be unlocked.
- 3 Enter the password **42000** using the numeric keypad displayed and validate.

The screen automatically displays the **HOME** page.

Returning an instrument

When returning an instrument, it is essential to indicate the following minimum information:

- the type and serial number of the instrument (on the identification label) and the configuration code (under the bar code)
- a description of the fault found on the instrument.

 
The returned instrument will then be repaired and calibrated.

Guarantee conditions

Any repair operation supervening within the guarantee period of the instrument will be carried out at the expense of VIAVI. However, for any sub-assembly upon which work has been carried out otherwise than by VIAVI Service Centers, the cost of a replacement sub-assembly will be invoiced.

Recycling Information

VIAVI recommends that customers dispose of their instruments and peripherals in an environmentally sound manner. Potential methods include reuse of parts or whole products and recycling of products components, and/or materials.



Waste Electrical and electronic Equipment (WEEE) Directive


In the European Union, this label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

Troubleshooting

Interpreting alarms

Troubleshooting	Solution
Nothing happens when the ON/OFF key is pressed.	- Make sure that the battery is present or charged; or the mains adapter is properly connected (see “Connecting the mains adapter” on page 16).
Nothing happens on screen, whatever is the action done (menu key or hard key pressed...)	- The Platform must be rebooted. See “Resetting the 4000 V2 Platform” on page 19 .
You are using the 4000 V2 Platform in the ordinary way when it suddenly switches off.	- Check the instrument is not configured to Auto off. See “Defining the Automatic shutdown of the 4000 V2 Platform” on page 24 . - Check the battery charge level. See “Charging the battery” on page 16 .
The battery refuses to charge (the Charge indicator does not go on when the instrument is connected to the mains and is not operating).	- There is no battery in the instrument. - The temperature level of the equipment does not allow the battery charging for safety reasons. Wait the equipment cools down. - The battery needs to be changed. See “Changing the battery” on page 181 .
Error message when USB has been disconnected	- The USB disconnection has not been done properly (see “USB memory stick disconnection” on page 147) - The data transfer was not completed when USB key was disconnected.
No beep is emitted when the USB memory stick is connected	- A previous USB memory stick has not been properly disconnected (see page 147). - The USB memory stick is not detected by the 4000 V2 Platform: use another memory stick, or another storage media.
Error message when upgrade via Ethernet is confirmed	- Check the Server Name is correctly entered (see “Installation from another server” on page 170)
Error message when upgrade via USB key is confirmed	Check the USB key is correctly connected (see “USB memory stick connection” on page 147)
Error message when unlocking the instrument	- The password is not the correct one (see “Locking the 4000 V2 Platform” on page 177).

Formatting the USB memory stick onto the 4000 V2 Platform

If the USB icon  is displayed on the upper banner of the screen, when a USB memory stick is connected to the 4000 V2 Platform, this may mean the memory stick must be formatted.

If the stick needs to be formatted, proceed as follows:

- 1 Insert the memory stick into one of the USB ports on the top of the 4000 V2 Platform.
- 2 Press the **HOME** button
- 3 Validate the **Settings** icon to open the **System Settings** page.
- 4 On the right menu keys, successively select **Expert tools > Media utilities > Usbflash Format**.
- 5 Confirm your choice to actually format the USB memory stick.



As for any media formatting, please note that all data present on the USB memory stick will be irremediably lost.

Erase disk

To delete all the disk contents of the 4000 V2 Platform:

- 1 On the Home page, Press twice the **Settings** icon to open the **System Settings** page
- 2 Press **Expert Tools > Media Utilities**,
- 3 Select **Disk Erase** to delete all the disk contents into the 4000 V2 Platform.
A confirmation must be validated before the deletion.

Changing the battery

If you meet problems during the Platform functioning, or if the battery does not charge anymore when plugged, this may require the battery to be replaced.




CAUTION

Battery is not interchangeable in the field. It must be replaced exclusively for maintenance purpose.

Accessing to the damaged battery

- 1 Switch off the instrument and disconnect the mains supply.
- 2 On the left side of the equipment, loosen the captive screws (a) at both sides using a Philips head screwdriver.
- 3 Remove the battery door, pulling with the help of the screws
- 4 Pull the battery to disconnect it from the base, taking care not to damage the connector into which it is plugged.

Figure 118 Battery seatings

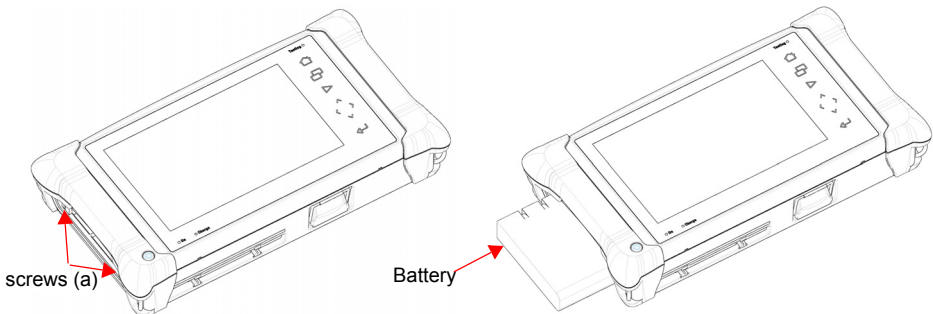

Date and Time parameters will be lost when battery is disconnected.

Installing a new battery

- 1 Switch off the instrument and disconnect the mains supply.
- 2 On the left side of the equipment, loosen the captive screws (a) at both sides using a Philips head screwdriver.
- 3 Remove the battery door, pulling with the help of the screws.

- 4 Push the battery to connect it to the base, taking care not to damage the connector into which it is plugged.
- 5 Set back the battery door and tighten the captive screws at both sides.



When putting a battery back into its seating, make sure that its connector engages correctly with the one of the base and that the door is correctly closed.

Contact VIAVI local Sales Service to get a new battery.



Do not use any battery other than the one supplied with the instrument, or supplied by VIAVI.

General information on warranty

The warranties described herein shall apply to all commercially available VIAVI products. Any additional or different warranties shall apply only if agreed to by VIAVI in writing. These warranties are not transferable without the express written consent of VIAVI.

Hardware Warranty

VIAVI warrants that Hardware Product sold to customer shall, under normal use and service, be free from defects in materials and workmanship. Information regarding the specific warranty period for this product can be obtained by contacting your local VIAVI Customer Service Representative, or at our web site www.viavisolutions.com. If installation services have been ordered, the warranty period shall begin on the earlier of (1) completion of installation, or (2) thirty (30) days after shipment to customer. If Installation Services have not been ordered, the warranty period shall begin upon shipment to Customer. Hereafter these periods of time shall be collectively referred to as the Initial Warranty Period.

VIAVI's obligation and customer's sole remedy under this Hardware Warranty is limited to the repair or replacement, at VIAVI's option, of the defective product. VIAVI shall have no obligation to remedy any such defect if it can be shown: (a) that the Product was altered, repaired, or reworked by any party other than VIAVI without VIAVI's written consent; (b) that such defects were the result of customer's improper storage, mishandling, abuse, or misuse of Product; (c) that such defects were the result of customer's use of Product in conjunction with equipment electronically or mechanically incompatible

or of an inferior quality; or (d) that the defect was the result of damage by fire, explosion, power failure, or any act of nature.

VIAVI performed repairs shall be warranted from defective material and workmanship for a period of ninety (90) days, or until the end of the Initial Warranty Period, whichever is longer. Risk of loss or damage to Product returned to VIAVI for repair or replacement shall be borne by customer until delivery to VIAVI.

Upon delivery of such product, VIAVI shall assume the risk of loss or damage until that time that the product being repaired or replaced is returned and delivered to customer. Customer shall pay all transportation costs for equipment or software shipped to VIAVI for repair or replacement. VIAVI shall pay all transportation costs associated with returning repaired or replaced product to customer.

Warranty disclaimer

For hardware and/or services furnished by VIAVI, the foregoing warranties are in lieu of all other warranties and conditions, express or implied. VIAVI specifically disclaims all other warranties, either express or implied, on any hardware, documentation or services including but not limited to warranties relating to quality, performance, noninfringement, merchantability or fitness for a particular purpose, as well as those arising from any course of dealing, usage or trade practice. Under no circumstances will VIAVI be liable for any indirect or consequential damages related to breach of this warranty.

Index

A

- About page [165](#)
- Accessories [157](#)
- Adapter
 - references [158](#)
 - specifications [152](#)
 - use [18](#)
- Application
 - calculator [112](#)

B

- Battery
 - charge level display [17](#)
 - charging [17](#)
 - charging time [17](#)
 - reference [158](#)
 - safety instructions [2](#)
 - specifications [151](#)
- Bluetooth
 - pairing [67](#)
 - remove pairing [69](#)
 - search devices [68](#)
 - specifications [156](#)

C

- Calculator [112](#)
- Carrying case
 - reference [161](#)

- Cleaning
 - optical connectors [3](#)
 - plates, housings and screen [164](#)
- Connectors
 - cleaning [165](#)
- CSV file [144](#)

E

- Environment [153](#)

F

- File
 - storage media [146](#)
- File explorer [113](#)
- File Transfer
 - Bluetooth [95](#)
 - WIFI [96](#)

G

- Ghost [30](#), [53](#)
- Glove [15](#)
- Guarantee conditions [179](#)

H

- HTML file [144](#)

I

Indicators [9](#)

J

JPG,JPEG file [144](#)

K

Keyboard & Mouse
reference [161](#)

L

Laser [3](#)
License
enter manually [175](#)
import from USB [176](#)
License file [144](#), [174](#)

M

Mains adapter
connection [16](#)
Memory
capacity [150](#)
Module
fitting and removing [14](#)
MSOR file [143](#)

O

Optical connectors
precautions [3](#)
OSA file [143](#)
OTDR
Results parameters [30](#)
OTDR file [143](#)

P

PDF File [144](#)
PDF viewer [110](#)
Platform
dimensions [153](#)
indicators [9](#)
locking [177](#)
reset [19](#)
switching off [18](#)
switching on [18](#)
troubleshooting [180](#)
weight [152](#)
Power meter
Alarms [28](#)
Attenuator [27](#)
Configuration [26](#)
connection [26](#)
Measurement process [35](#)
reference [158](#)
specifications [155](#)
Zero value [35](#)
Power Meter file [144](#)
Processing software
reference [162](#)

R

Reset Platform [19](#)

S

Scope
comment [62](#)
load picture [62](#)
mosaic [60](#)
report display [63](#)
Screen
specifications [150](#)
Services data [167](#)
Side by side [36](#)
Software update
via Ethernet [169](#)
via Internet [168](#)

via USB [171](#)
Specifications [149](#)
Storage media [146](#)
 abbreviations [148](#)

T

Talkset
 remote screen [43](#), [94](#)
Text Editor [111](#)
Text file [144](#)
Transfer interface
 ethernet Mode [74](#)
 proxy config. [75](#)

U

Units [30](#)
Unpacking the instrument [6](#)
USB
 connection [147](#)
 disconnection [147](#)

upgrade via [171](#)
User manual
 reference [161](#)

V

VFL
 connection [26](#)
 emission of light [39](#)
 function [39](#)
 reference [158](#)
 specifications [156](#)

W

WIFI
 configuration [71](#)
 standard [156](#)

X

XML file [144](#)



E4000V2M02/UM/10-22/AE
Rev. 004
English

VIAVI Solutions

North America:	1.844.GO VIAVI / 1.844.468.4284
Latin America	+52 55 5543 6644
EMEA	+49 7121 862273
APAC	+1 512 201 6534
All Other Regions:	viavisolutions.com/contacts
email	TAC@viavisolutions.com